



Emergency Brake Lining Sizes

Year	D.O.	Size W x Th x Length	No Pcs	Cat No	Type
MACK TRUCK & BUS - CONT.					
B813 & 8136SX, C-75F, 85 & F, 95 & 505F, F Series, LRX, LYSW, M-15X, 18X, 25X, 30X & 45SX; 60-63, B46T, B613T, B733S; 1959-63, B46T, B67ST, B72 Series, B77S, B83ST & T, B673ST & T, B833ST & T; 1956-63, B613 Series, B733 Series B833, 853 & B73SX; 1956-63, B75LS & S, B753 Series, B813X; 1955-63, B61LT; 1953-63, B61ST & T; 1962, B673LST & ST, B833SX, B873SX, G773LST, H68P, H69-S, ST & T, H673LST, H681T, H696ST & T, H813SX, N85F; 61-60, B43B, B70LST, B75LST, B77T, B83S & X, B85 & 87ST, B613B, B733-LST, LT & T, N613ST, 1961-59, B69LT, B77L, B673-LT, B693LT, C97D, G73 & 75LST & LT, G733 LST & LT, H67T & ST & T, LRSW, LRVSW, LRVXT, LVX, N42S, N44AP, N60 & L & R, N60 & 61S, 1958-61, N42P & T, N69T, N61LT & T, N613LT & T; 1961-57, B753LT; 1956-61, B63SX, B72LS, B73-LS & LST & T, B80 & 81SX & X, B83 & 85 & 87SX, C41, 1959-58, N60LT & P; 1956-59, B613X; 1959-55, C47, LRX; 1959-53, B60LT & T; 1958-57, B64LT & T, B77LST & ST & T; 1956-58, 65T, B653LT & T; 1958-55, B65LT; 1957-56, B633SX, H62LT & ST, H63LT & ST & T, 1954-57, B70T, 1957-53, B60 & 61ST; 1956, B43BD, B60P & X, B61P, B62SX; B64LT & T, B70P, B71S, B613P, B713ST, C47, H62T, H64LT & T, H65LT & ST & T, H628SX, H633 & 653LT & T; 1956-55, B33S & X, C49, W71T; 56-54, B70ST, B71ST & T; 1956-53, B60 & 61T, H61ST & T, W71ST; 1955, LTHSW, 1952-55, A54S & T, A55T, LISWX, LMSWL, 1955-53, A61T, B41S & X, LTLT; 1954-53, C45 & 47A, H60ST & T, LTL.....12	5x1/4x13-7/8	2	2033	Internal	
B42S, B421 & 422S, MB401 & 410P & T; 1963-62, B42X, B421S, B4226SX; 1963-61, B422 Series; 1959-63, B426SX; 1963-53, B30P, T & X; 1963-62, 1958-57, D42P & T; 1963, 1956-57, D42S; 1962, B424X, B428S, N68T; N422-P, S & T; 1960-61, B75F; 1961-59, B473S; 1961-58, C75F, 85, 95, 125, 1956-61, B30B, B31P, B44T, 421S, B505F; 1961-55, B75F & 85F & 95F & 125F; 1961-53, B34B; 1959-58, C50S; 1959-53, B20P; 1959-58, B426S; 1958-57, B21F; 1958-55, B421T; 1958, B421SX; 1958-57, D30P, D44AP, H62-LT & ST, H63-LT & ST & T; 1957-56, B425X, D20P; 1956, BP & 33P & 35B, B42LT, B44LT, B421P; 1955, 405F, 505F, 1955-53, B30S, B50T; 1954-53, A30B, A31H, B41S & X, B425T, B75, B40S & 50S, 475A; 1954-52, A30H, A40H & S & T & X, A50H & S & T & X, A51H & S & T & X, A52U, 19L, 85L, 95L, 125L, 45A, 75A, 405A, 505A10	3x1/4x14-3/4	2	6038	Internal	
MB401 & 410P & T10-1/2	3x5/16				S w/R L
1959-61, B85F (aerials), B753LT & S, B813SX; 1961-57, B773LS & S, B813X, C47 & 49; 1959, B21F; 1957-58, B753LS & LST & T, B773LST & LT & T, H62LT & ST & T, H63LT & ST & T, H64 & 65LT, H633LT & ST & T, H653LT, B85; 1958-55, LVX; 1958-52, LRVSW; 1957-52, LRSW; 1956, B75F & 95F & 125F & 405F; 1956-55, B85F; 1954-52, 85L; 1954, LR; 1954, LV; 1953, C37D, LH16	3x1/4x90° ...	4	S-557	Tru-Stop	