

FRONT AXLE

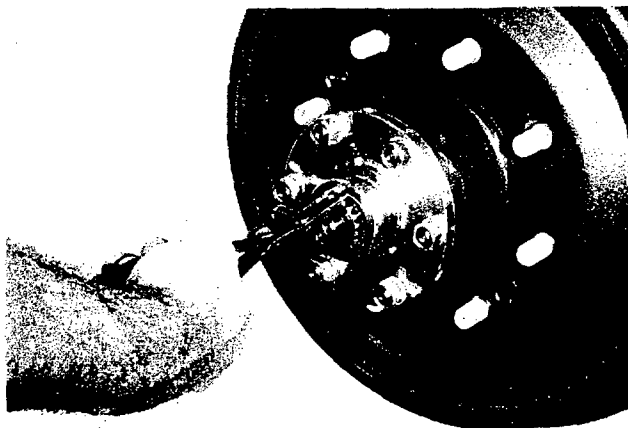


Figure 54

1009-54

Remove snap ring.

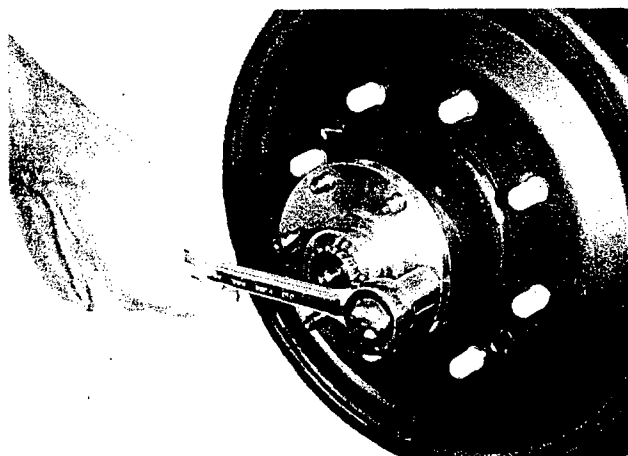


Figure 55

1009-55

Remove six flange nuts and lockwashers.

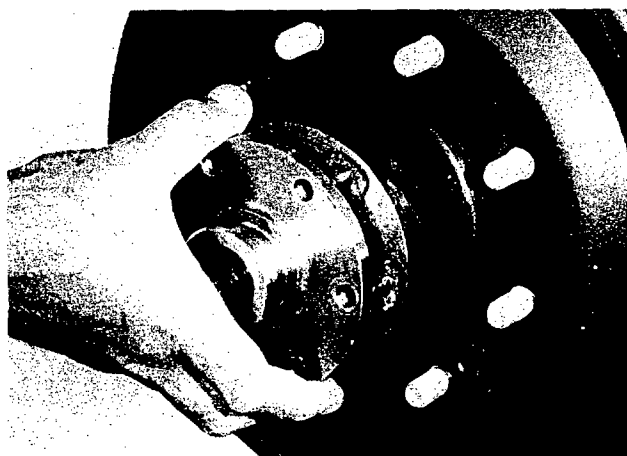


Figure 56

1009-56

Remove drive flange and gasket. Discard gasket. To free flange from hub, tap lightly with a rawhide hammer. Replace new gasket at time of assembly.

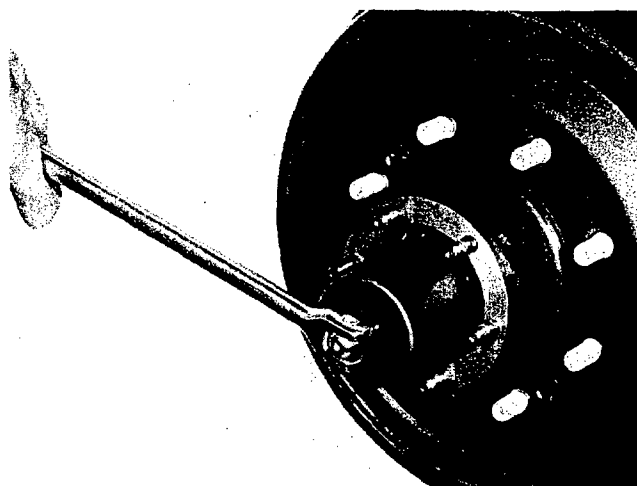


Figure 57

1009-57

Remove outer lock nut, lock ring, and wheel bearing adjusting nut.



Figure 58

1009-58

Remove drum assembly. Outer wheel bearing will slide out as drum is removed.

NOTE

If it is necessary to replace brake components such as drum, shoes, backing plate, etc., refer to Vehicle Service Manual.