



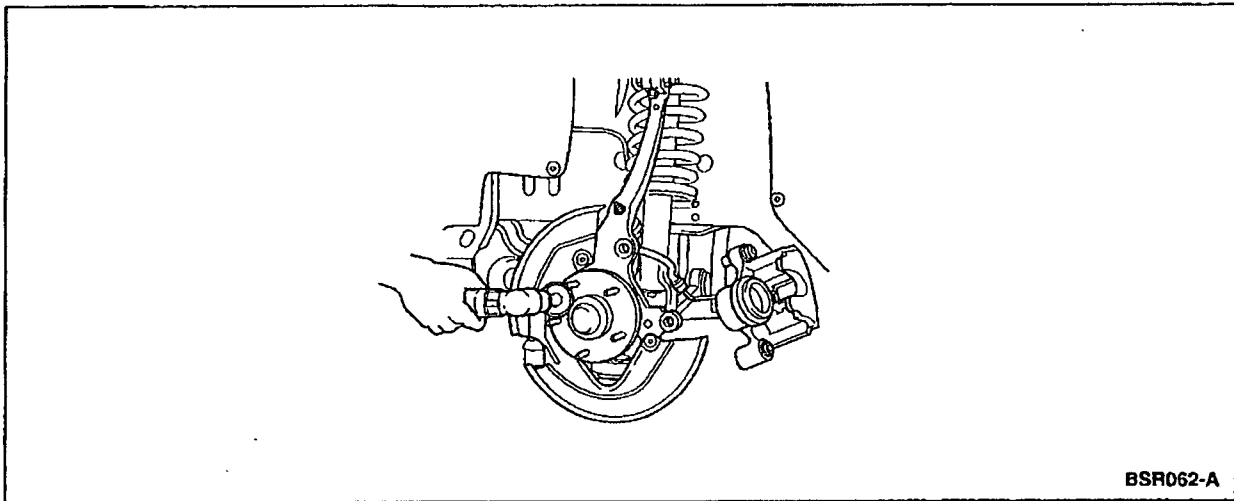

Cleaning the Hub

6. Clean any corrosion from the hub using a die grinder with a Scotch Brite® surface conditioning disc.
 - Does not apply to vehicles with one-piece rotor assemblies.

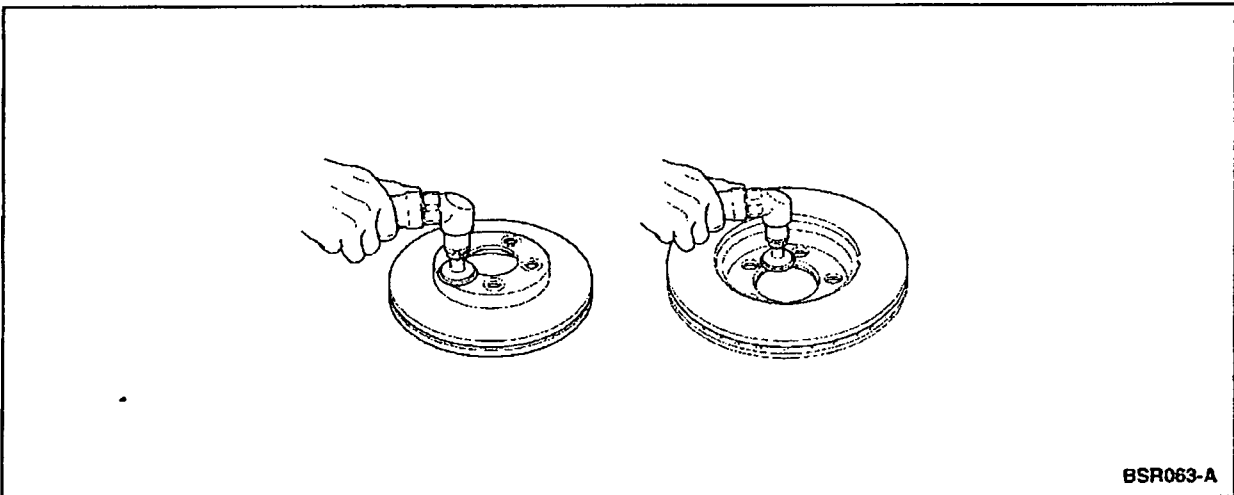

Cleaning the Rotor

7. Clean any corrosion from the rotor mounting surfaces using a die grinder with a Scotch Brite® surface conditioning disc.
 - Rotor-to-hub surface (does not apply to vehicles with one-piece assemblies).
 - Rotor-to-wheel surface.
 - Do not use equipment that will remove metal from mounting surfaces.
8. Reinstall the rotor on the vehicle.
 - Use the marks on rotor and wheel stud to maintain match mounting.