


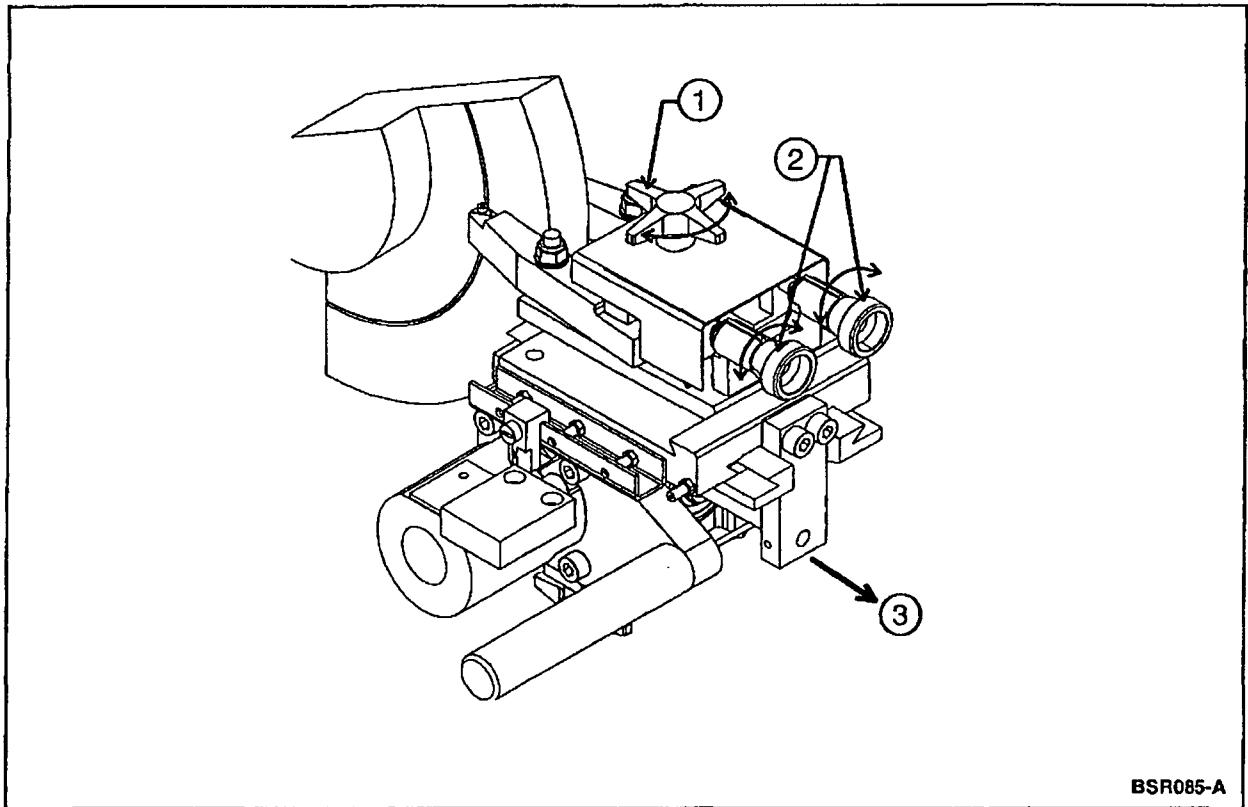

BSR085-A

Lathe Lock Knob and Adjustment Dials

Item	Description	Item	Description
1	Lock Knob	3	Auto Feed Direction
2	Adjustment Dials		

19. Loosen the lock knob on the top of the cutting head.
20. Turn the adjustment dials counterclockwise until the bits clear both sides of the rotor.
21. Crank the cutting head to the middle of the rotor braking surface.