

Thermostatic traps are generally used for draining radiators and heaters, except for very large capacities where bucket, float or blast-type thermostatic traps are used. Thermostatic traps for this service usually pass both condensate and air and in the case of float and upright bucket traps the air is usually relieved through an auxiliary thermostatic trap in a by-pass around the main trap. Sometimes this auxiliary air trap is an integral part of the trap. Such traps are termed float and thermostatic traps.

Blast-type thermostatic traps are sometimes used on vacuum heating systems for connecting old one- or two-pipe gravity systems in parallel with vacuum return line systems, in which case the blast-type thermostatic traps should not be provided with auxiliary air by-pass, as the action of this will allow the vacuum to draw air into the old system through its air valves, especially when the steam is wholly or partially cut off. The air from the returns of such old systems should be relieved just ahead of the traps by means of quick-venting automatic air valves,

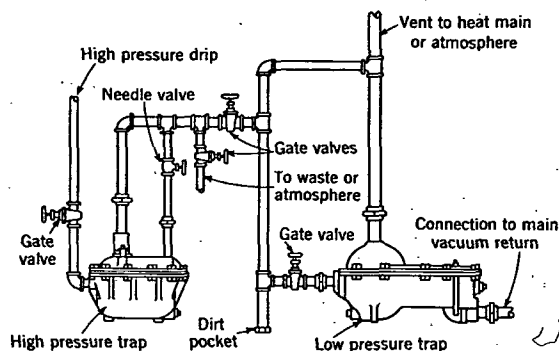


FIG. 21. METHOD OF DISCHARGING HIGH-PRESSURE APPARATUS INTO LOW-PRESSURE HEATING MAINS AND VACUUM RETURN MAINS THROUGH A LOW-PRESSURE TRAP

preferably of the non-return type, especially if the other air valves on the old system are non-return valves.

Tilting traps used for discharging to a higher or a lower pressure are provided with two or three valves operated by the action of the trap. In the case of the two-valve tilting traps, one valve closes a steam inlet and the other valve opens a vent outlet while the trap is filling, and as soon as the trap dumps, the first valve opens the steam inlet and the second valve closes the vent outlet, while the trap discharges. In this type of trap there must be a swinging check-valve on each side of the trap, in addition to the usual by-pass, to prevent the pressure in the trap, while discharging, from backing up through the inlet and the pressure in the discharge line from backing up into the trap while it is filling. This type of trap will blow steam out through the vent while filling, if the pressure on the inlet side is sufficient, and should not be used, therefore, with such pressures unless the vent is properly piped back into the return to a feed water heater, a condenser or a perforated pipe in the bottom

of the receiver to which the trap discharges in such a way as to prevent the escape of the steam that comes in with the condensate and passes through the vent. In the three-valve traps of this type there is an extra

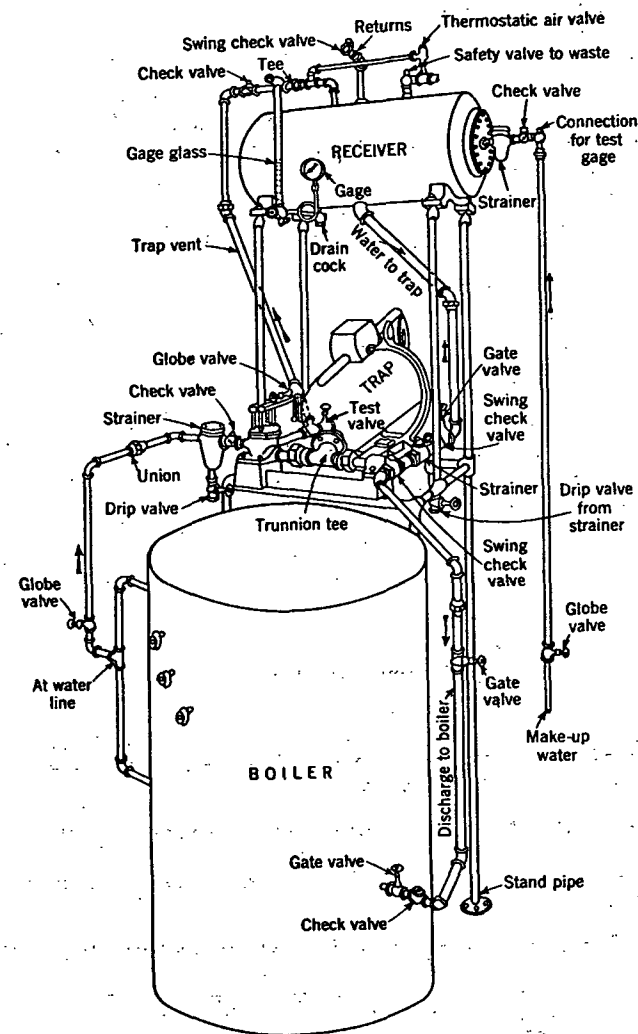


FIG. 22. RETURN TRAP AND RECEIVER FOR AUTOMATIC BOILER FEED

valve for closing the discharge while the trap is filling with condensate. High pressure traps should not discharge directly into a vacuum return because of the vapor formed by the re-evaporation of a part of the hot