

exposed to freezing temperatures in winter if the apparatus is used on winter humidifying duty. Access doors should be provided for servicing filters, humidifying nozzles, and fan bearings and for cleaning the coils. With certain designs of coils when used for dehumidifying, eliminators must be used beyond the coil to catch any water which may be blown into the air stream. It is customary to include these eliminators when the air velocity exceeds about 450 fpm with the individual fins and about 600 fpm for the continuous flat fin type. Where a number of coil sections are stacked one upon another, and where the velocities are low, so that eliminators need not be used, occasional trouble results when water splashes down from one coil to the next and blows out into the air stream. In such cases drip troughs as shown in Fig. 14 are used to collect this water and conduct it to the condensate pan.

Sometimes finned surface coils on summer cooling and dehumidifying

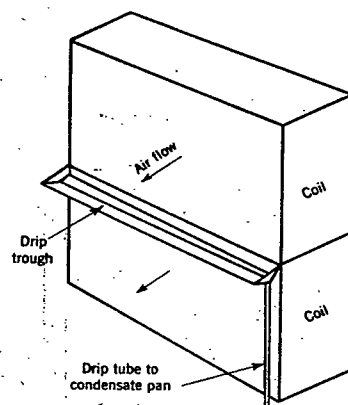


FIG. 14. COIL ARRANGED WITH DRIP TROUGH

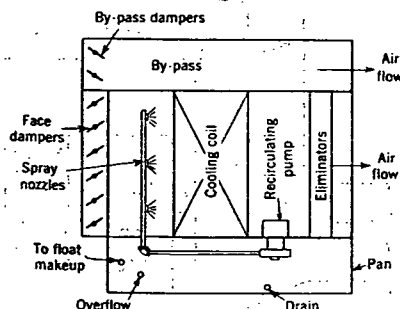


FIG. 15. RECIRCULATING SPRAY SYSTEM FOR CLEANING COILS

duty are provided with water sprays. These sprays are of two types. In the first type a set of spray nozzles is arranged for intermittent cleaning. These sprays are not operative when the system is in use and no recirculating pump is provided. The second arrangement requires a collecting tank and a recirculating pump. The water is in circulation whenever the apparatus is in operation, and assists in keeping the coil clean and in absorbing odors. Fig. 15 illustrates such an arrangement. Wherever air by-passes are used around a coil on summer duty for control purposes, it is advantageous to direct only return air through the by-pass rather than a mixture of return and outside air. The casing should be arranged accordingly. To maintain the air quantity handled by the fan reasonably constant, and to assure the required design quantity of by-passed air when the by-pass damper is open, cooling coil banks are frequently furnished with both face and by-pass dampers as shown in Fig. 13.

Although both heating and cooling coils are made of sufficient strength to take up expansion and contraction arising within themselves, care should be taken to avoid imposing strains from the piping on to the coil connections. (See Chapter 23.)

HEAT TRANSFER AND AIR FLOW RESISTANCE

The transfer of heat between the heating or cooling medium and the air stream is influenced by several variables:

1. The temperature difference.
2. The design and surface arrangement of the coil.
3. The velocity and character of the air stream.
4. The velocity and character of the medium in the tubes.

The driving force is usually taken as the logarithmic mean temperature difference for heating or cooling without dehumidification. For combined cooling and dehumidification, the logarithmic difference does not apply strictly and such problems should be handled as described in Chapter 7. With volatile refrigerants there is often an appreciable pressure drop and corresponding change in evaporating temperature through the refrigerant circuit. The problem is further complicated by the fact that the refrigerant is evaporating in part of the circuit and superheating in the remainder. In spite of this, heat transfer and ratings for coils using volatile refrigerants are usually based on a refrigerant temperature corresponding to the average pressure in the coil.

The design and surface arrangement of the coil include such items as materials, type, thickness, height and spacing of the fins, and the ratio of this surface to that of the tube, the use of the staggered or in-line tube arrangement, and provisions to increase the air turbulence such as the use of corrugated as against flat fins. Staggered tubes increase the total heat transfer as against the in-line arrangement and corrugated fins may be more effective than flat. This design and surface arrangement has a large effect on the air film heat transfer resistance.

The velocity of the air usually considered is the coil face velocity. This bears a *varied relation to the actual velocity* over the surface, depending upon the individual coil design. As long as a fixed design of coil is under consideration face velocities may be used, but they may be unsatisfactory in comparing different designs, as it is the *actual surface velocity that is significant*. The air volume is often based on standard air at 70 F and a barometric pressure of 29.92 in. Hg. The use of air volume in coil rating information may be misleading. *The significant value is mass velocity in pounds per (minute) (square foot of face area) and not cubic feet per minute*, because for a fixed volume the corresponding weight may vary widely, depending upon the temperature and barometric pressure.

At the same mass air velocity, varying performance can be obtained depending upon the turbulence of the air flow into the coil and upon the uniformity of distribution of air over the coil face. The latter is very important in obtaining reliable test ratings and in realizing rated performance in practical installations. The resistance through the coils will assist in distributing the air properly, but where the inlet duct connections are brought in at sharp angles to the coil face, the effect is frequently bad and there may even be reverse air currents through the coils. This reduces the capacity, but can be avoided by proper layout or by the use of directing baffles.

Heat transfer depends also upon the velocity of the medium in the tubes and upon its character, whether flowing water, condensing steam or evaporating volatile refrigerant. Heat transfer rates expressed as Btu per (square foot of internal surface) (degree logarithmic mean effective temperature difference between the fluid and tube wall) are, for example: