

REMOVAL AND INSTALLATION (Continued)

4. Using the special tool, measure the brake drum inside diameter.
 - Install a new brake drum if the maximum inside diameter exceeds the specification molded into the brake drum.

5. **NOTE:** If adjusting the rear brakes, refer to Brake Shoe Adjustment — Drums Removed in this section.

To install, reverse the removal procedure.

