


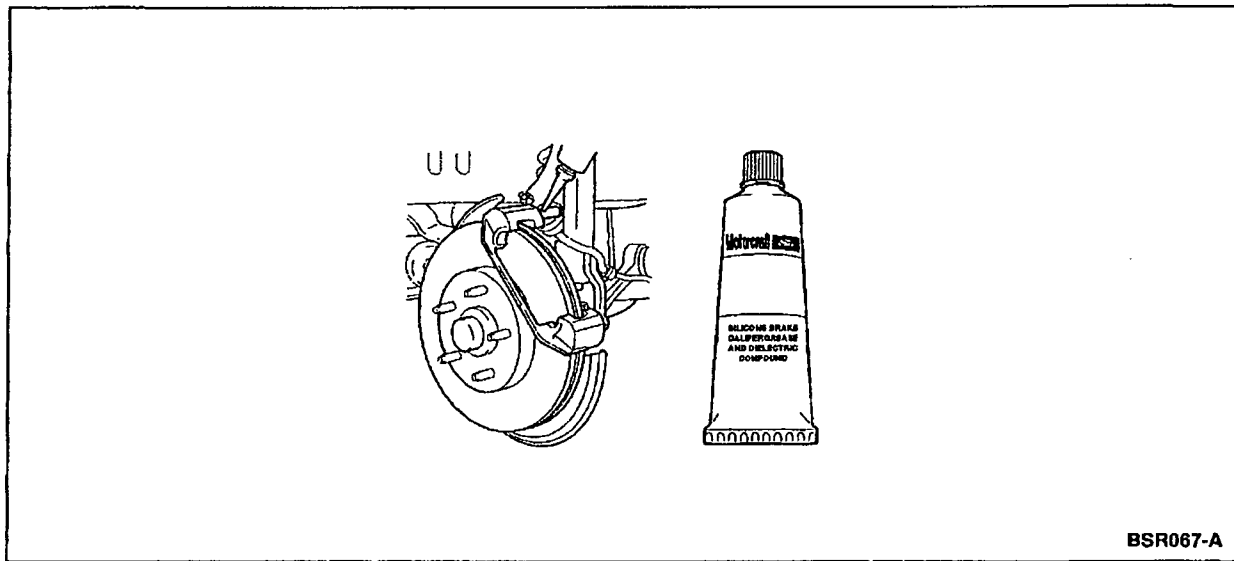

BSR067-A

Lubricate Slide Pins Using Silicone Brake Caliper Grease (XG-3-A)**12. Inspect the caliper slide pins:**

- Corrosion.
- Verify slide pins and boots are not damaged.
- Lubricate slide pins using Silicone Brake Caliper Grease (XG-3-A).
 - Do not lubricate sealed pins that are factory pre-lubed.

13. Inspect brake pads

- OEM pads only.
 - Superior performance to non-OEM parts
- Measure pad material thickness with depth gauge.
- Replace pads if thickness is below workshop manual specification.
- Inspect for abnormal wear or damage to friction material.
- Missing noise insulators.