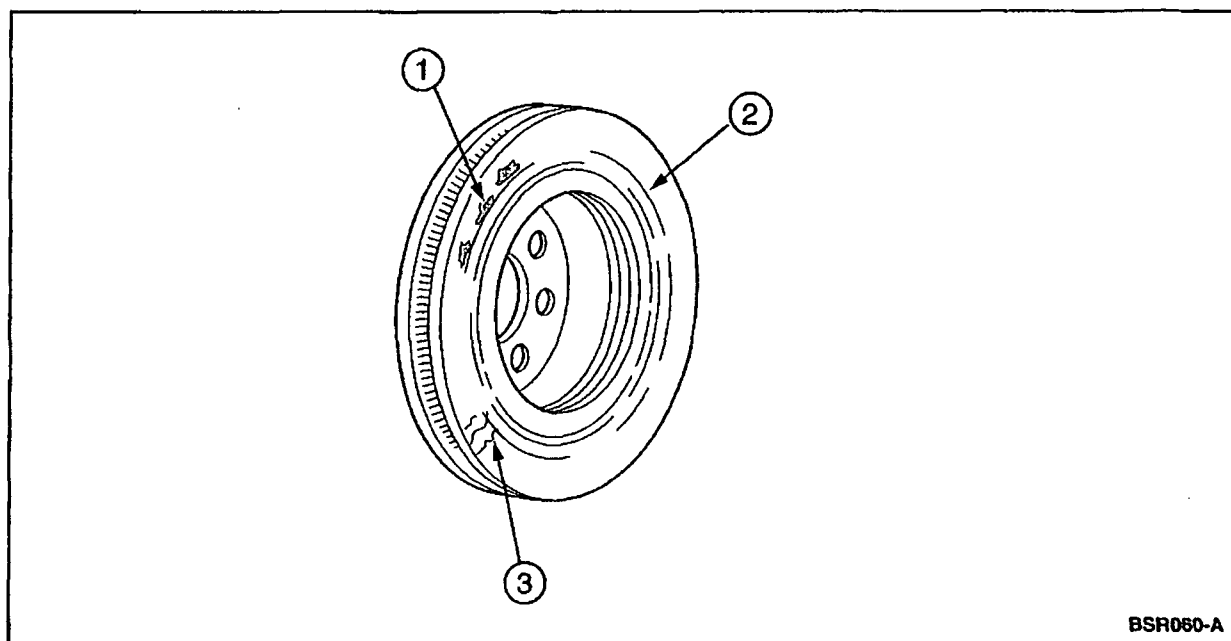


**Common Rotor Conditions**

Item	Description	Item	Description
1	Heat Checked	3	Cracked
2	Scored		

4. Remove the rotor and inspect it for:

- corrosion (inspect the rotor-to-hub and rotor-to-wheel surfaces).
- braking friction surface
 - lining material transfer (only visible in extreme cases).
 - cracks.
 - corrosion.