

Red Brake Warning Indicator Always On**Illuminated Red Brake Warning Indicator Lamp**

WARNING: IF THE BRAKE WARNING INDICATOR IS ALWAYS ON, A SEVERE BRAKE CONCERN MAY EXIST. CHECK FOR PROPER OPERATION OF THE VEHICLE BRAKES BEFORE OPERATING THE VEHICLE.

The indicator could be illuminated by:

- Parking brake not fully released.
- Low brake fluid level in the master cylinder.
- Shorted indicator circuit.
- Faulty indicator switch.

Brake Warning Indicator Always On Diagnosis

To determine the cause of an illuminated brake warning indicator, perform the following checks:

- Make sure that the parking brake is fully released.
- Check the fluid level in the master cylinder reservoir.
- Check for external leaks at the master cylinder.
- Check for external leaks in the hydraulic system.
- Check for a shorted brake warning indicator circuit.
- Check for a faulty indicator switch.