

THERMOSTATIC HEATER CONTROL VALVES (Cont.)-244

HEATER VALVE APPLICATION CHART (Cont.)

Car	Years	Models	OEM No.	Part No.
INTERNATIONAL TRUCK (Cont.)	All	All w/Heater 90326R94, 90327R94, 156318R91, 156676R91 & 157363R93	86607R92	3-1800
	All	All w/Heater 239885R91, 891564R91	239852R91	3-1828
LINCOLN	58-59	All	B9FL-18502A	3-1811
	52-57	All (Ex. 1955)	FDU-18502A	3-1808
	1955	All	FDL-18502B	3-1809
MERCURY	1960	All	COAF-18502D	3-1852
	57-58	All	FEK-18502A	3-1849
	52-54	All (On Fire Wall)	FDU-18502A	3-1808
NASH	55-57	All	4386046	3-1800
	52-54	All	3134368	3-1812
OLDSMOBILE (See F-85)	57-58	All (Ex. late '58)	570811	3-4406
	54-56	All	569689	3-4402
	51-53	All	3127213	3-4403
PLYMOUTH (See Valiant)	65-68	Fury w/Air Cond.	2521672	3-1866
	66-67	Belvedere w/Air Cond.	2607027	3-1867
	1967	Satellite w/Air Cond.	2607027	3-1867
	65-66	Belvedere (Ex. w/Air Cond.)	2275592/2448674	3-1815
	1965	Belvedere w/Air Cond.	2521672	3-1866
	62-64	All w/Model 720 & 727 Heater	2275592/2448674	3-1815
	1962	All w/Model 719 Heater	2219280	3-1853
	60-61	All	2084461	3-1857
	1959	All	2084273	3-1851
	55-58	All w/Model 705 Heater	1819516	3-1832
	49-54	All w/Model 103, 104, 500, 501, 502, 503, 504, 505, 506 & 550 Heater	1540547	3-1800
	59-60	All (Ex. 60 w/Manual Control)	3147574	3-1856
	1960	All w/Manual Control	3142623	3-1854
PONTIAC (See Tempest)	1958	All	529471	3-4401
	1957	All	523223	3-4427
	55-56	All	519769	3-4425
	49-52	All	541452	3-1827
RAMBLER	65-68	Classic & Ambassador	3176023	3-1865
	1967	Rebel & Marlin	3176023	3-1865
	63-64	Classic & Ambassador	3166387	3-1824
	61-62	All (Ex. American)	3455545	3-1850
	59-60	All (Ex. American)	3455545/3437604	3-4413
	1958	American w/Thermo Valve	3130273	3-1832
	1957	Ambassador	4386046	3-1800
STUDEBAKER	62-65	All	1554534	3-1813
	53-57	All	532880	3-1800
TEMPEST	61-62	All (Ex. late '62)	3149971	3-1810
THUNDERBIRD	61-63	All	C1SF-18502A/C2SZ-18502A	3-4428
	58-60	All	FEK-18502A/B7A-18502B	3-1849
	55-57	All	B5A-18502A	3-4412
VALIANT	60-62	All	2219280	3-1853