

R. T. WEINEY 37
MACK TRUCKS, INC.
601 SOUTH 10TH STREET
ALLENTOWN, PENNSYLVANIA 18103

SERVICE BULLETIN

JULY 17, 1970

No. Q65 under BRAKES

FOR BRANCHES, DISTRIBUTORS AND CUSTOMERS.

PLAINTIFF'S EXHIBIT

MAC-95

INSTRUCTIONS AND SERVICE DATA

(All Mack Chassis Equipped with
Bendix-Westinghouse DD-3 Brake Actuators)

PURPOSE To inform field of instructions and service data applicable to DD-3 brake actuators.

INFORMATION Bendix-Westinghouse Instruction and Service Data Bulletin SD-38 provides detailed information on maintaining, servicing and replacing DD-3 actuators. In addition to established general preventive maintenance procedures it is recommended that yearly or after 50,000 miles, depending on type of operation, the DD-3 actuators be completely disassembled to inspect condition of internal parts and replace diaphragms and other rubber parts/or parts if worn or deteriorated.

RECOMMENDATION File the attached Bendix-Westinghouse Instruction and Service Data SD-38, following this bulletin. Inform all affected personnel of its content.

PRINTED IN U.S.A.

Service Operations, Allentown, Pa. U.S.A.

Mack