


Loosen the brake shoe adjusting screw nut.


1. Using a screwdriver, move the brake shoe adjusting lever off the brake adjuster screw.
2. **NOTE:** Move the adjustment tool handle downward to loosen the brake shoe adjusting screw nut.

Using a suitable tool, loosen the brake shoe adjusting screw nut.

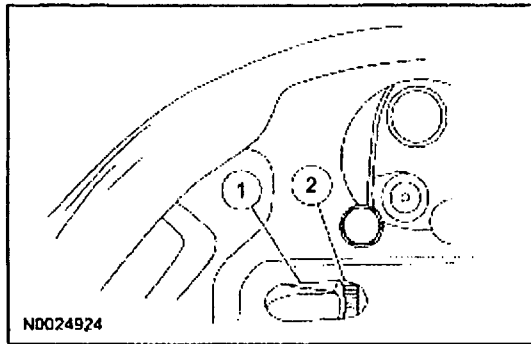

4. Using the special tool, measure the brake drum inside diameter.

- Install a new brake drum if the maximum inside diameter exceeds the specification molded into the brake drum.

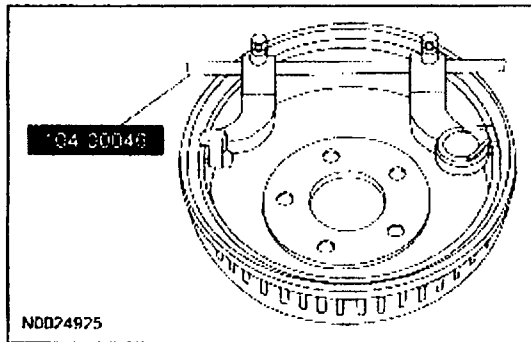

5. **NOTE:** If adjusting the rear brakes, refer to Brake Shoe Adjustment — Drums Removed in this section.

To install, reverse the removal procedure.
