

Year

Model

Part No.

INTERNATIONAL HARVESTER (Cont.)

SERIES 190 AND 200 (Cont.)

53-55	R-190, R-191, R-192, R-193, R-194, R-195	
50-52	L-190, L-191, L-192, L-193, L-194, L-195	
	Mechanics Type and F-52, F-52C, 4652 or 4753 Transmission (53-55)	M6100
	Mechanics Type and F-54, F-54B or F-54C Transmission or RD-450 Engine (50-55)	M7100
55-59	RD-190 Without Auxiliary Transmission—Front	M7102
	Center and Rear	M7100
	With Auxiliary Transmission (Transmission to Auxiliary Transmission and Auxiliary Transmission to Rear Axle)	M7100
50-55	RD-190, RD-191, RD-192, RD-195, LD-190, LD-191, LD-192, LD-195	
	Mechanics Type and F-52, F-52C, 4652 or 4753 Transmission (53-55)	M6100
	Mechanics Type and F-54, F-54B or F-54C Transmission (50-55)	M7100
50-52	LC-190, LC-191, LC-192	M6100
56-57	V-190	
	With V461, V549 Engine—Rear	M6100
	With Auxiliary Transmission (Transmission to Auxiliary Transmission)	M6100
	(Auxiliary Transmission to Rear Axle)	M7100
	With F-54, F-54B, F-54C Transmission—Auxiliary Transmission (Transmission to Auxiliary Transmission and Auxiliary Transmission to Rear Axle)	M7100
	With F-54, F-54B, F-54C Transmission—Auxiliary Transmission—Long Wheelbase (Transmission to Auxiliary Transmission, Auxiliary Transmission to Midship Bearing, Midship Bearing to Rear Axle)	M7100
56-57	VF-190 With Auxiliary Transmission—Long Wheelbase (Transmission to Auxiliary Transmission and Auxiliary Transmission to Midship Bearing)	M7100
	(First Rear Axle to Second Rear Axle)	M7100
	(Midship Bearing to First Rear Axle)	M6100
55-57	VF-190 Without Auxiliary Transmission (Transmission to First Rear Axle)—Front (Some)	M7100
	(Transmission to First Rear Axle)—Front (Some)	M7102
	(Transmission to First Rear Axle)—Rear	M7100
	(First Rear Axle to Second Rear Axle)	M6100
	Without Auxiliary Transmission—Long Wheelbase (Transmission to Midship Bearing) (Some)	M7100
	(Transmission to Midship Bearing) (Some)	M7102
	(Midship Bearing to First Rear Axle)	M7100
	(First Rear Axle to Second Rear Axle)	M6100
	With Auxiliary Transmission (Transmission to Auxiliary Transmission)	M7100
	(Auxiliary Transmission to First Rear Axle)	M7100
	(First Rear Axle to Second Rear Axle)	M6100
55-57	VCO-190, VCO-200—Rear (Some)	M6100
	Front (Some)	M7100
	Rear (Some)	M7100
55-59	RF-190, RDF-190 Without Auxiliary Transmission (Transmission to First Rear Axle at Transmission)	M7102
	(Transmission to First Rear Axle at First Rear Axle)	M7100
	(First Rear Axle to Second Rear Axle)	M6100
	Long Wheelbase with Auxiliary Transmission (Transmission to Auxiliary Transmission and Auxiliary Transmission to First Rear Axle)	M7100
	(First Rear Axle to Second Rear Axle)	M6100
55-60	RF-190	
	With Long Wheelbase (Transmission to Midship Bearing and Midship Bearing to First Rear Axle)	M7100
	(First Rear Axle to Second Rear Axle)	M6100
	With Heavy Duty—Auxiliary Transmission (Transmission to Auxiliary Transmission; Auxiliary Transmission to First Rear Axle; First Rear Axle to Second Rear Axle)	M7100
	With F-54, F-54B, F-54C, Heavy Duty Auxiliary Transmission (Transmission to Auxiliary Transmission)	M7100
	(Auxiliary Transmission to First Rear Axle)	M8100
	(First Rear Axle to Second Rear Axle)	M7100
	With Auxiliary Transmission—Long Wheelbase (Transmission to Auxiliary Transmission, Auxiliary Transmission to Midship Bearing, Midship Bearing to First Rear Axle)	M7100
	(First Rear Axle to Second Rear Axle)	M6100
	With Heavy Duty Auxiliary Transmission—Long Wheelbase (Transmission to Auxiliary Transmission; Auxiliary Transmission to Midship Bearing; Midship Bearing to First Rear Axle; First Rear Axle to Second Rear Axle)	M7100
55-60	RDF-190 Long Wheelbase (Transmission to Midship Bearing)	M7102
	(Midship Bearing to First Rear Axle)	M7100
	(First Rear Axle to Second Rear Axle)	M6100