


Attach Lathe To Mount Adapter

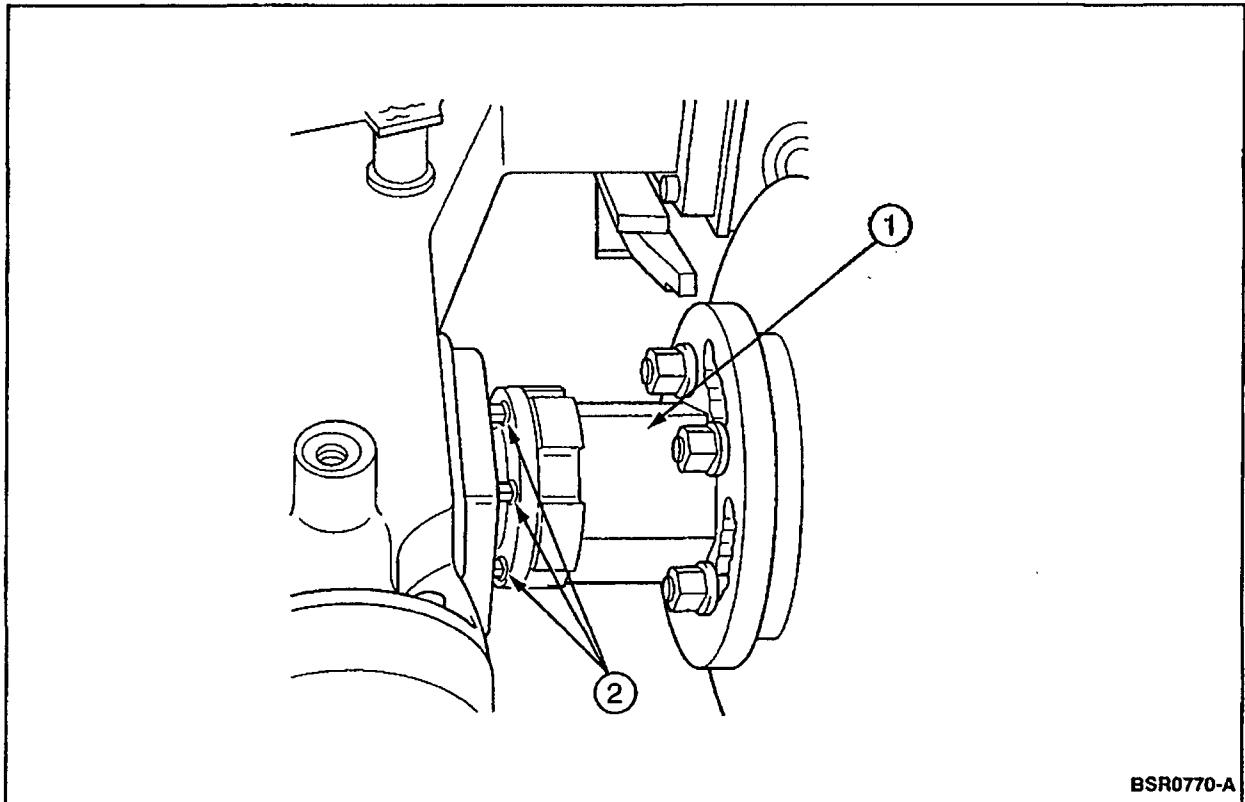

Lathe Mount Adapter

Item	Description	Item	Description
1	Lathe Adapter	2	Lateral Runout Screws

5. Prior to attaching the lathe to the adapter, back out all of the lateral runout screws so they do not protrude through the lathe plate.
6. Crank back the cutting head to allow the tool head to clear the rotor when the lathe is being attached to the hub.
7. Fit the lathe to the adapter. Roll the machine into place so that the mounting flange on the lathe is close to the mating surface on the adapter. The adapter has a dowel pin which must line up with one of the two holes on the mounting flange. Once the flange is flush to the adapter, bolt the shaft of the lathe to the adapter by turning the large mounting knob.