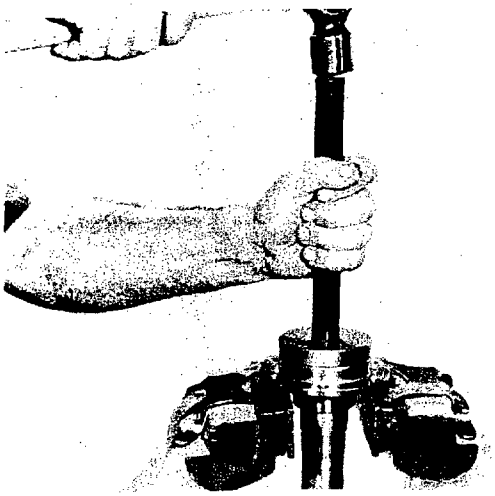


Figure 33 1009-33

Assemble new grease seal into spindle.
Tools—#D-155 Installer, #C-4171 Handle.

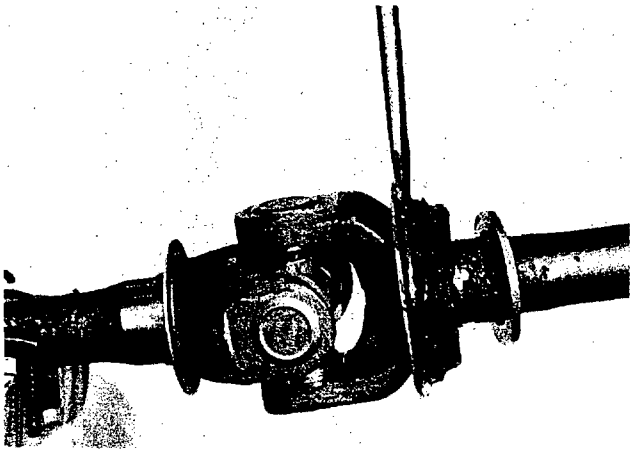


Figure 34 1009-34

Some front axles are equipped with a "V" seal which is assembled to the axle shaft stone shield as shown. If seal is worn, remove and replace with a new one.

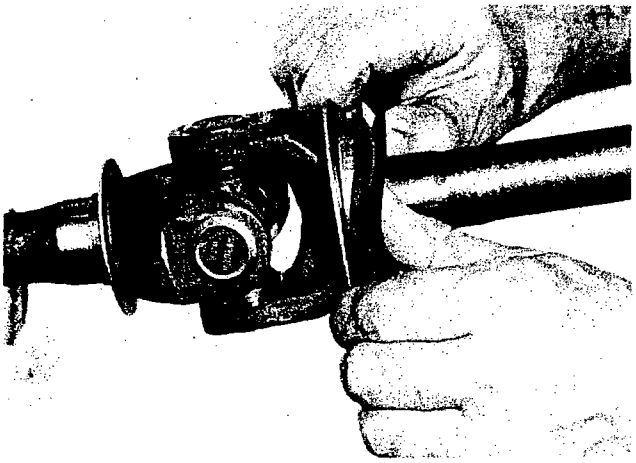


Figure 35 1009-35

Assemble new seal as shown. Lip of the seal is to be directed towards the spindle.

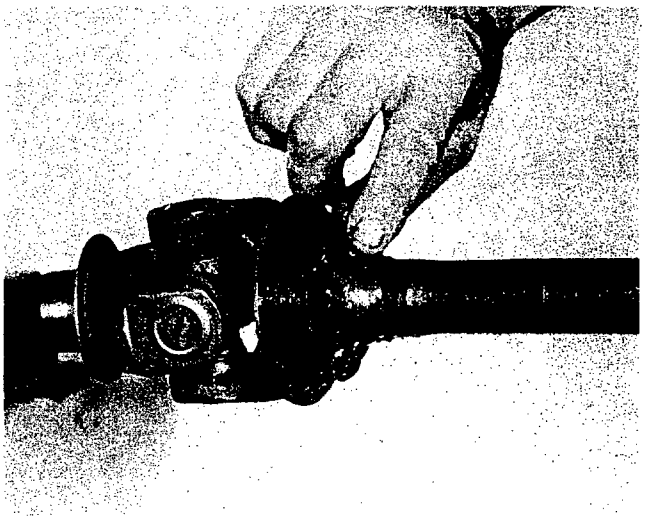


Figure 36 1009-36

Pack the area around the thrust face area of the shaft and seal full of grease. Also, fill the seal area of the spindle with grease.

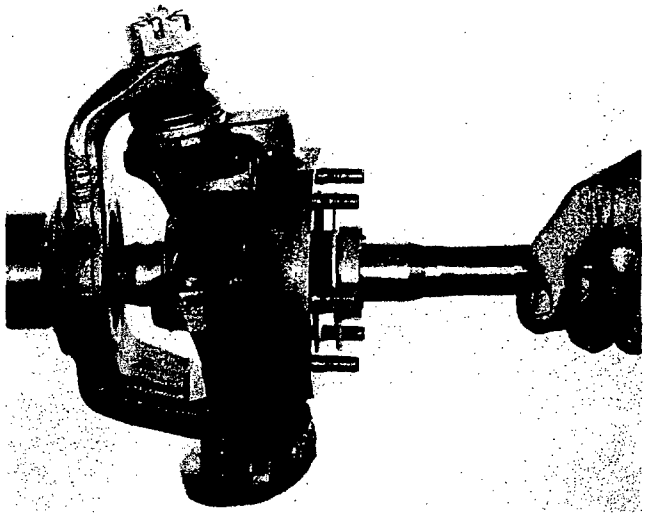


Figure 37 1009-37

Assemble axle shaft joint assembly into tube.