lo. 154 oronado/Eldorado \daptor

ldorado and Toronado wheels must be nstalled on a Tire Changer inverted with ner side of the wheel up. This Adaptor upports the bottom side of the rim while lirecting the Lower Bead-Breaker to the utside of the rim to contact the lower ead.

Ship. Wt. 1 lb. (0.45 kg)

No. 147 Moisture Separator-Lubricator

Assures constant supply of dry, clean lubricated air for best operation of the Tire Changer. Bracket fits existing holes in *Model 502, 489, 488 and 444 Tire Changer.*

Ship. Wt. 5 lbs. (2.3 kg)

No. 140 Manual Mount-Demount Tool

No. 140 Manual Mount-Demount Tool rolls tire beads off and cradles toe of bead to mount tire safely. Used with any manual *tire changer.*

Ship. Wt. 6 lbs. (2.7 kg)

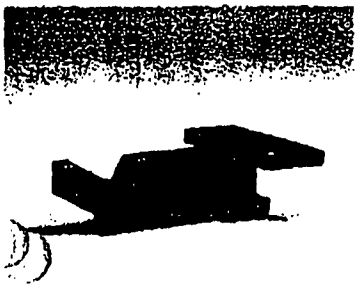

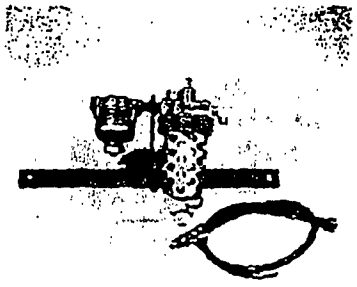

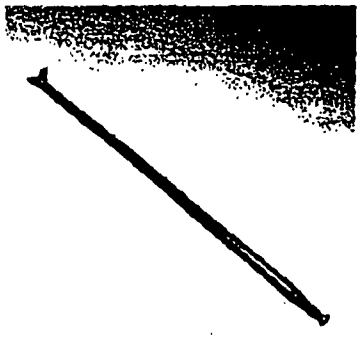



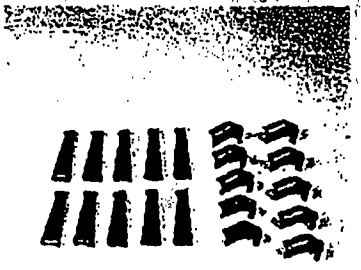



No. 153 Manual Upper Bead-Breaker

Easily loosens upper bead on any size passenger car, light or medium truck tire. Long handle provides powerful leverage to break the bead. Adjustable for large or ll diameter wheels. Supplied with Jels 444 and 22, can be used with any anual tire changer.

ip. Wt. 9 lbs (4 kg)

No. 122 Power Mount-Demount Tool Boots

Set of 20 Plasalloy Boots—10 for each end of the No. 30081 Power Mount-Demount Tool. Tough plastic boots prevent tool from scratching or marring custom alloy wheels. Boots are contoured to fit each end of the tool.

Ship. Wt 1 lb. (0.45 kg)

No. 145 Tire Lube Flask and Swab

Unbreakable. Fits AMMCO, Coats, Bishman and other tire changers.

NOVO120341