SWITCHBOARDS

Combination Service and Distribution Sections


With Provisions for WHM and KVAR Metering and Current Transformer

For Ordering Instructions, see page 63.


TYPE VSN AND CSN

System	With Fusible Main Disconnect				With Circuit Breaker Main Disconnect				Dimensions in Inches			Ship. Wt. Lbs.
	Ampere Rating	Space for Branch Units in Inches	Catalog Number	Price	Ampere Rating	Space for Branch Units in Inches	Catalog Number	Price	Wide	High	Deep	
			VSN-				CSN-					
3 Wire S/N 120/240V A-c 240V A-c-	200	22½	222	$428.	225	23¾	222	$628.	32	90	15	320
	400	15	224	500.	400	20	224	1000.	32	90	15	340
	600	15	226	606.	600	20	226	1118.	32	90	15	360
	---	---	---	---	800	20	228P	1982.	32	90	15	380
3 Pole 240V A-c	200	15	322	478.	225	18¾	322	714.	32	90	15	320
	400	10	324	548.	400	15	324	1142.	32	90	15	340
	600	10	326	714.	600	15	326	1318.	32	90	15	360
	---	---	---	---	800	15	328P	2144.	32	90	15	380
3 Pole 600V A-c	200	15	362	510.	225	18¾	362	714.	32	90	15	320
	400	10	364	574.	400	15	364	1142.	32	90	15	340
	600	10	366	774.	600	15	366	1318.	32	90	15	360
	---	---	---	---	800	15	368P	2144.	32	90	15	380
4 Wire S/N 120/208V A-c	④200	15	422	510.	---	---	---	---	32	90	15	300
	④400	10	424	596.	---	---	---	---	32	90	15	320
	④600	10	426	786.	---	---	---	---	32	90	15	340
4 Wire S/N 277/480V A-c	④200	15	452	554.	225	18¾	462	728.	32	90	15	300
	④400	10	454	694.	400	15	464	1190.	32	90	15	320
	④600	10	456	834.	600	15	466	1384.	32	90	15	340
	---	---	---	---	800	15	468P	2172.	32	90	15	360


④ Do not include wiring space for top-exit of load conductors. Add 1290PB pullbox if top exit is required.

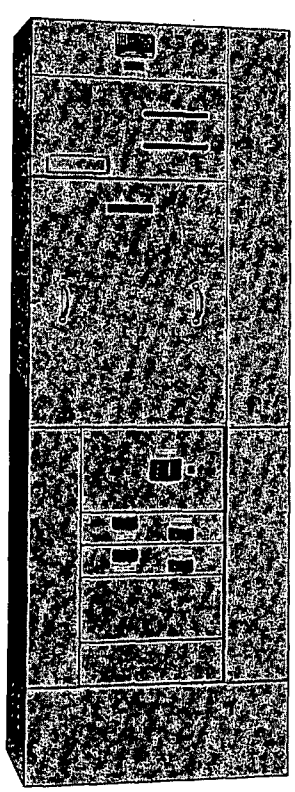

Type CSN without distribution section filled

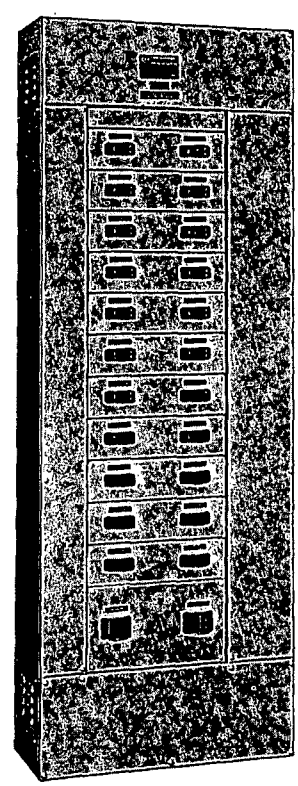

Type VB with circuit breakers

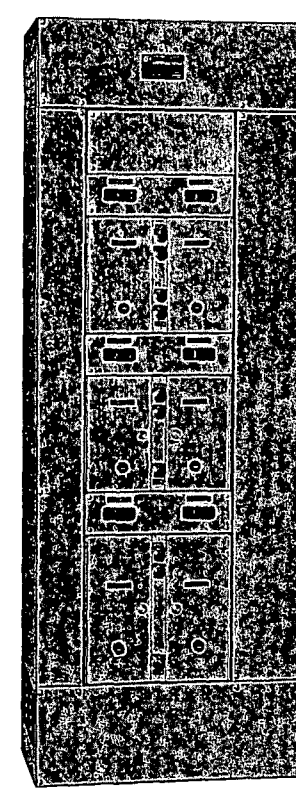

Type VB with circuit breakers and motor starters

Circuit Breakers, Fusible Switches and Starters, pages 69-72.
MODIFICATIONS AND ACCESSORIES, page 73.

DISCOUNT SCHEDULE **23 CD**