


The illustrations are arranged according to overall length

D-89-I
EDP-01856

7 3/16

Plate .265

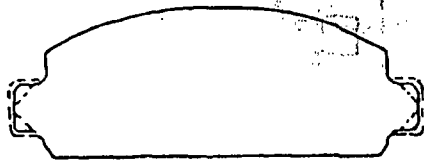

D-89-I cannot be used for D-129-I

D-89-O
EDP-01856

8 1/8

Plate .194




Same as D-129-O

D-129-I
EDP-02261

7 13/64
(7.20)

Plate .265

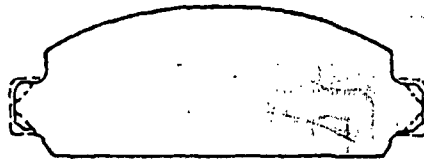


Differs from D-89-I in length and 45° tooth
D-129-I can be used for earlier D-89-I applications.

D-129-O
EDP-02261

8-1/8

Plate .194

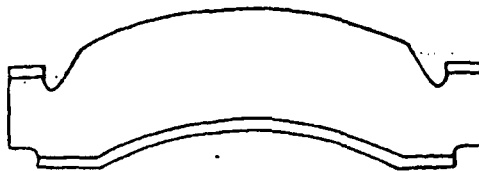

Same as D-89-O

D-13-I
EDP-01173

7 1/4


Plate .194



D-13-O
EDP-01173

6-13/32


Plate .135

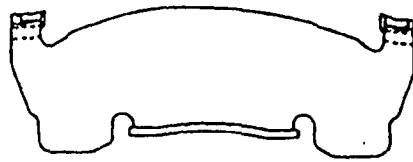

D-52-I
EDP-01595

7-1/4

Plate .194

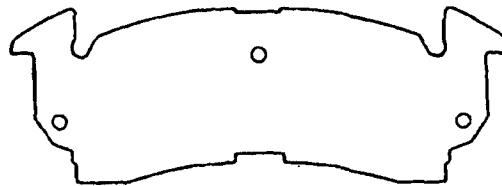


MOST PRE-1974 MODELS DID NOT
HAVE HOLES FOR WEAR SENSOR

D-52-O
EDP-01595

7-3/4

Plate .135

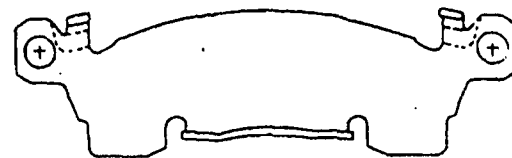

MOST OEM SHOES HAVE INSULATOR.
SOME HAVE SQUARED OUTER "RADIUS."