
STABILIZER BAR-190

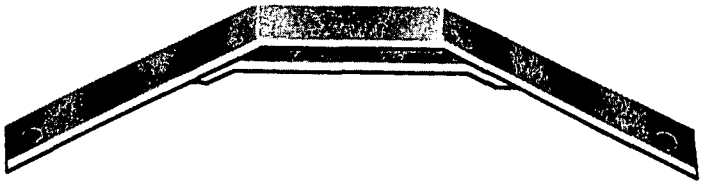

3-5857

FRONT END STABILIZER BAR

FORD GALAXIE - - - - - - 63-64


MERCURY - - - - - - - - - 63-64

A permanent bar that will maintain a steady steering at speeds between 60 & 70 mph.

REDUCES ACTION ENOUGH TO ELIMINATE STEERING PROBLEMS WITH SEVERE BRAKING, QUICK STARTING AND STOPPING, DRIVING ON UNEVEN-TYPE ROADS, CHOPPY ROADS OR ROADS WITH SEVERE PAVEMENT SEAMS.

STEERING STABILIZER-190

-A MONEY SAVER NECESSITY FOR ALL CARS-

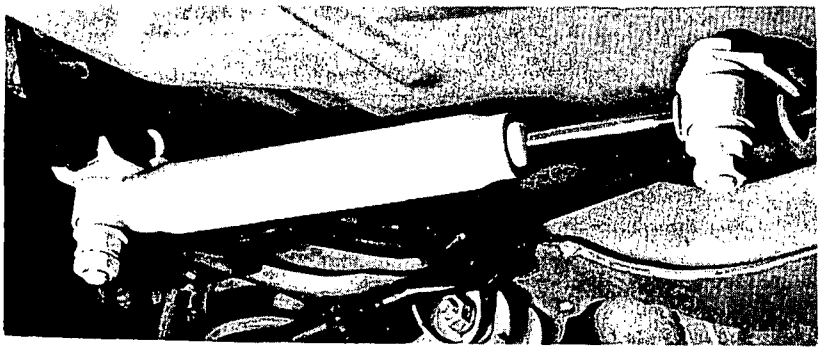

- Hydraulic cylinder and installation kit gives steering assist in most systems.
- Reduce wear and tear and maintenance costs on tires to a minimum.
- Eliminate road weave, shimmys, vibrations.
- Give steering control and comfort.
- Simple installation - can be readily installed or removed.

PASSENGER CARS

Car	Years	Models	Hydraulic Cylinder	Installation Kit
BUICK SPECIAL	64-67	All	**3-5991**	**3-5947**
CHECKER	60-64	All Cabs & Limosines	**3-5992**	**3-5951**
CHEVROLET (See Corvair, Corvette)				
	65-67	All (Ex. Chevy II, Chevelle)	**3-5991**	**3-5957**
	64-67	Chevelle & El Camino	**3-5991**	**3-5947**
	62-67	Chevy II	**3-5991**	**3-5948**
	58-64	All w/Power Steering (Ex. Chevy II, Chevelle)	**3-5992**	**3-5952**
	58-64	All w/o Power Steering (Ex. Chevy II, Chevelle)	**3-5991**	**3-5947**
	55-57	All	**3-5992**	**3-5952**
COMET	62-67	All (Ex. Power Steering)	**3-5991**	**3-5952**
CORVAIR	60-67	All	**3-5991**	**3-5947**
CORVETTE	63-67	All	**3-5992**	**3-5963**
DODGE	1967	Coronet	**3-5991**	**3-5955**
	65-67	Polara	**3-5992**	**3-5959**
	62-66	All & Dart (Ex. '65-'66 Polara & Coronet)	**3-5991**	**3-5955**
	60-61	Dart	**3-5991**	**3-5955**
	57-61	All w/6 Cyl.	**3-5992**	**3-5954**
F85	64-67	All	**3-5991**	**3-5947**