

TABLE 1. DRIERS FOR EVAPORATION OF WATER

TYPE	KIND	MATERIALS HANDLED	MEANS OF HANDLING	TEMP. RANGE, DEG F	HEAT SUPPLY	USES AND REMARKS
Batch or Intermittent	Compartment	Paper, Leather, Yarns, Lumber, Foodstuffs	Suspended, Truck, Tray	80 to 180	Steam Coils, Air, Electricity	When production does not warrant continuous drier
	Agitated	Chemicals too sticky for Rotary Drier	Shoveled into Drum or Pan	100 to 330	Water, Steam Jacketed, may have Vacuum on top	Where dust must be saved
Continuous	Vacuum	Chemicals, Explosives, Pharmaceuticals, Food Products	Tray, Basket, Tumbling Drum	80 to 300	Water, Steam	Cost of operation high, for expensive materials
	Tunnel	Ceramics, Chemicals, Lumber, Food Products	Truck, Tray, Belt	100 to 350	Steam Coils, Air, Electricity, Products of Combustion	For High Production
	Rotary	Bulk	Cascades through	80 to 500	Air, Steam, Products of Combustion	Where material will stand rough handling and is not subject to balling up
	Drum	Liquids, Slurries	Flowed on Drum, Dry Material Scraped off	to 310	Steam, may have Vacuum on Top	Hygroscopic materials dried with vacuum, and packed immediately
	Cylinder	Paper, Textiles, Chemicals	Continuous Sheets, Endless Chain Belt	to 350	Steam inside of Drum	Where material comes in sheets or rolls, and will stand direct contact with heating surface
	Festoon	Paper, Chemicals	Continuous Sheets, Suspended on Metal Screens	to 200	Air, Steam Coils	Where one side cannot come in contact with supports until dry
	Tower or Column	Grains, Sand	Falls through by Gravity	125 to 250	Air, Steam Coils	Where headroom is available
	Spray	Solutions over 30% Solids	Sprayed into Chamber	120 to 350	Air, Products of Combustion	Drying is almost instantaneous
	Induction	Metals, for removal of traces of Water.	Placed in High Frequency Field	to 400	Electricity	Where heating of metal from inside out is important

Conduction or Direct Contact Drying

This method of drying is advantageous where the material can be flowed on to the drying surface and the dried material scraped off, or where the material to be dried can be handled in a sheet, and where there is no danger of subjecting the product to the full temperature of the heating medium. The source of heat for this method may be steam, electricity, hot oil or hot water.

Convection

The circulation of heated air or other gases about the material to be dried is generally termed convection drying. The convection may be either natural or forced. With forced circulation, the temperature of the

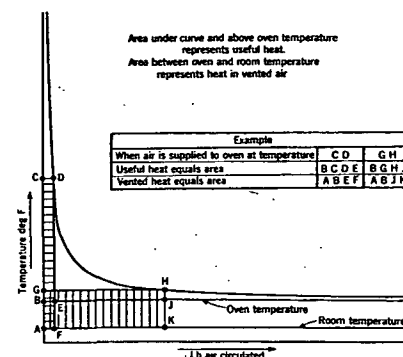


FIG. 1. RELATION BETWEEN USEFUL AND TOTAL HEAT SUPPLIED

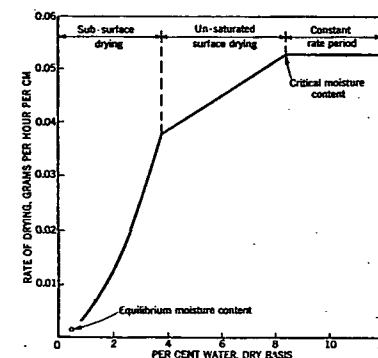


FIG. 2. RATE OF DRYING OF WHITING SLAB

drier is more uniform and the rate of drying is much higher than with natural circulation. Where humidity is used, the control is much easier, and more accurate.

The source of heat for a convection drier may be steam, electricity, hot water, oil-fired heater, gas-fired heater, or coal furnace. Where either oil, gas or coal is used, the type of heater may be direct or indirect; i.e., the products of combustion may be used (direct), or the circulated air may be heated through an interchanger (indirect).

Where the direct type is used, there is naturally a higher thermal efficiency, but it can only be used where the odor, soot, or the chemical elements of the products of combustion do not affect the material being dried. When heat economy is an important consideration this method (Fig. 1) may be used, permitting a small amount of air to be circulated, if a sacrifice of accurate control of temperature and humidity can be justified.

DRIERS

The term *adiabatic drier* is applied to a drier in which all the heat is supplied by air externally heated. The temperature of the air in the