



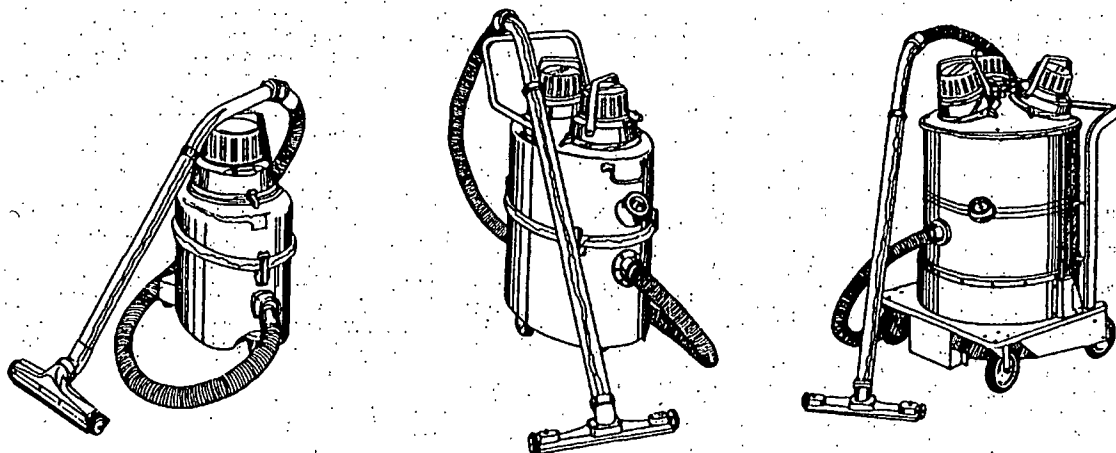

Source: Product Catalog, Asbestos Control Technologies, Inc., Maple Shade, N.J., 1985.

Figure F-1. HEPA Filtered Vacuums

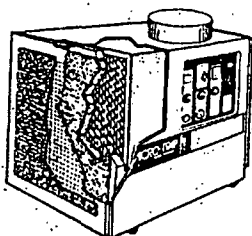

Source: Product Catalog, Asbestos Control Technologies, Inc., Maple Shade, N.J., 1985.

Figure F-2. Portable Exhaust Ventilation System with HEPA Filter

Wetting Agents. Wetting agents (surfactants) are added to water (which is then called amended water) and used to soak asbestos-containing materials; amended water penetrates more effectively than plain water and permits more thorough soaking of the asbestos-containing materials. Wetting the asbestos-containing material reduces the number of fibers that will break free and become airborne when the asbestos-containing material is handled or otherwise disturbed. Asbestos-containing materials should be thoroughly soaked before removal is attempted; the dislodged material should feel spongy to the touch. Wetting agents are generally prepared by mixing 1 to 3 ounces of wetting agent to 5 gallons of water.

One type of asbestos, amosite, is relatively resistant to soaking, either with plain or amended water. The work practices of choice when working with amosite containing material are to soak the material as much as possible and then to bag it for disposal immediately after removal, so that the material has no time to dry and be ground into smaller particles that are more likely to liberate airborne asbestos.

In a very limited number of situations, it may not be possible to wet the asbestos-containing material before removing it. Examples of such rare situations are: (1)

Removal of asbestos material from a "live" electrical box that was oversprayed with the material when the rest of the area was sprayed with asbestos-containing coating; and (2) removing asbestos-containing insulation from a live steam pipe. In both of these situations, the preferred approach would be to turn off the electricity or steam, respectively, to permit wet removal methods to be used. However, where removal work must be performed during working hours, i.e., when normal operations cannot be disrupted, the asbestos-containing material must be removed dry. Immediate bagging is then the only method of minimizing the amount of airborne asbestos generated.

Airless Sprayer. Airless sprayers are used to apply amended water to asbestos-containing materials. Airless sprayers allow the amended water to be applied in a fine spray that minimizes the release of asbestos fibers by reducing the impact of the spray on the material to be removed. Airless sprayers are inexpensive and readily available.

Portable Shower. Unless the site has available a permanent shower facility that is contiguous to the removal area, a portable shower system is necessary to permit employees to clean themselves after exposure to asbestos and to remove any asbestos contamination from their hair and bodies. Taking a shower prevents employees from leaving the work area with asbestos on their clothes and thus prevents the spread of asbestos contamination to areas outside the asbestos removal area. This measure also protects members of the families of asbestos workers from possible exposure to asbestos. Showers should be supplied with warm water and a drain. A shower water filtration system to filter asbestos fibers from the shower water is recommended. Portable shower units are readily available, inexpensive, and easy to install and transport.

Respirators. Employees involved in asbestos removal projects should be provided with appropriate NIOSH-approved respirators. Selection of the appropriate respirator should be based on the

concentration of asbestos fibers in the work area. If the concentration of asbestos fibers is unknown, employees should be provided with respirators that will provide protection against the highest concentration of asbestos fibers that can reasonably be expected to exist in the work area. For most work within an enclosure, employees should wear half-mask dual-filter cartridge respirators. Disposable face mask respirators (single-use) should not be used to protect employers from exposure to asbestos fibers.

Disposable Coveralls. Employees involved in asbestos removal operations should be provided with disposable impervious coveralls that are equipped with head and foot covers. Such coveralls are typically made of Tyvek.¹ The coverall has a zipper front and elastic wrists and ankles.

Signs and Labels. Before work begins, a supply of signs to demarcate the entrance to the work area should be obtained. Signs are available that have the wording required by the final OSHA standard. The required labels are also commercially available as press-on labels and pre-printed on the 6-mil polyethylene plastic bags used to dispose of asbestos-containing waste material.

Preparing the Work Area

Preparation for constructing negative-pressure enclosures should begin with the removal of all movable objects from the work area, e.g., desks, chairs, rugs, and light fixtures, to ensure that these objects do not become contaminated with asbestos. When movable objects are contaminated or are suspected of being contaminated, they should be vacuumed with a HEPA vacuum and cleaned with amended water, unless they are made of material that will be damaged by the wetting agent; wiping with plain water is recommended in those cases where amended water will damage the object. Before the asbestos removal work begins, objects that

¹ Mention of trade names or commercial products does not constitute endorsement or recommendation for use.