

openings have a flow coefficient slightly greater than that of a square-edged orifice. If the openings are not advantageously placed with respect to the wind, the flow per unit area of the openings will be less and, if unusually well placed, the flow will be slightly more than that given by the formula. Inlets should be placed to face directly into the prevailing wind, while outlets should be placed in one of the five places listed:

1. On the side of the building directly opposite the direction of the prevailing wind.
2. On the roof in the low pressure area caused by the jump of the wind (see Fig. 1).

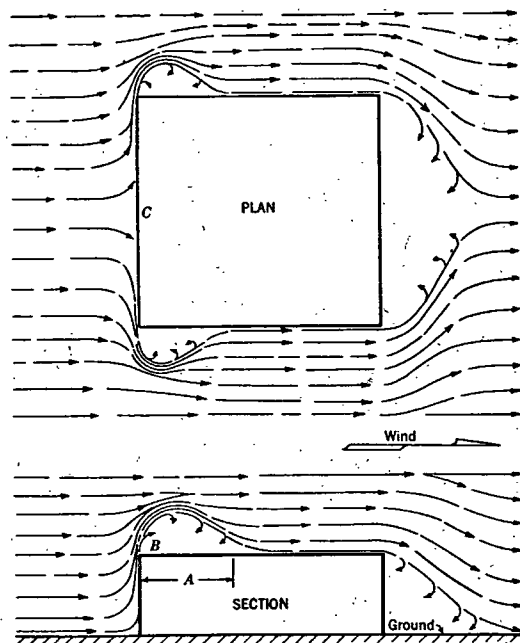


FIG. 1. THE JUMP OF WIND FROM WINDWARD FACE OF BUILDING. (A—LENGTH OF SUCTION AREA; B—POINT OF MAXIMUM INTENSITY OF SUCTION; C—POINT OF MAXIMUM PRESSURE)

3. On the sides adjacent to the windward face where low pressure areas occur.
4. In a monitor on the side opposite from the wind.
5. In roof ventilators or stacks.

TEMPERATURE DIFFERENCE FORCES²

The stack effect produced within a building when the outdoor temperature is lower than the indoor temperature is due to the difference in weight of the warm column of air within the building and cooler air outside. The flow due to stack effect is proportional to the square root of the draft head, or approximately:

$$Q = 9.4 A \sqrt{h (t - t_o)} \quad (2)$$

where

Q = air flow, cubic feet per minute.

A = free area of inlets or outlets (assumed equal), square feet.

h = height from inlets to outlets, feet.

t = average temperature of indoor air in height h , Fahrenheit degrees.

t_o = temperature of outdoor air, Fahrenheit degrees.

9.4 = constant of proportionality, including a value of 65 per cent for effectiveness of openings. This should be reduced to 50 per cent (constant = 7.2) if conditions are not favorable.

HEAT REMOVAL

In problems of heat removal, knowing the amount of heat to be removed and having selected a desirable temperature difference, the amount

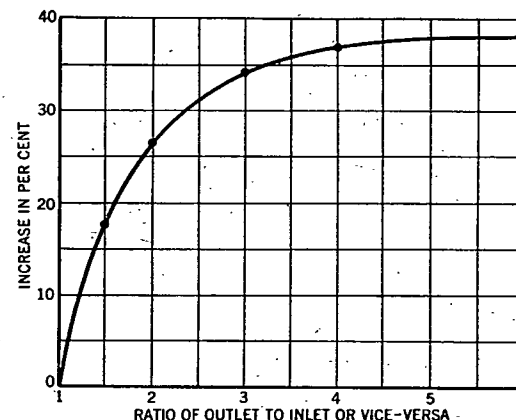


FIG. 2. INCREASE IN FLOW CAUSED BY EXCESS OF ONE OPENING OVER ANOTHER

of air to be passed through the building per minute to maintain this temperature difference can be determined by means of Equation 3.

$$H = 0.0175 Q (t - t_o) \quad (3)$$

where

H = heat removed, Btu per minute.

Q = air flow, cubic feet per minute.

$t - t_o$ = inside-outside temperature difference, Fahrenheit degrees.

EFFECT OF UNEQUAL OPENINGS

The largest flow per unit area of openings is obtained when inlets and outlets are equal, and the equations given previously are based on this condition. Increasing outlets over inlets, or vice-versa, will increase the air flow, but not in proportion to the added area. When solving problems having an unequal distribution of openings, use the smaller area, either inlet or outlet, in the equations and add the increase as determined from Fig. 2.

COMBINED FORCES OF WIND AND TEMPERATURE

Equations for determining the air flow due to temperature difference and wind have already been given. It must be remembered that when