

TABLE 1. FLOW OF STEAM IN PIPES

P = loss in pressure in pounds.
 D = inside diameter of pipe in inches.
 L = length of pipe in feet.
 d = weight of 1 cu ft of steam.
 W = pounds of steam per hour.

$$W = 5220 \sqrt{\frac{PdD^5}{1 + \frac{3.6}{D}}} L$$

$$P = 0.0000000367 \left(1 + \frac{3.6}{D}\right) \frac{W^2 L}{dD^5}$$

PRESSURE LOSS IN OUNCES	COL. 1	PIPE SIZE		INTERNAL AREA OF PIPE SQ INCHES	COL. 2	STEAM PRESS. BY GAGE	COL. 3	LENGTH OF PIPE IN FEET	COL. 4
	$5220 \sqrt{\frac{P}{100}}$	Nominal	Actual Internal Diameter		$\sqrt{\frac{D^5}{1 + \frac{3.6}{D}}}$		$\sqrt{d}$		$\sqrt{\frac{100}{L}}$
0.25	65.28	1	1.049	0.864	0.536	-1.0 ^a	0.187	20	2.240
0.50	92.28	1 1/4	1.380	1.496	1.178	-0.5 ^a	0.190	40	1.580
1.00	130.5	1 1/2	1.610	2.036	1.828	0.0	0.193	60	1.290
2	184.6	2	2.067	3.356	3.710	0.3	0.195	80	1.120
3	226.0	2 1/2	2.469	4.788	6.109	1.3	0.201	100	1.000
4	261.0	3	3.068	7.393	11.183	2.3	0.207	120	0.912
5	291.8	3 1/2	3.548	9.887	16.705	5.3	0.223	140	0.841
6	319.7	4	4.026	12.730	23.631	10.3	0.248	160	0.793
7	345.3	4 1/2	4.506	15.947	32.134	15.3	0.270	180	0.741
8	369.1	5	5.047	20.006	43.719	20.3	0.290	200	0.710
10	412.7	6	6.065	28.886	71.762	30.3	0.326	250	0.632
12	452.0	7	7.023	38.743	106.278	40.3	0.358	300	0.578
14	488.3	8	7.981	50.027	149.382	50.3	0.388	350	0.538
16	522.0	9	8.941	62.786	201.833	60.3	0.415	400	0.500
20	583.6	10	10.020	78.854	272.592	75.3	0.452	450	0.477
24	639.3	12	12.000	113.098	437.503	100.3	0.507	500	0.447
28	690.5	14	13.250	137.880	566.693	125.3	0.557	600	0.407
32	738.2	16	15.250	182.655	816.872	150.3	0.603	700	0.378
40	825.4	Column 1 x 2 x 3 x 4 = 'lb of steam per hour that will flow through a straight pipe for a given condition. Example 1: 1 oz drop - 2 in. pipe - 1.3 lb press. - 100 ft equivalent length: 130.5 x 3.710 x 0.201 x 1 = 97.2 lb per hour. 97.2 x 4 ^b = 388.8 sq ft equivalent radiation.				175.3	0.645	800	0.354
48	904.1					200.3	0.685	900	0.333
80	1167.2	Table 1 does not allow for entrained water in low-pressure steam, condensation in covered pipe and roughness in commercial pipe as found in practice.						1000	0.316
160	1650.7							1200	0.289
320	2334.5							1500	0.258
480	2859.1							2000	0.224

^aPounds per square inch gage = 2.04 in. Vacuum, Mercury Column.

^bThe factor 4 is the approximate equivalent in square feet of steam radiation of 1 lb of steam per hour.

locations may be different from those which exist for appreciable periods at other locations and which under constant pressure may have conditions that are approximately the same. In designing piping it is of especial importance to arrange the system to preclude trouble caused by such pressure differences. The systems which readily release the air permit uniform pressures to be attained in much shorter time intervals than those which are sluggish. Results are given in Fig. 1 from investigations¹ to determine the rate of condensate and air return from a two-pipe gravity heating system. Variations in the steam pressure during the warming up period when the rate of air elimination and condensation is high are clearly indicated in these curves.

It is evident that the condensation flow during the initial warming-up

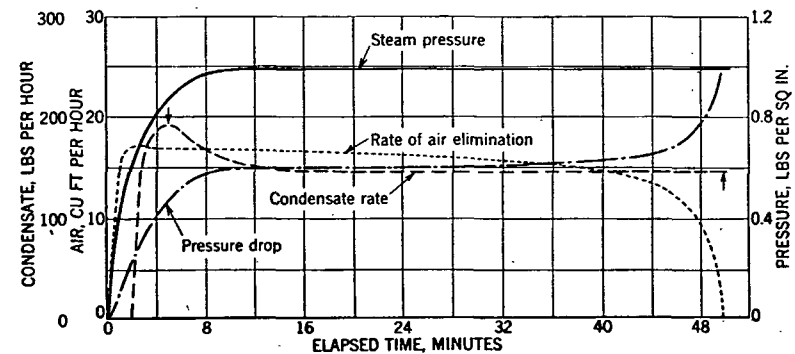


FIG. 1. RELATION BETWEEN ELAPSED TIME, STEAM PRESSURE, CONDENSATE AND AIR ELIMINATION RATES

period reaches a peak which is greater than the constant condensation rate which is eventually reached when the pressure becomes uniform. Moreover, the peak condensation rate is obtained when the system steam pressure is lower than that existing during a period of constant condensing rate. It will also be noted that the peak rate of air elimination does not coincide with the higher condensing rate.

STEAM FLOW

The rate of flow of dry steam or steam with a small amount of water flowing in the same direction is in accordance with the general laws of gas flow and is a function of the length and diameter of the pipe, the density of the steam, and the pressure drop through the pipe. This relationship has been established by Babcock in the formula given at the top of Table 1. In Columns 1, 2, 3, and 4 of this table, the numerical values of the factors for different pressure losses, pipe diameters, steam densities and lengths of pipe have been worked out in convenient form so that the steam flowing in any pipe may be calculated by multiplying together the proper factors in each column as shown in the example at the bottom of the table.

¹A.S.H.V.E. RESEARCH REPORT No. 954—Condensate and Air Return in Steam Heating Systems, by F. C. Houghten and J. L. Blackshaw (A.S.H.V.E. TRANSACTIONS, Vol. 39, 1933, p. 199).