


D.L. APPLICATION

1.7 This application sequence is typical of all preformed fitting covers.

FIG. 96A - 90° S.R. ELL COVERSTEP 1 - OUTER LAYERFIG. 96B - 90° S.R. ELL COVERSTEP 2 - OUTER LAYER

- 1 O.L. P.C. is run up to ell cover
- 2 O.L. is anchored to ell cover and bottom lace wires are tightened.

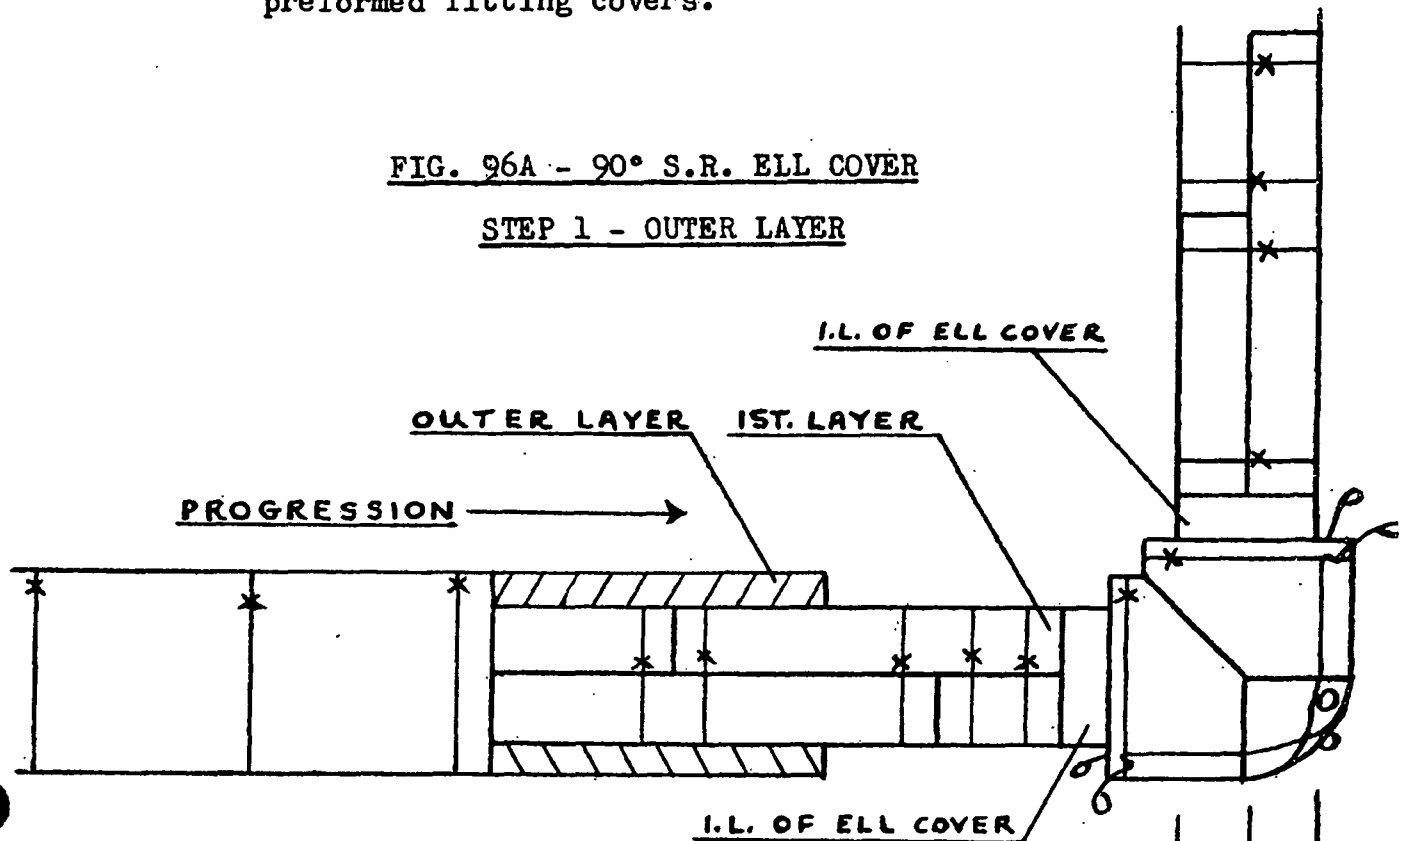