FILE NAME: Flintkote (FLK)

DATE: 0000

DOC#: FLK015


DOCUMENT DESCRIPTION: Industry Sales Literature

Now you can install a beautiful new floor in no time at a


with FLINTKOTE peel-stick reinforced vinyl floor tile

FLINTKOTE Peel and Stick Tile already has the adhesive on the back. It's easy—fun. Just remove the protective paper and put the tile in place.


No messy adhesives. No waiting. Ideal for any room in the home—basement to attic. Use over concrete, wood, linoleum, or floor tile that is smooth and tightly adhered.

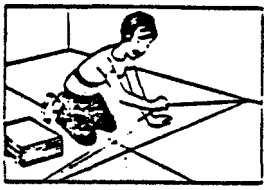


Work from the center of the room outward. To find center: Measure from wall to wall. Snap string at center of floor at each end. Rub string with chalk. Stretch right and let string snap to mark a chalk line on floor. Find center of chalk line and mark another chalk line at right angles to first.

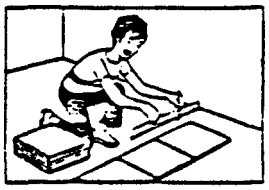

Lay a row of tiles full (don't remove paper) along chalk line from the center point to one side wall and one end wall. If the distance between wall and edge of last tile is less than 2" or more than 9", move center line 6" closer to opposite wall by snapping a new chalk line.

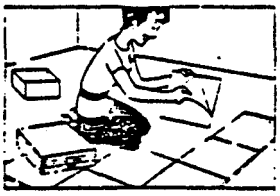


JUST THIS EASY JUST THIS QUICK— Remove paper from back of each tile only when you are ready to use it. Start laying tile from center point following chalk lines. Do not slide tile into place. Set in place at slight angle to the floor.

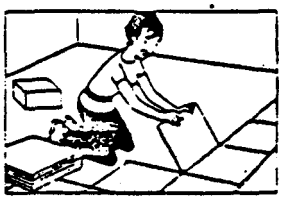


Butt each tile square to adjoining tile. Corners should meet exactly. DO NOT APPLY PRESSURE TO TILE UNTIL ACCURATELY PLACED. ONCE PRESSURE IS APPLIED THE TILE IS EXTREMELY DIFFICULT TO REMOVE

CAUTION: READ BEFORE USING TILES. THE RELEASE PAPER HAS A SLIPPERY SURFACE. DO NOT STAND ON PIECES OF THE RELEASE PAPER OR ON ANY TILES UNTIL THE RELEASE PAPER HAS BEEN REMOVED. IT IS RECOMMENDED THAT THE RELEASE PAPER BE PLACED IN THE TILE CARTON OR IN A SUITABLE RECEPTACLE IMMEDIATELY UPON REMOVAL FROM THE TILE.

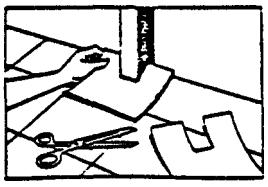

To fit around obstacles or at edge of room: cut with shears or straightedge and sharp linoleum knife. Leave paper on tile and cut with paper side up. To fit around obstructions: make pattern on regular paper. Trace onto tile and cut.

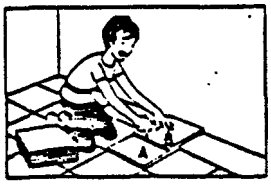

To fit border tiles: place a loose tile (figure A) over last tile in row. Butt another tile (figure B) against wall and mark tile "A" with pencil along edge of tile "B". Cut tile "A" along pencil line, resting tile over a hot plate or an open gas burner. Use a sharp knife or a tool specially made for cutting tile.

WARRANTED TO STICK

FLINTKOTE Peel and Stick Tile is warranted to stick for 5 years when applied according to these instructions. Return to your dealer any tiles that fail to adhere properly, and we will arrange to replace them free of charge.

See other side for limited warranty details.

IMPORTANT INSTALLATION INSTRUCTIONS

Most designs were made to be installed with the grain or machine direction of adjacent tiles in opposite direction. Installed this way a uniform design and pattern over the whole floor is obtained. To help you, arrows were printed on back of tile all in machine direction. Tiles should be laid with arrows in adjacent tiles pointing at right angles to each other.

A natural handcrafted look was built into all designs by making color lines and wood grains not all mechanically uniform or straight. Lines in adjacent tiles will not match precisely. Rotating adjacent tiles 180° sometimes improves the fit.

CAUTION: READ BEFORE USING TILES. THE RELEASE PAPER HAS A SLIPPERY SURFACE. DO NOT STAND ON PIECES OF THE RELEASE PAPER OR ON ANY TILES UNTIL THE RELEASE PAPER HAS BEEN REMOVED. IT IS RECOMMENDED THAT THE RELEASE PAPER BE PLACED IN THE TILE CARTON OR IN A SUITABLE RECEPTACLE IMMEDIATELY UPON REMOVAL FROM THE TILE.

For best results before installing this tile, open the sub-packs and allow the tile to lie overnight outside of the carton in order for it to acclimate with temperature and humidity of your room. Room temperature should be at least 70°F. for 24 hours before and after the installation, as well as during the actual laying of the tile.

Not all machine runs of the same color are identical. BEFORE you install your tile make sure it is all the same color and shade lot.

NEW FLOOR CARE

Allow 48 hours after installation for tile to lie flat and seat itself. Then loose dirt swept or vacuumed up during that time and clean spots with damp cloth. Then wash the floor thoroughly using FLINTKOTE Floor Cleaner or another mild cleaner. Rinse. Do not flood the floor. When clean and dry apply two thin coats (allow first to dry before applying second coat) of FLINTKOTE Floor Finish or a comparable non-yellowing finish designed for vinyl asbestos floor tile. Besides adding luster, EARLY WAXING IS IMPORTANT to protect the coloring in the embossed areas and to add resistance to scuffing and stains. This is most important on dark colors, which show scuffs more readily, as do natural brick and stone. Vigorous rubbing with steel wool, harsh cleansers and abrasives can damage tile, especially the embossed coloring and dark colored surfaces. For stubborn spots, use cloth and mild household cleanser.

Do not use strong detergents, cleaners or waxes containing solvents such as gasoline, kerosene, benzine, turpentine, etc. Do not use varnish, lacquer or shellac. Use products designed for your floor.

Protect your floor with proper furniture glides, casters and rests. Resilient floor tiles are subject to indentation from sharp penetration objects or from heavy loads concentrated in limited areas.

Resilient floors should be protected at all times from the direct rays of the sun.

SUBFLOORS

Here is a general guide as to what to look for on various types of floors. Your Flintkote Flooring Dealer will be happy to answer questions on any specific problems.

OVER CONCRETE – must be dry, smooth, clean and level. Fill cracks and crevices with FLINTKOTE latex underlayment.

OVER PAINT – do not install tile over painted floors in contact with earth, like basements or ground floor in basementless homes. All radiant or other subfloors which are upstairs or over basements, if paint tightly bonded and not blistered or peeling.

OVER WOOD – must be a minimum of two feet above ground with adequate ventilation. Must be firm, smooth and without springiness. Replace badly worn boards. Renail loose boards with 1½" or longer flat head screw nails - driven flush. Single layer subfloors or double layer subfloors with top boards over 3-½" wide should be covered with at least 3/8" plywood, APA grade trademarked UNDERLAYMENT. Do not use flooring felt over plywood.

OVER OLD FLOORCOVERINGS – can use over asphalt tile, vinyl asbestos tile, old linoleum and other tiles if they are down flat and smooth with all wax or coatings removed; however, old linoleum or tiles containing asphalt or vinyl asbestos should be removed if on subfloors in contact with earth. If you are having problems with present floorcovering, do not expect to solve them by adding another layer of tile. If old floorcovering is too soft, it could cause indentation troubles. Texturing or embossing will eventually show through from pattern of the old floorcovering. Do not install over cushioned sheet flooring.

WARNING

DO NOT SAND EXISTING RESILIENT FLOORING BACKING OR LINING. THESE PRODUCTS MAY CONTAIN ASBESTOS FIBERS THAT ARE NOT READILY IDENTIFIABLE. INHALATION OF ASBESTOS DUST MAY CAUSE ASBESTOSIS OR OTHER SERIOUS BODILY HARM.

OVER OLD TERRAZZO – must be dry, smooth, clean and level. Fill holes and cracks.

FLINTKOTE FLOORING PRODUCTS, EAST RUTHERFORD, N.J. 0

95-140-02

EXHIBIT D