

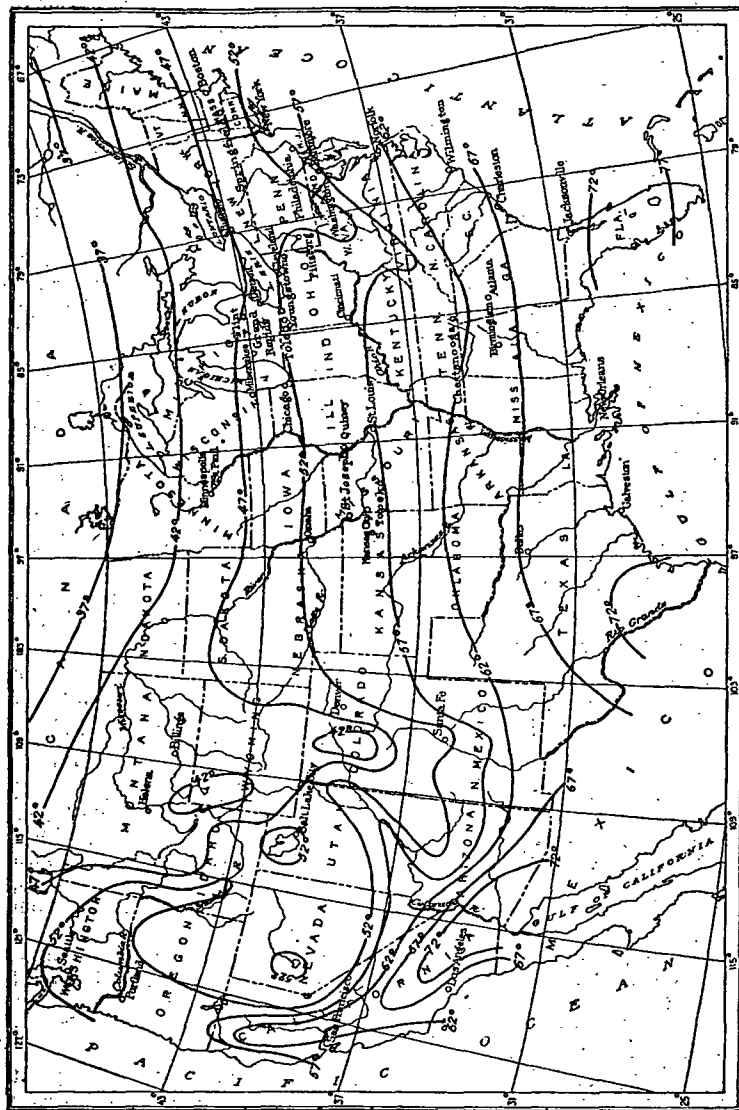


FIG. 3. APPROXIMATE WELL WATER TEMPERATURES AT DEPTHS OF 30 TO 60 FT.

introduces moistened air; and (2) direct, which sprays moisture into the room or introduces moisture by means of steam jets.

As in the cases of humidification by use of an air washer, the heat necessary for the vaporization of the moisture added to the air by direct humidification is secured either from heat stored in the spray water or by

a transformation of sensible to latent heat in the air humidified. In the latter case, the enthalpy of the air remains constant, but the dry-bulb temperature of the air is reduced.

Direct humidification is usually preferable where high relative humidities must be maintained, but where there is little cooling or ventilation required. In comfort air conditioning, where both humidification and ventilation are required, the indirect humidifier is preferable. In industrial applications, where the cooling or ventilation load is large and where very high relative humidities must be maintained, a combined system employing both direct and indirect humidifiers is sometimes used.

Spray Generation

Spray generation is obtained by (1) atomization, (2) impact, (3) hydraulic separation, and (4) mechanical separation.

Atomization involves the use of a compressed air jet to reduce the water particles to a fine spray. With the *impact* method, a jet of water under pressure impinges directly on the end of a small round wire. Where *hydraulic separation* is employed, a jet of water enters a cylindrical chamber and escapes through an axial port with a rapid rotation which causes it immediately to separate in a fine cone-shaped spray. In the *mechanical separation* process, water is thrown by centrifugal force from the surface of a rapidly revolving disc and separates into particles sufficiently small to be utilized in certain types of mechanical humidifiers.

Spray Distribution

Spray distribution is obtained by (1) air jet, (2) induction, and (3) fan propulsion.

The air jet which generates the spray in atomizers also carries the spray through a space sufficient for its distribution and evaporation, and this method of distribution is termed *air jet*. Where distribution is obtained by *induction*, the aspirating effect of an impact or centrifugal spray jet is utilized to induce a current of air to flow through a duct or casing, and this air current distributes the spray. *Fan propulsion* obviously consists of the utilization of fans to entrain and distribute the spray.

Industrial type direct humidifiers are commonly classified as (1) atomizing, (2) high-duty, (3) spray and (4) self-contained or centrifugal.

Atomizing Humidifiers. Several types of atomizing humidifiers employ nozzles placed within the room and rely upon compressed air to effect complete atomization of the water which is converted to vapor by the heat of the room air. Some of these nozzles depend upon an aspirating effect to draw the water into the nozzle and atomize it; others operate on a combined air and water pressure. It is usual for nozzles of the water pressure type to be controlled by a diaphragm valve actuated by the pressure of the atomizing air.

High-Duty Humidifiers. Water is supplied under high pressure (usually about 150 psi) through pipe lines from a centrally-located pumping unit. The spray-generating nozzle, which is of the impact type, is located in a cylindrical casing. A drainage pan provides for the collection and return of unevaporated water which flows through a return pipe to a filter tank, from which it is recirculated. A powerful air current is forced through the humidifier by means of a fan mounted above the unit.

The air enters from above, is drawn through the head, charged with moisture, and cooled. It then escapes from the opening below at a high