

cannot be removed from the work area should be covered with a 6-mil-thick polyethylene plastic sheeting that is securely taped with duct tape or plastic tape to achieve an air-tight seal around the object.

Constructing the Enclosure

When all objects have either been removed from the work area or covered with plastic, all penetrations of the floor, walls, and ceiling should be sealed with 6-mil polyethylene plastic and tape to prevent airborne asbestos from escaping into areas outside the work area of from lodging in cracks around the penetrations. Penetrations that require sealing are typically found around electrical conduits, telephone wires, and water supply and drain pipes. A single entrance to be used for access and egress to the work area should be selected, and all other doors and windows should be sealed with tape or be covered with 6-mil polyethylene plastic sheeting and securely taped. Covering windows and unnecessary doors with a layer of polyethylene before covering the walls provides a second layer of protection and saves time in installation because it reduces the number of edges that must be cut and taped. All other surfaces such as support columns, ledges, pipes, and other surfaces should also be covered with polyethylene plastic sheeting and taped before the walls themselves are completely covered with sheeting.

Next a thin layer of spray adhesive should be sprayed along the top of all walls surrounding the enclosed work area, close to the wall-ceiling interface, and a layer of polyethylene plastic sheeting should be stuck to this adhesive and taped. The entire inside surfaces of all wall areas are covered in this manner, and the sheeting over the walls is extended across the floor area until it meets in the center of the area, where it is taped to form a single layer of material encasing the entire room except for the ceiling. A final layer of plastic sheeting is then laid across the plastic-covered floor area and up the walls to a level of 2 feet or so; this layer provides a second protective layer of plastic sheeting over the floor, which can then be

removed and disposed of easily after the asbestos-containing material that has dropped to the floor has been bagged and removed.

Building Hygiene Facilities


Paragraph (j) of the final standard mandates that employers involved in asbestos removal, demolition, or renovation operations provide their employees with hygiene facilities to be used to decontaminate asbestos-exposed workers, equipment, and clothing before such employees leave the work area. These decontamination facilities consist of:

- (1) A clean change room;
- (2) A shower; and

(3) An equipment room.

The clean change room is an area in which employees remove their street clothes and don their respirators and disposable protective clothing. The clean room should have hooks on the wall or be equipped with lockers for the storage of workers' clothing and personal articles. Extra disposable coveralls and towels can also be stored in the clean change room.

The shower should be contiguous with both the clean and dirty change room (see Figure F-3) and should be used by all workers leaving the work area. The shower should also be used to clean asbestos-contaminated equipment and materials, such as the outsides of asbestos waste bags and hand tools used in the removal process.

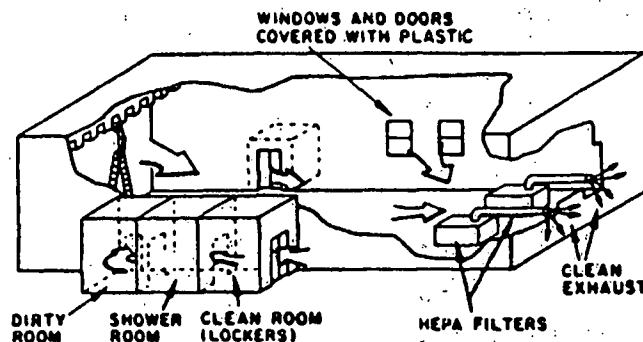

Source: EPA 1985. Asbestos Waste Management Guidance (EPA/530-SW-85-007).

Figure F-3. Cutaway View of Enclosure and Hygiene Facilities

The equipment room (also called the dirty change room) is the area where workers remove their protective coveralls and where equipment that is to be used in the work area can be stored. The equipment room should be lined with 6-mil-thick polyethylene plastic sheeting in the same way as was done in the

work area enclosure. Two layers of 6-mil polyethylene plastic sheeting that are not taped together from a double flap or barrier between the equipment room and the work area and between the shower and the clean change room (see Figure F-4).