

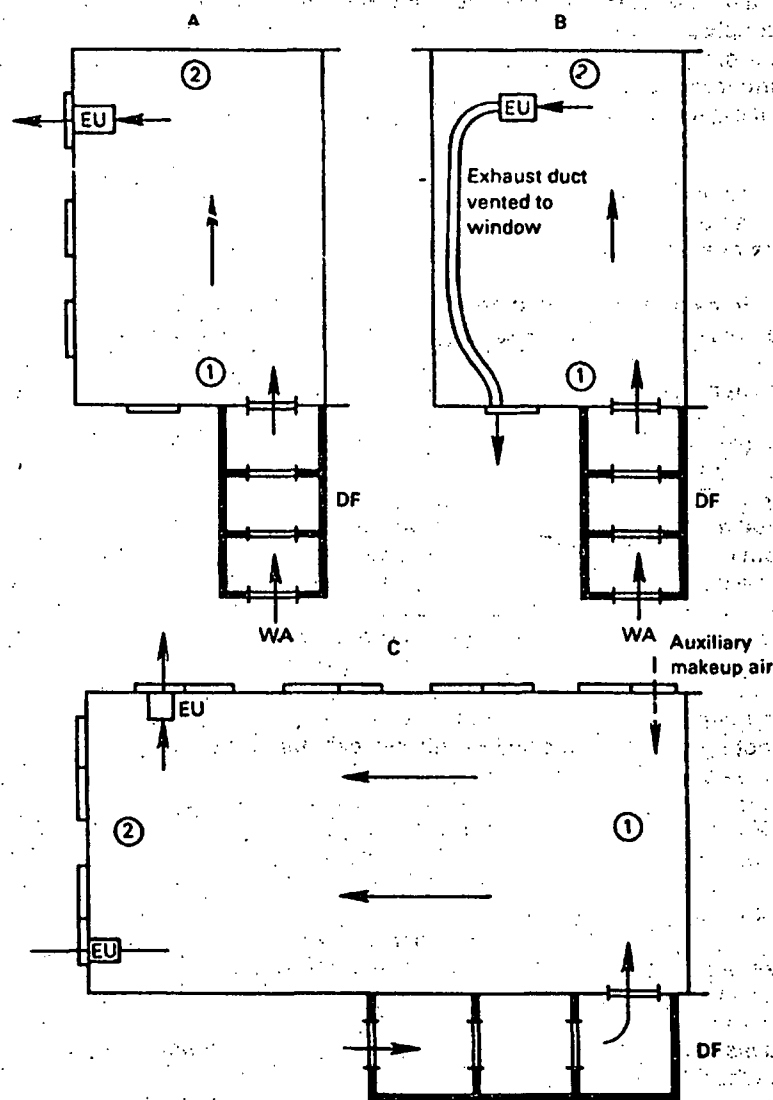


Figure F-2. Examples of negative pressure systems. DF, Decontamination Facility; EU, Exhaust Unit; WA, Worker Access; A, Single-room work area with multiple windows; B, Single-room work area with single window near entrance; C, Large single-room work area with windows and auxiliary makeup air source (dotted arrow). Arrows denote direction of air flow. Circled numbers indicate progression of removal sequence.