

With flat plate panels it is common practice to use a frame of plaster, wood, metal or composition to allow for expansion. These plates may be heated with either hot water or steam and connected as an ordinary radiator system (Figs. 4 and 5).

5. *By electric heated metal plates or panels.* These plates or panels are either placed in insulated recesses of walls or ceilings or fastened to the construction, as found desirable.

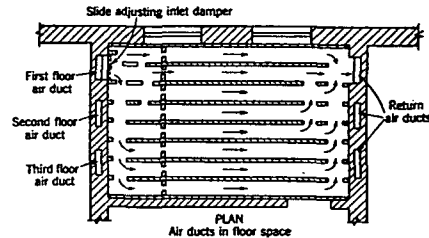


FIG. 3. DIAGRAM OF AIR DUCTS FOR FLOOR HEATING

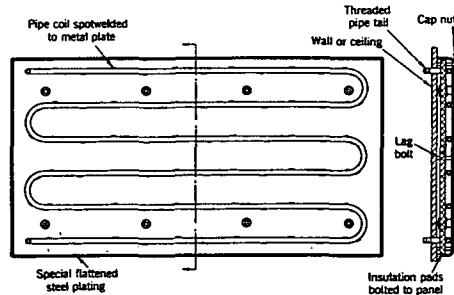


FIG. 4. PILLAR TYPE RADIANT HEAT PANEL

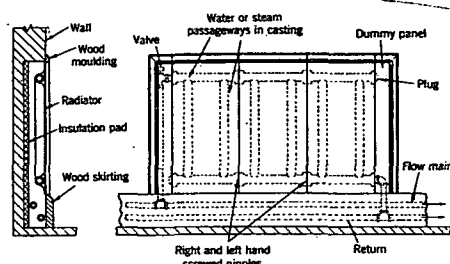


FIG. 5. FLAT TYPE PANEL INSTALLED IN WALL RECESS

They should not have a surface temperature much above 200 F; some have a much higher surface temperature but a lower temperature gives a more comfortable condition and is more efficient.

6. *By electrically heated tapestry mounted on screens and on the wall.* For this purpose the screen is woven with an electric continuous conductor. Such screens are useful to

plug in at any position for emergency local heating without taking care of a large room or office.

Note. If all of a heating panel is installed at one end of a large room there may be a marked difference between the BET on the two sides of the body. It is usually desirable, therefore, that the heat be distributed at different parts of the walls and ceilings so that no uncomfortable effect will be felt from unequal heating.

CALCULATION PRINCIPLES

The calculations for radiant heating are entirely different from those for convective heating. The purpose of the latter is to determine and compensate for the rate of heat loss from the room, when the air temperature is maintained at the desired conditions. Radiant heating, however,

TABLE 1. TOTAL RADIATION TO SURROUNDINGS AT ABSOLUTE ZERO^a

BODY OR MEAN RADIANT TEMPERATURE Deg Fahr	Radiation in Btu per square foot per hour emitted to surroundings with a temperature of absolute zero by bodies at various temperatures and with emissivity factor ϵ				BODY OR MEAN RADIANT TEMPERATURE Deg Fahr	Radiation in Btu per square foot per hour emitted to surroundings with a temperature of absolute zero by bodies at various temperatures and with emissivity factor ϵ			
	1.00	0.95	0.90	0.80		1.00	0.95	0.90	0.80
30	99.3	94.3	89.4	79.4	71	136.5	129.6	122.9	109.3
35	103.5	98.3	93.2	82.8	72	137.4	130.5	123.6	109.9
40	107.6	102.4	96.8	86.1	73	138.4	131.5	124.5	110.6
45	112.1	106.5	100.9	89.7	74	139.6	132.6	125.6	111.7
46	112.9	107.3	101.6	90.4	75	141.0	133.9	126.9	112.8
47	113.9	108.2	102.5	91.1	80	146.6	139.4	132.0	117.4
48	114.8	109.1	103.4	91.9	85	152.3	144.6	137.1	121.9
49	115.6	109.9	104.1	92.4	90	157.9	149.9	142.1	126.4
50	116.5	110.6	104.9	93.2	100	169.6	161.1	152.6	135.7
51	117.5	111.6	105.8	94.0	110	181.6	172.5	163.5	145.4
52	118.4	112.5	106.5	94.7	120	194.8	185.0	175.4	155.9
53	119.4	113.4	107.4	95.5	130	210.1	199.6	189.1	168.1
54	120.2	114.2	108.2	96.2	140	223.2	212.1	201.0	178.5
55	121.1	115.1	109.0	96.9	150	237.1	225.2	213.5	189.7
56	122.1	116.0	109.9	97.7	160	251.1	238.8	226.0	201.0
57	123.1	117.0	110.9	98.5	170	270.5	257.0	243.5	216.4
58	124.0	117.8	111.6	99.2	180	288.0	273.8	259.1	230.4
59	124.9	118.6	112.4	99.9	190	306.5	291.0	275.8	245.1
60	125.8	119.5	113.4	100.7	200	325.2	309.0	292.8	260.3
61	126.6	120.3	114.0	101.4	210	348.0	330.6	313.1	278.4
62	127.7	121.4	114.9	102.2	220	371.5	353.0	334.4	297.1
63	128.6	122.2	115.8	102.9	250	437.8	415.9	394.0	350.2
64	129.6	123.1	116.7	103.7	300	575.0	546.1	517.5	460.0
65	130.5	124.0	117.5	104.4	350	740.0	703.0	666.0	592.0
66	131.6	125.0	118.4	105.4	400	942.1	895.0	847.5	753.5
67	132.5	125.9	119.3	106.0	450	1176.0	1117.0	1059.0	941.0
68	133.5	126.8	120.1	106.8	500	1464.0	1390.0	1318.0	1171.0
69	134.5	127.8	121.1	107.6	550	1791.0	1701.0	1613.0	1434.0
70	135.5	128.8	121.9	108.4	600	2405.0	2284.0	2165.0	1925.0

^aThese factors are calculated from the formula

$$q = \epsilon \left(\frac{0.1730 \times T^4}{100,000,000} \right)$$

where

q = total radiation, Btu per square foot per hour.
 ϵ = emissivity
 T = absolute temperature, degrees Fahrenheit.