


INSULATION HYGIENE PROGRESS REPORTS

FROM THE INSULATION INDUSTRY HYGIENE RESEARCH PROGRAM


Irving J. Selikoff, M.D., Program Director

Vol. 3, No. 4

Winter 1971

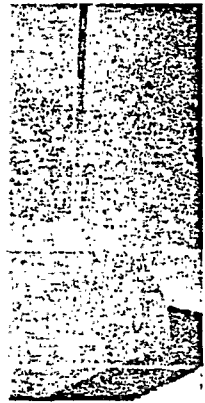

Use of an unventilated exhaust system without the back light of the dust would

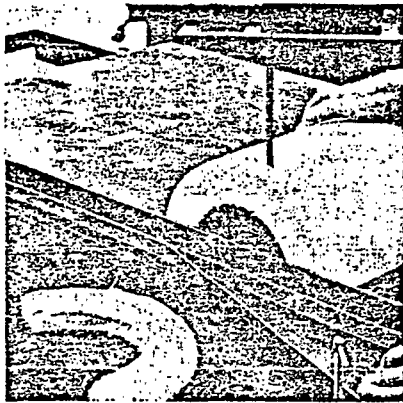

Cutting pipe with band saw equipped with high-velocity, low-volume exhaust system. Compare absence of any airborne dust with that shown in uncontrolled cutting (picture left.)

ard Procedures Guide s All Insulation Men

1970 issue of Insulation Hygiene Progress Reports is a joint effort by the Insulation Industry Research Program, the U.S. Navy, the Department of Labor, and insulation manufacturers and contractors to control asbestos dust exposures.

In that effort, Duncan A. Holaday and William B. Selikoff of the IHRP prepared a procedures guide for shipyard insulation application and removal. Because of its relevance to ship work, portions of it are given in this issue of Insulation Hygiene Progress Reports.

The report was presented by the authors at the International Symposium on Safety and Health in Shipbuilding and Ship Repair, at Helsinki, Finland, on August 30, 1971.

A. Holaday
B. Reitze

in all insulation
maintain a clean

concentrations of
dust counts") in the
used to identify
dust and to point
control methods.
for control of ex-
posure must be placed on
of operating rules.

Control of Asbestos-Containing Dusts by Use of Substitute Materials

Substitution of materials containing reduced proportions of asbestos or no asbestos at all, is becoming more common in ship construction. Before a material is substituted for asbestos, however, two questions must be carefully considered:

- Has the substitute material been tested? If not, it may turn out to be of the same or greater hazard than the material of known hazard. This sort of thing has hap-

Here Are Some of Many Ways to Reduce Dust

pened in other environmental situations.

- Does the new material meet engineering specifications and will it perform adequately under conditions of use?

Materials containing reduced amounts of asbestos have been used in the following applications:

a. Blanket and pad filling

Substitution of the proper types of other pad fillers not only reduces asbestos dust during fabrication and installation but also tends to lessen the problems during subsequent "rip-out". Additionally, asbestos cloth which has been treated with a dust suppressant is available and its use should also be encouraged. There are reports that much less dust will be produced.

b. Pipe covering and block

Serious consideration should be given to those products containing lower amounts of asbestos fiber. Several British firms have introduced asbestos-free calcium silicate block and pipe covering. To date, however, this material has not been adequately evaluated in the United States to determine how it will perform in use.

Reduction of Dust by Changes in Work Methods

a. Mixing Asbestos Mortar

This operation has usually been done at the job site. While the time spent in mixing is quite short, considerable dust is produced. A tested method of control is to mix the mortar dockside under controlled conditions and package the mixed mortar in several containers for transportation to the job site.

Mortar is also available packaged
(Continued on second page)

t Puget yard

exhaust-ventilated gang

pipe assemblies in

assemblies are quite and are troublesome to place. A satisfactory way of doing these jobs, particularly during ship repair, employed by the Puget Sound Naval Shipyard, is to remove the assembly in conveniently sized sections and transport them to the job site. Here the old insulation is removed, any necessary repairs to the pipes performed, and the assembled section re-

top

is dust dispersion. re- it is much more con- crete-lag the section in the when it is in place. Any insulation which is removed during transport and repaired after the second place.

ing at job sites

cutting at job sites is e. However, dispersion of these operations can be reduced. A portable down-draft table is used by the Puget Sound Naval Shipyard. This table is set up so that it can be used as a companionway and conveniently to the work. Industrial vacuum cleaner with exhaust. Scrap is placed in a plastic bag and a


ed on third page)



at Puget Sound Naval Shipyard, during bend sections. In the fabrication shop, the material is placed in plastic bags and then labelled with identification.

6113
23829

6113
23830

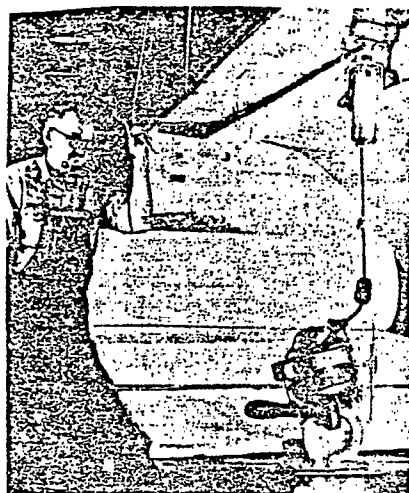

Dampening fibrous glass blanket filler before cutting. Note lateral draft hood in which fabrication is done.

(Continued from second page)

dropcloth is placed on the deck under the equipment.

f. Fabrication of Pads and Blankets

Pads for valves and machinery should be fabricated in the shop whenever possible. Amosite has been largely replaced by fibrous glass filling with covers of an asbestos cloth which has been treated with dust suppressants. As an effective means for suppressing dust dispersion and collection, the fibrous glass blanket is unrolled, dampened and rerolled. This procedure insures that all the blanket will be dampened. The blanket and asbestos cloth shapes are cut in the lateral draft booth.

g. Housekeeping and Clean-up

Essential parts of a dust control program are housekeeping and clean-up procedures. Meticulous attention must be given to restricting the spread of dust and larger wastes. Use of a dropcloth under a work area vividly illustrates how much waste would be distributed over the general area or to lower decks if one were not used.

Areas should be cleaned up at the lunch break and the end of each shift, using an industrial vacuum cleaner to collect dust and small scrap.

In all possible instances, workmen should clean up their own areas. Where work rules prohibit this, the clean-up crew should be under the direction and supervision of the insulation foreman to insure that proper attention is given to this important subject.

Reduction of Dusts by Use of Local Exhaust Ventilation

a. Ventilation of Large Power Tools—Band Saws

Extensive use of band saws both in dockside fabrication shops and, on board larger ships such as aircraft carriers make emissions from band saws a major source of asbestos dust. Control devices for such saws have been known for years and are relatively simple. Conventional low-velocity, high-volume systems, using a negative pressure baghouse for air cleaning, are practical in a fixed installation fabrication shop.

Because some degree of portability is desirable in a temporary shipboard fabrication area, a high-velocity, low-volume dust collection unit is desirable for



Portable down-draft table developed by Puget Sound Naval Shipyard for use shipboard. Lightweight industrial vacuum cleaner is used as the air mover. Note plastic bag for scrap and dropcloth on deck.

such use; it may also be suitable for fixed installations. The air mover is an industrial vacuum cleaner which pulls about 50 cubic feet of air per minute past the saw blade at velocity of more than 10,000 feet per minute. This system is a very efficient dust collector. Units such as this can also be designed to control dusts produced by table saws and gang saws.

b. Ventilation of Hand Power Tools

High-velocity, low-volume collection systems control dust emissions from most small power tools adequately. Saber saws for cutting pipe covering and rotary

saws for cutting asbestos cement board are well controlled with these systems.

Control of Number of Workmen Exposed

a. Scheduling of Insulation Work


Standard industrial hygiene practices call for insulating operations which contaminate the atmosphere with toxic materials. Areas where insulation work is being done under conditions in which dust might be created should be isolated by non-flammable curtains or other means. Whenever possible, work should be scheduled to minimize the numbers of other tradesmen in the area. Ship construction operations are more readily scheduled than are ship repair or ship-breaking jobs. However, every effort should be made to keep the number of men exposed at a minimum. In particular, rip-out of old insulation should always be isolated and, if necessary, performed on an off-shift. Trained workmen supplied with proper protective equipment should always be used for rip-out work and it should be scheduled for rapid completion.

Personal Protective Equipment

In addition to dust suppression and dust control procedures, personal protective equipment is often necessary to reduce exposure and limit the spread of contamination. The equipment described below is used in control programs.

a. Protective Clothing

Protective clothing is required to keep contamination confined to the work areas. One method is to issue disposable coveralls which can be removed when leaving the

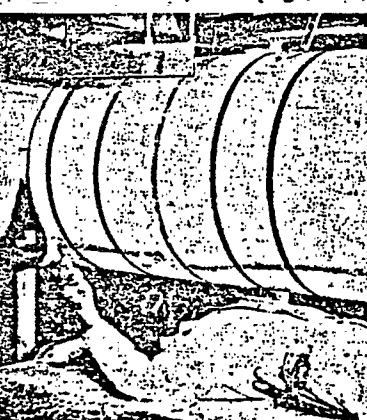

Use of dropcloth to contain wastes and facilitate clean-up.



A small industrial vacuum cleaner being used by a Local 62 asbestos worker for clean-up.

(Continued from third page)

work area or some time prior to entering the locker room and placed in plastic bags for disposal.

Resin Impregnated Paper

A satisfactory type of protective clothing consists of resin impregnated paper coveralls. These are inexpensive and readily disposable. They prevent spreading contamination to laundries and eliminate pilferage. They are worn for one shift, then removed and placed in plastic bags for disposal with other asbestos-containing wastes.

b. Respiratory Protective Equipment

Occasionally some operations generate so much dust that it is virtually impossible to maintain satisfactory atmospheric concentrations of asbestos fibers and respiratory protection must be provided to the workers. A variety of respiratory protective equipment is available from which devices suitable for various situations can be selected. American National Standard Z88.3-1971, *Safety Guide for Respiratory Protection Against Asbestos-Containing Dusts* (obtainable from American National Standards Institute, 1430 Broadway, New York, N.Y. 10018) should be referred to for detailed information.

Invisible Dust

It is emphasized that unsatisfactory amounts of respirable dust can be present in the air even though conditions are not visibly dusty.

1. Air-supplied Respirators

Extremely dusty jobs, such as rip-out of old insulation where dust concentrations are very high, require use of air-supplied respirators which will deliver clean, dust-free air to a facepiece or hood. Two general types are available: air-line and self-



Saber saw equipped with high-velocity, low-volume exhaust system.

powered.

a) Air-line respirators in which air is supplied to a hood, helmet or facepiece give the greatest degree of protection. Air is fed to the facepiece from a compressed air-line. The air source must be located in an uncontaminated area and if the source is not specifically designed for breathing purposes, a temperature sensing alarm must be installed on the compressor or a carbon monoxide monitoring device must be installed in the air-line.

Disposable Hood

Anti-freeze compounds should not be used in the compressor system; water vapor must be removed by dessicant and oil mists removed by a filter.

A plastic, disposable hood has been developed by the Puget Sound Naval Shipyard for situations where a very high degree of protection is required. This hood and other similar ones are available commercially. The air-line should be fastened to the hood with a quick-disconnect fitting.

Self-powered Respirators

b) Air-line respirators connected to a compressed air supply limit movement, and this limitation can be troublesome. Self-powered respirators do not impose such limitations, but they do add to the equipment the workman must carry and they also require careful maintenance.

2. Particulate-filtering Respirators

There are several types of particulate-filtering respirators. Those with a half-mask facepiece are considered most suitable for use by insulators. Only those approved for protection against asbestos dust by the U. S. Bureau of Mines should be used. These devices are recommended for use in situations where the atmospheric concentration of asbestos fibers is at relatively low levels. All the recommendations for res-

pirator-fitting, training of workmen and maintenance, detailed in Z88.3-1971 should be followed.

a) Reusable particulate-filtering respirators

A variety of reusable particulate-filtering respirators are available. To insure proper fitting, several different makes should be available from which the workman can select one. *No one model respirator facepiece will fit all faces.* Routine maintenance is absolutely necessary to replace clogged filters and leaking inhalation or exhalation valves. *Unmaintained respirators produce a false sense of security.*

Maintenance Troublesome

b) Disposable particulate-filtering respirators

Operation of an adequate respirator maintenance program can be troublesome and, if only a few men are involved, impractical. Disposable respirators are available which are designed to be worn for no longer than one shift and then discarded.

Education and Training

No dust control program can be effective unless workmen and supervisors understand the hazards associated with the jobs, the sources of the hazards and the reasons for following recommended procedures carefully. Understanding is only obtained by education of personnel and training in correct operating procedures. For an education and training program to be successful, both management and labor must be concerned and participate. As with all safety programs, it is essential that first-line supervisors be interested in and cooperate in the work.

The harmful effects of neglect of procedures for controlling asbestos dust are not apparent for many years. Therefore, it is more difficult to convince workmen and supervisors of the necessity of following rules for working with insulating materials than if more obvious physical hazards were involved.

Education in hazards associated with use of insulating materials and instruction in correct work practices should be included in apprentice training programs.

PHOTO CREDITS: Pg. 1, I.I.H.R.P.; pg. 2, Ryder Industries and Puget Sound Naval Shipyards (P.S.N.S.); p. 3, P.S.N.S.; pg. 4, I.I.H.R.P. and P.S.N.S.