


SECTION VI A-1.10

APPLICATION
FINISHES
Pipe and Fittings

FINISH I-I.D.
8 Oz Canvas

FIG. 12

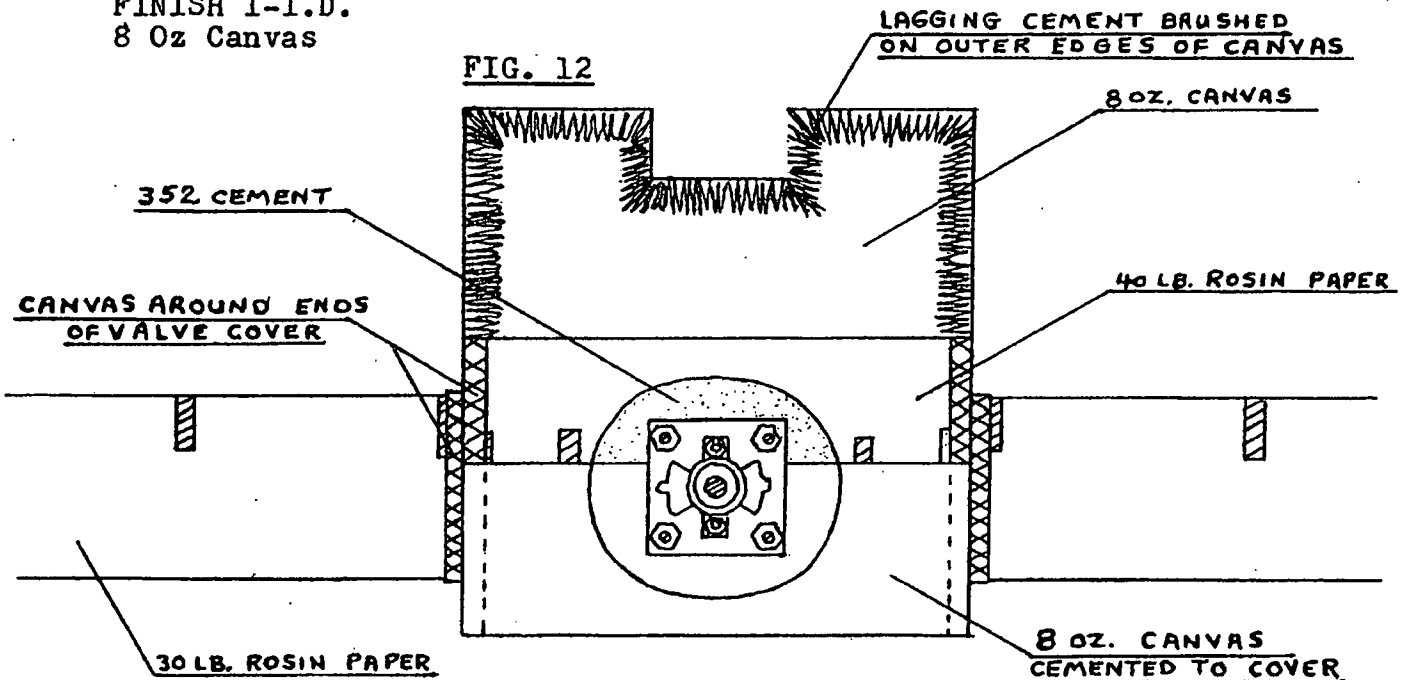

- 5.6 If the fitting cover has a trowel coat of 352 cement, the contact surface of the canvas shall be completely brushed with, or dipped in, lagging cement.
- 5.7 The canvas shall be applied to the body of the fitting cover prior to that on bonnet cover, or the like. It shall lap onto the bonnet cover approximately 1 inch. See figure 13 A.
- 5.8 One edge of the canvas, around the bonnet cover, shall be cut flush with the end of the cover, the other edge shall be cut to follow the joint line between the body and bonnet cover. See figure 13 B.

FIG. 13A

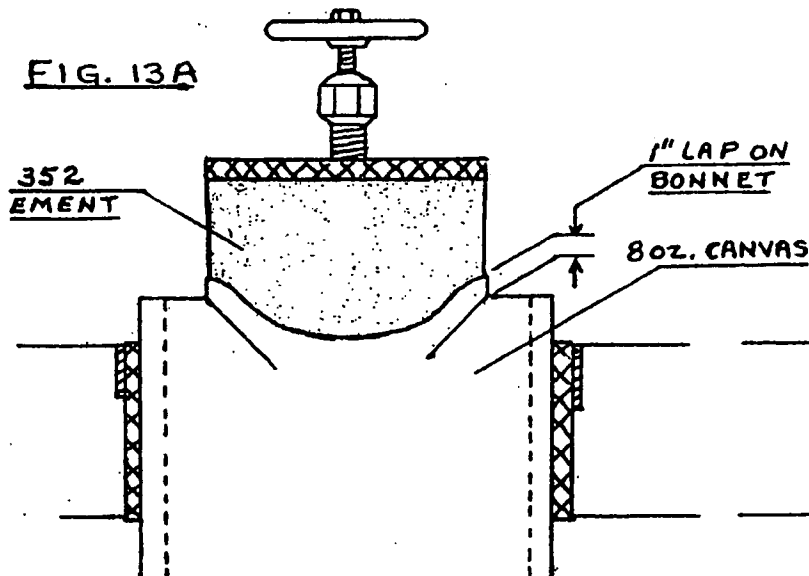


FIG. 13B

