

NOTE

This instruction booklet is designed for the average homeowner, who is involved in a home improvement project and needs simple, easy to follow instructions on how to texture walls and ceilings.

Do-It-Yourself



WALL & CEILING TEXTURING

Georgia-Pacific

GYP SUM DIVISION



PLAINTIFF'S EXHIBIT

GP-559

SGP 0002295

FOLLOW THESE EASY DO-IT-YOURSELF ST

PLANNING

Select the type of surface finish you wish on walls and/or ceilings. Using the chart below, note the G-P product used and major piece of equipment required.



**Pick your
texture
finish**



ORANGE PEEL

Product: Denswall™
Wall Texture

SWIRL

Product: Denswall™
Wall Texture

ESTIMATING MATERIALS- Walls or Ceilings

George-Pacific


G-P PRODUCT

AREA COVERAGE*



Denswall™ Wall Texture
(25 lb. Bag)

1000 sq. ft. spray
400 sq. ft. roller
200 sq. ft. trowel

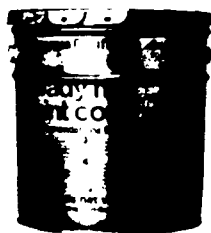

Ready Mix™
Joint Compound
(5 Gal.)
(Used also
as a joint
compound)

200-300 sq. ft.
Roller, Trowel
Brush, Sponge



Polystyrene
(32 lb. Bag)

300-400 sq. ft.
Spray

*Depends upon texture
appearance desired. Coverage
can vary considerably.


SGP 0002296

EPS FOR PROFESSIONAL-LOOKING RESULTS



STIPPLE

Product: Denswall™
Wall Texture

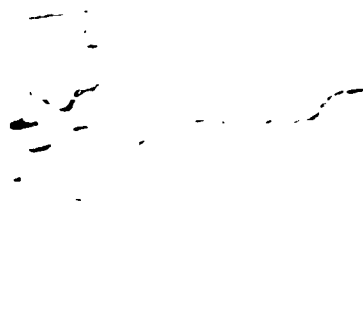

BROCADE

Product: Denswall™
Wall Texture
or Ready Mix



ROUGH


Product: Polystyrene

TOOLS REQUIRED

ORANGE PEEL



*Spray gun,
hopper,
compressor

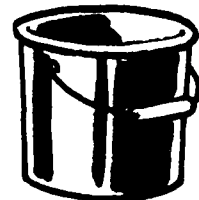

5 gal.
can

SWIRL




Stiff
brush,



bucket

STIPPLE

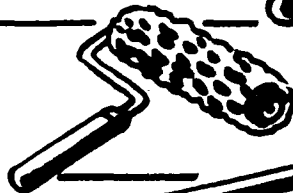


Stipple roller,
handle extension



pan

BROCADE

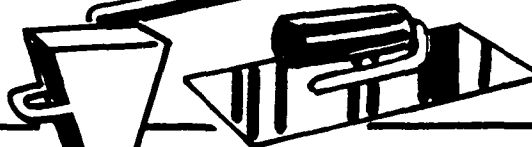

10" hand
trowel,




4"
putty
knife

ROUGH



*Spray gun,
hopper, compressor

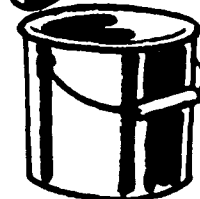

5 gal.
can

*Special spray gun/hopper and compressor units are available through many rental equipment firms.
Follow manufacturer's instructions for operation of equipment.

OVER →

SGP 0002297

CEILING PREPARATION

Gypsum board joints should be taped and finished off smooth. Cracks and holes in existing walls and ceilings should be filled and finished smooth. New or old construction should be clean and free of dirt. The surface should be painted with one coat of white latex primer. This provides uniform adhering qualities over the entire wall or ceiling

surface. Remember the rougher the textured finish desired, the more hiding qualities. Care must be taken however, to finish off surface defects properly. Protect woodwork and trim during application and remove all drops and splatters before they harden.

APPLICATION

ORANGE PEEL-

G-P Denswall™ Wall Texture

(See instructions below)

ROUGH-

G-P Polystyrene

Special spray equipment available at many Rental Equipment Dealers is used here. Both Polystyrene and Denswall™ Texture should be allowed to soak before spray application. Bag directions give correct mixing instructions with water.

The compressor unit should be adjusted to 20-30 psi for Polystyrene thus reducing the amount of texture bounce-off. The pressure may be varied for Denswall Wall Texture to get different effects. Higher pressure results in finer sprays.

Experiment with a piece of scrap gypsum board to get the desired effect. A two-coat application at right angles to each other is best for good coverage.

Note:

- Unless you have used paint spray equipment before, you may want to choose another texture style or contract with a professional applicator.
- Polystyrene ceiling texture does not produce a washable surface. Use Denswall Wall Texture painted over with a good gloss or semi-gloss paint.
- Avoid using Polystyrene ceiling texture in high moisture areas such as bathrooms.

SWIRL-

After following mixing instructions on G-P Denswall Wall Texture, simply spread on a uniform coat of texturing and create! Professionals often use sponges to obtain interesting texture effects. Spend some time experimenting—it can really be fun!

STIPPLE-

Denswall Wall Texture must be thinned down to a 'creamy' consistency. Spread on your walls or ceiling similar to the technique you would use in painting with roller paint equipment.

BROCADE-

Ready-Mix™ joint compound is used here to create fascinating designs for ceiling and walls. Dab on large quantities of Ready-Mix™ compound and smooth down peaks. We recommend working an area about 3 sq. ft. at a time, then blending as you progress along the wall or ceiling surface. Start in a corner and work across and down the length of the room.



CLEAN UP

The key to good clean up is starting before it dries. Water and elbow grease are usually sufficient to finish the job.

Georgia-Pacific



GYPSUM DIVISION
900 S W FIFTH AVENUE
PORTLAND OREGON 97204