

Georgia-Pacific

intracompany memo

to * See Below

location

from Bob Morse

location Portland

subject New Joint Systems Brochure

date September 2, 1977

Attached is the new Joint Systems Brochure. The piece covers our entire line of joint compounds and textures in detail. Additional copies of this piece are available by completing this form below or using the standard Advertising/Sales Promotion order form.

R. E. 

REM:jk
Attachment

* Messrs. G. S. Nelson
K. E. Powell
G. F. Baitinger
E. G. Seiler
O. E. Burch
T. R. Godfrey
D. C. Corkill
C. W. Lehnert
Branch Managers
Regional Managers
Gypsum Regional Managers
Gypsum Plant Managers

To: Bob Morse Advertising Dept.

Please send me _____ additional copies of the new G-P Joint Systems brochure.

Branch _____ Name _____

WK GP 5091




File 01321

Georgia-Pacific



joint systems
and specialty products
for gypsumboard

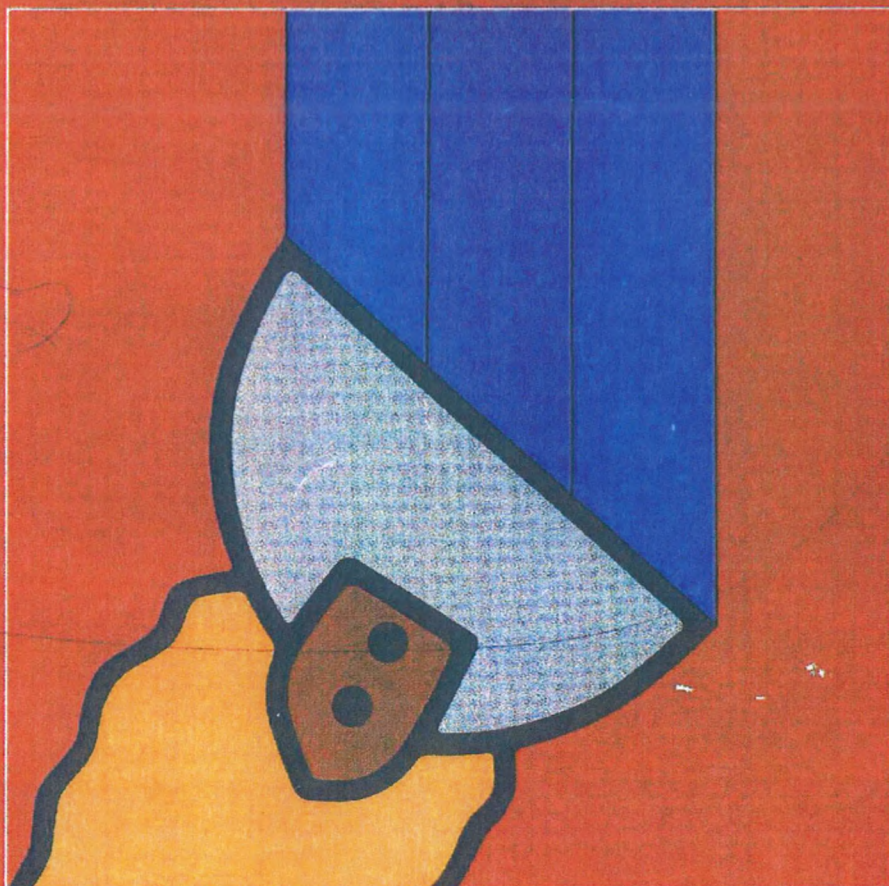

joint systems and specialty products

Why the name Georgia-Pacific makes such a difference.

The critical point in applying gypsumboard comes when it is time to reinforce and conceal the joints. A smooth monolithic surface is required, one that will accept various types of decoration. Georgia-Pacific produces a complete line of Joint System Products that includes the latest pre-mixed compounds along with the more conventional powders suitable for either hand tools or mechanical application. All G-P products conform to ASTM Specification no. C 475 and federal specification no. SS-J-570a.

There are several distinct advantages to Georgia-Pacific Joint System Products, including:

mixing stability. A wet mix consistency that remains stable, means you avoid those irritating adjustments before use.

plasticity. Joint System Products under the name Georgia-Pacific have exceptionally smooth application properties because of their plasticity. This plasticity enables far better control during the application and provides better shear and feather qualities.

bond durability. Georgia-Pacific products develop a strength and water resistance which produces an excellent bond and joints as strong as the board itself.

less shrinkage. By exhibiting a minimum of shrinkage, G-P product assure excellent job results.

high quality. Georgia-Pacific quality standards and controls are some of the most rigid and best known in the industry.

There are some natural **precautions** that should be taken with any joint compound or adhesive:

1. All powder formulas should be protected against moisture;
2. Each coat must be thoroughly dry before the succeeding coat or final decoration is applied;
3. Only clean mixing water should be used. Both water and powder should be at 55°-80° F.
4. One Georgia-Pacific product should not be mixed with another Georgia-Pacific product or with another manufacturer's product.

5. After the joint treatment is thoroughly dry, all surfaces should be sealed or primed with a vinyl or oil base primer/sealer. This imparts a uniform texture and suction over the entire wall or ceiling surfaces. When the primer/sealer has dried, apply the final decoration per the manufacturer's recommendations.

6. Special Joint Finishing Recommendation for Wintertime Conditions.

Cold weather, cold water, cold joint compounds and extremes of temperature due to efforts to provide heat are conditions that deserve special attention. During the application of the joint compounds, the bond, shrinkage and working properties are all adversely affected when they are used at temperatures significantly lower than 55°F. In order to minimize this problem, our products should be mixed with water that is 55°F or warmer, products should be stored in areas that are heated and the structures to be taped and finished should be heated to at least 55°F 24 hours in advance and subsequently until drying is complete.

As the building is heated after the gypsum board and joint compound are applied, there may be shrinkage of the framing members or movement due to warping of the framing or settling of the building. This can cause joint beading or nail popping. Once these conditions appear, it is advisable to postpone repairs until one complete heating season has passed.

There are some procedures and products that can help to minimize problems encountered during adverse weather, particularly in the winter. We recommend:

1. Round edge board pre-filled with Speed Set adhesive or joint compound prior to the taping of the joints. This system will reduce the incidence of joint beading.
2. Speed Set joint compound for the first coat on corner beads. This will prevent excessive shrinkage and provide a more secure bond at low temperatures. Under no conditions should topping compounds be used for the first coat over corner bead.
3. Speed Set joint compound for the embedding of the tape and the first coat over nail-heads. Less shrinkage and better bonds at low temperatures will be obtained.



color coded packaging

For ease of reference and to make certain that the right product is always used for the right job, Georgia-Pacific has color coded all its Joint System Products by their base properties. All Casein based products are packaged in natural kraft bags. Vinyl based products are available in yellow bags. The texturing products and the consumer line are all in white bags. A further differentiation is made with the lettering color, as the chart below indicates:

Note: Check with the G-P gypsum sales manager regarding the products available in your area.

bedding

coverage: Approximately 15 to 20 lbs. per 1000 sq. ft. of gypsum-board used in conjunction with 40 to 45 lbs. of G-P Topping.

topping

coverage: Approximately 40 to 45 lbs. per 1000 sq. ft. of gypsum-board used in conjunction with 15 to 20 lbs. of G-P Bedding.

triple duty

coverage: Approximately 50 to 60 lbs. per 1000 sq. ft. of gypsum-board.

all purpose

coverage: Approximately 50 to 60 lbs. per 1000 sq. ft. of gypsum-board.

speed set

coverage: Approximately 50 to 60 lbs. per 1000 sq. ft. of gypsum-board.

wall texture

coverage: Will cover about 1,000 sq. ft. for light spray textures or about 200 sq. ft. for heavier applications.

vermiculite

coverage: Approximately 40 lbs. per 400 sq. ft.—sprayed.

polystyrene

coverage: Approximately 32 lbs. per 400 sq. ft.—sprayed.

joint system compound

coverage: Approximately 50 to 60 lbs. per 1000 sq. ft. of gypsum-board.

ready mix

coverage: Approximately 1½-5 gallon pails per 1000 sq. ft. of gypsum board. Also 1 gallon can covers joints on approximately 150 sq. ft.

CASEIN KRAFT



VINYL YELLOW



TEXTURE WHITE




asbestos free

joint
system
compound
with 60'
roll of tape

casein base products

G-P Bedding and G-P Topping are two-bag systems of specialized joint compounds. They provide the very finest results since each product has been formulated for a highly specific use. G-P All Purpose is a one-bag system that may be used satisfactorily for a number of different applications.

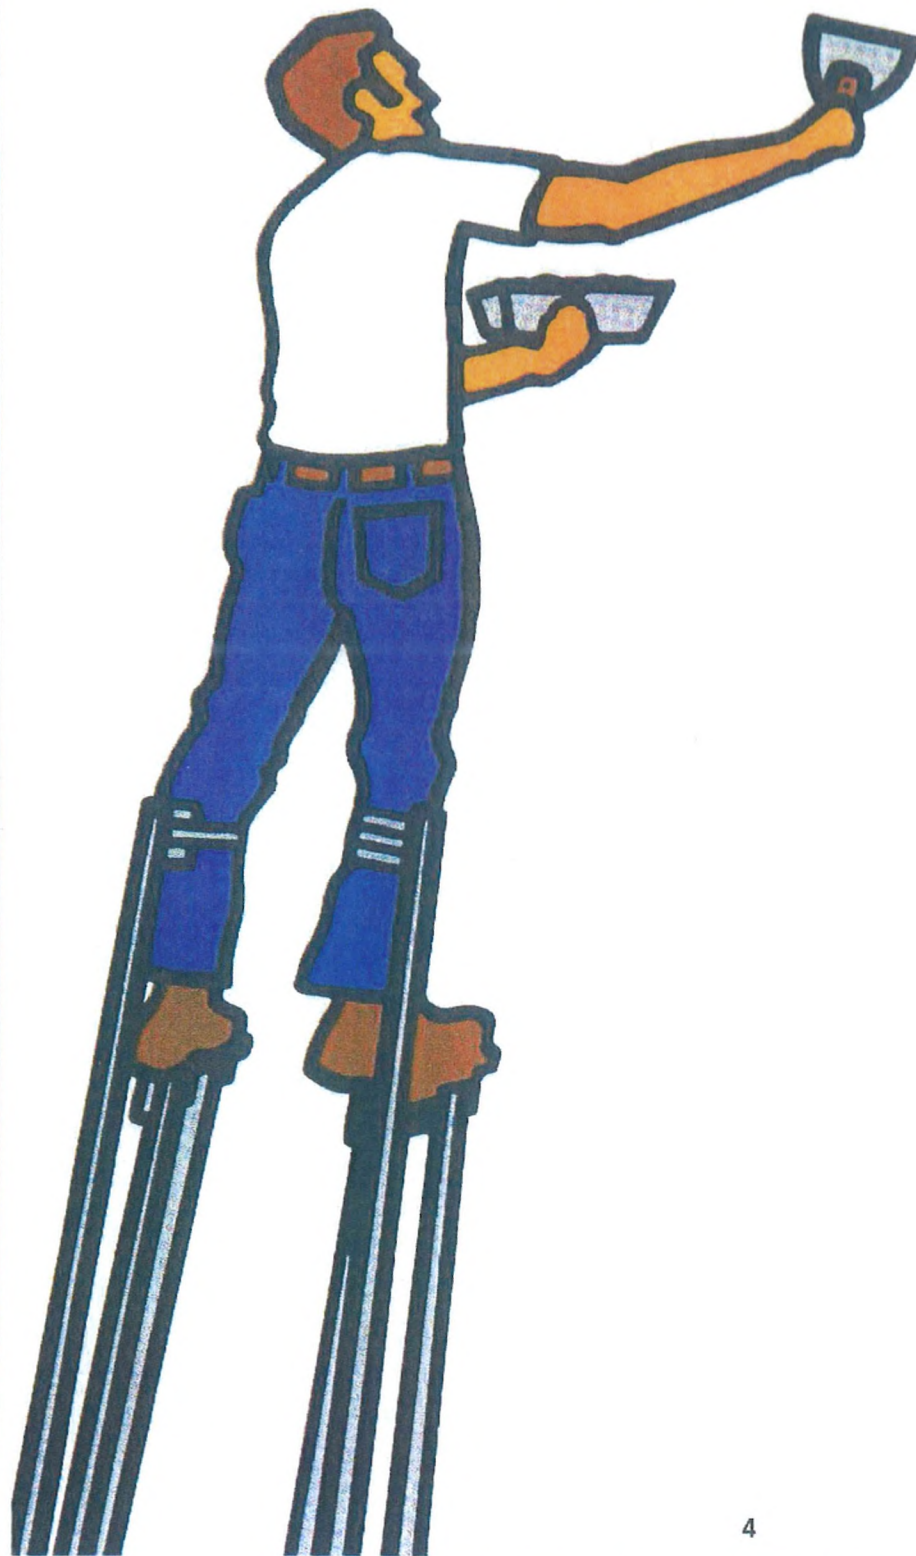

G-P bedding

This compound is designed as a fill coat and for adhesion of the gypsumboard tape to the joints, as well as for the initial application to nail heads and corner beads. Since it is used for this express purpose, G-P formulates its product to maximize the taping and adhesive qualities. G-P Bedding spreads smoothly and may be applied by either hand tools or by machine.

coverage: Approximately 15 to 20 lbs. per 1000 sq. ft. of gypsumboard used in conjunction with 40 to 45 lbs. of G-P Topping.

availability: In 25 lb. bags, only in the midwest and eastern U.S.

G-P topping

This compound is specifically designed for the second and third coats over the G-P Bedding. Since it is used only for topping, we are able to reduce the amount of adhesive and incorporate other materials which lessen shrinkage and make it much easier to work and sand. Topping should never be used to bond tape or for the first coat over a corner bead.

coverage: Approximately 40 to 45 lbs. per 1000 sq. ft. of gypsumboard used in conjunction with 15 to 20 lbs. of G-P Bedding.

availability: In 25 lb. bags, only in the mid-west and eastern U.S.

G-P all purpose

This product is formulated as a one bag system which can be used for topping, bedding and texturing, corner bead and nail spotting. G-P All Purpose is easy to mix, smooth working and exhibits relatively low shrinkage.

coverage: Approximately 50 to 60 lbs. per 1000 sq. ft. of gypsumboard.

availability: In a 25 lb. bag only in the mid-west and eastern U.S. Also available in an 18 lb. bag with a 250' roll of tape in the eastern U.S.



general mixing instructions

All casein products should be mixed with clean, drinkable water at a temperature of 60°-80° F. Use 16 pints of water per 25 lbs. of G-P All Purpose and G-P Bedding. With G-P Topping, the mixture is 16 pints water per 25 lbs.

If water and/or the contents are cold, more than the above prescribed amount of water may be needed in order for the material to reach a workable consistency. Mix the powder to a stiff consistency. After a soaking period of 20 to 30* minutes, the mix will lose its stiffness. After the soaking period, the material should be remixed without adding water until it becomes plastic and creamy. If desired, water may be added, after remixing, to obtain a thinner consistency.

*The required soaking time may double if the temperature of the mix is much lower than 55° F.

casein application

The following instructions indicate the proper steps for using G-P Casein Bedding and G-P Casein Topping in making gypsumboard joints. The same procedure applies if G-P All Purpose is used for the entire application.

Apply G-P Casein Bedding to all flat joints and embed tapes. Leave a uniform thickness of compound under the tapes and shear off excess material. At the same time, cover all nail heads and corner beads with the bedding compound. Allow the application to dry thoroughly before the next step.

When the Casein Bedding compound has thoroughly dried and whitened, cover the taped joint with G-P Casein Topping. Shear off the surplus, again leaving a uniform coverage over the tapes, and feather the edges. Repeat the spotting of all nail heads and finishing of the corner beads for each subsequent application, or as many times as necessary.

The bedding under the tapes and the first coat of topping over the tapes must be *thoroughly dry* before applying the next coat.

Cover the joints again with the topping compound and shear off the excess as before, leaving a smooth, well feathered joint. Allow the joints to dry before proceeding further.

For best results, cover the joint a third time with G-P Casein Topping.

A prime coat should be used over the entire area before the final decoration.


To texture finished gypsumboard surface, G-P Casein All Purpose may be used. For best results, apply a vinyl primer to the entire area before texturing. The texture may be applied with a roller, sponge, brush or other suitable implement, depending on the type of configuration desired. For heavy textures, use about 20 pints of water and for light textures use about 22 pints per 25 lbs. Protect woodwork and trim during application and remove all drops and splatters before they harden.

asbestos free vinyl base products

For those who require the very finest line of Joint Treatment compounds, G-P offers its vinyl based Bedding, Topping, All Purpose, Triple Duty, and Speed Set. These compounds are formulations incorporating chemicals which produce a variety of superior performance features. Their bright sun-yellow bags make them easily identifiable.

advantages:

1. They retain the mixed consistency for extended periods of time.
2. Mixed compound will not spoil if left in tightly closed container for extended periods (30-60 days).
3. Shrinkage and cracking has been reduced to a minimum.
4. Consistency is not affected by cold water and cold compound as much as casein products.

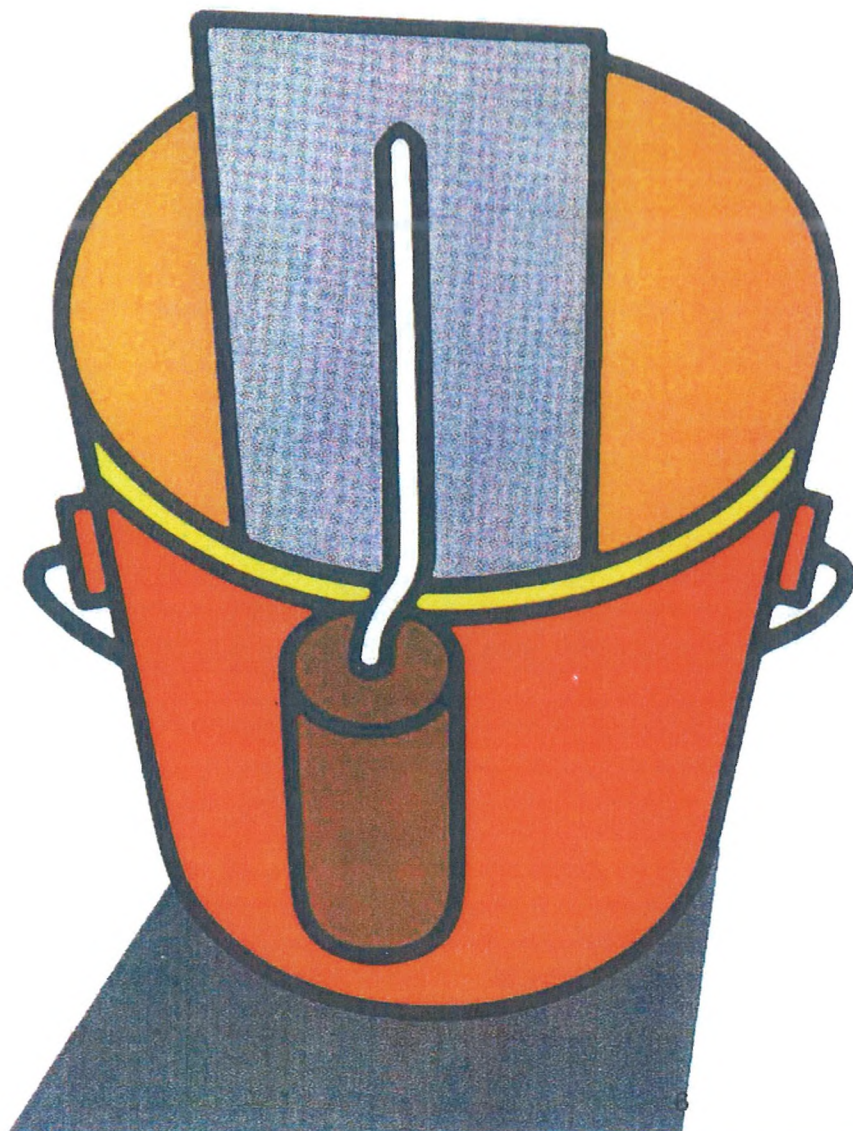

G-P vinyl bedding

This product is formulated primarily for embedding the gypsumboard tape. It may also be used to coat metal trim, fasteners and corner beads. G-P Vinyl Bedding spreads smoothly, has superior bonding qualities and maximum resistance to edge cracking.

coverage: Approximately 15 to 20 lbs. per 1000 sq. ft. of gypsumboard used in conjunction with 40 to 45 lbs. of G-P Topping.

availability: In 25 lb. bags throughout the U.S.

G-P vinyl topping

This product is specially formulated to give superior finishing results. Used for second and third coats over the bedding coat, this product is extremely smooth working, has excellent feathering qualities, low shrinkage and is easy to sand. Topping should never be used to bond tape or for the first coat over corner bead.

coverage: Approximately 40 to 45 lbs. per 1000 sq. ft. of gypsumboard used in conjunction with 15 to 20 lbs. of G-P Bedding.


availability: In 25 lb. bags throughout the U.S.

G-P all purpose

This product is formulated as a one-bag system which can be used for bedding tape, finishing over tapes, nails, corner beads as well as texturing gypsumboard. It has very good topping and bedding characteristics along with good texturing properties. G-P All Purpose is easy to mix, smooth working and exhibits relatively low shrinkage.

coverage: Approximately 50 to 60 lbs. per 1000 sq. ft. of gypsumboard.

availability: In 25 lb. bags and an 18 lb. bag with a 250' roll of tape, throughout the U.S.

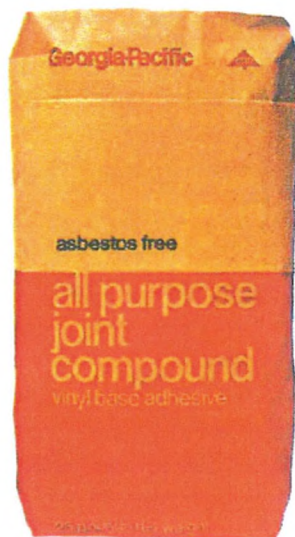

general mixing instructions

All vinyl products should be mixed with clean, drinkable water at a temperature of 60°-80° F. Use 17 pints of water per 25 lbs. of G-P All Purpose and G-P Bedding. With G-P Topping, the mixture is 16 pints water per 25 lbs.

If water and/or the bag contents are cold more than above prescribed amount of water may be needed in order for the material to reach a workable consistency. Mix the powder to a stiff consistency. After a soaking period of 10 to 15 minutes, the mix will lose its stiffness. After the soaking period, the material should be remixed without adding water until it becomes plastic-like and creamy. If desired, water may be added, after remixing, to obtain a thinner consistency.

application

The following instructions indicate the proper steps for using G-P Vinyl Bedding and G-P Vinyl Topping in making gypsumboard joints. The same procedure applies if G-P All Purpose is used for the entire application.

Apply G-P Vinyl Bedding to all flat joints and embed tapes. Leave a uniform thickness of compound under the tapes and shear off excess material. At the same time, cover all nail heads and corner beads with the bedding compound. Allow the application to dry thoroughly before the next step.

When the Vinyl Bedding compound has thoroughly dried and whitened, cover the taped joint with G-P Vinyl Topping. Shear off the surplus, again leaving a uniform coverage over the tapes and feather the edges. Repeat the spotting of the nail heads and finishing of the corner beads for each subsequent application, or as many times as necessary.

The Bedding under the tapes and the first coat of Topping over the tapes must be *thoroughly dry* before applying the next coat.

Cover the joints again with the topping compound and shear off the excess as before, leaving a smooth, well feathered joint. Allow joints to dry before proceeding further.

For best results, cover the joints a third time with G-P Vinyl Topping.

A prime coat should be used over the entire area before the final decoration.

To texture finished gypsumboard surface, G-P Vinyl All Purpose or G-P Triple Duty may be used. For best results, apply a vinyl primer to the entire area before texturing. The texture may be applied with a roller, sponge, brush or other suitable implement, depending on the type of configuration desired. For heavy textures, use about 20 pints of water and for light textures use about 22 pints per 25 lbs. Protect woodwork and trim during application and remove all drops and splatters before they harden.

asbestos free vinyl base products

G-P joint system

This G-P gypsumboard Joint Compound is formulated primarily for use in bedding and topping tape and spotting nail heads. It spreads smoothly and features superior bonding qualities and gives maximum resistance to edge cracking. In topping, it feathers well, shrinks little and sands easily.

coverage: Approximately 50 to 60 lbs. per 1000 sq. ft.

availability: In 18 lb. bag with one roll of 250' tape, only in the eastern and northeastern U. S.

caution: Do not mix G-P joint compound with any other material.

mixing instructions

G-P Joint System Compound is a vinyl adhesive base. It should be mixed with clean, drinkable water at a temperature of 55°-80° F. Use 11 pints of water to the 18 lb. contents of this bag.

If the water and/or the bag contents are cold, more than the above prescribed amount of water may be needed in order for the material to reach a workable consistency. Mix the powder to a stiff consistency. After a soaking period of 15 to 20 minutes, the mix will lose its stiffness. After the soaking period, the material should be remixed without adding water until it becomes plastic-like and creamy. If desired, water may be added, after remixing, to obtain a thinner consistency.

application instructions

Apply G-P Joint System Compound to all flat joints and embed tapes. Leave a uniform thickness of compound under the tapes and shear off excess material. At the same time, cover all nail heads and corner beads. Allow the application to dry thoroughly before the next step.

When the joint compound has thoroughly dried and whitened, cover the taped joint with the same material. Shear off the surplus, leaving a uniform coverage over the tapes and feather the edges. Repeat the spotting of the nail heads and finishing of the corner beads for each subsequent



application or as many times as necessary.

The layer of joint compound used to embed the tapes and the coat of joint compound over the tapes must be thoroughly dry before applying the next coat. Cover the joints again and shear off the excess as before, leaving a smooth, well feathered joint. Allow joints to dry before proceeding further.

For best results, cover the joints a third time with G-P Joint Compound.

A prime coat should be used over the entire area before the final decoration.

To texture the finished gypsumboard surface, G-P All Purpose or G-P Triple Duty may be used. For best results, apply a vinyl primer to the entire area before texturing. The texture may be applied with a roller, sponge, brush or other suitable implement, depending on the type of configuration desired. For heavy textures, use about 14½ pints of water and for light textures use about 16 pints per 18 lbs. Protect woodwork and trim during application and remove all drops and splatters before they harden.

G-P triple dutyTM

G-P Triple Duty gypsumboard compound is a vinyl based multi-purpose product which can be used for all coats in the reinforcing and concealing of joints in gypsumboard construction. It can be used for taping, finishing, spotting, nail heads, filling corner beads and texturing. The binder in Triple Duty gives this product a wet life of 30 to 60 days (provided the container is kept sealed tightly to prevent drying) which allows premixing in large quantities. Triple Duty has low shrinkage and can be easily sanded. After application by hand tools or machine, the compound leaves a surface ready for priming and decoration with no further preparation necessary.

coverage: Approximately 50 to 60 lbs. per 1,000 square feet (12 to 50 lbs. per 1,000 square feet when used as a texturing material).

availability: In 25 lb. or 50 lb. bags everywhere in the continental U.S.

mixing instructions

G-P Triple Duty Joint Compound is a vinyl adhesive. It should be mixed with clean, drinkable water at a temperature of 55°-80° F. in a clean mixing container. Use 16 pints of water to 25 lbs. of Triple Duty Joint Compound.

If the water and/or the bag contents are cold more than the above prescribed amount of water may be needed in order for the material to reach a workable consistency. Mix the powder to a stiff consistency. After a soaking period of 10 to 15 minutes, the mix will lose its stiffness. After the soaking period, the material should be remixed without adding water until it becomes plastic-like and creamy. If desired, more water may be added, after remixing, to obtain a thinner consistency.

If desired, this product can be kept in a wet state for up to 60 days and remain usable provided the container is sealed tightly to prevent air drying. However, if the material is kept in a wet state for prolonged periods it should be protected from freezing.



application instructions

Apply Triple Duty Joint System Compound to all flat joints and embed tapes. Leave a uniform thickness of compound under the tapes and shear off excess material. At the same time, cover all nail heads and corner beads. Allow the application to dry thoroughly before the next step.

When the joint compound has thoroughly dried and whitened, cover the taped joint with the same material. Shear off the surplus, leaving a uniform coverage over the tapes, and feather the edges. Repeat the spotting of the nail heads and finishing of the corner beads for each subsequent application or as many times as necessary.

The layer of Triple Duty used to embed the tapes and the coat of joint compound over the tapes must be thoroughly dry before applying the next coat.

Cover the joints again and shear off the excess as before, leaving a smooth, well feathered joint. Allow the joints to dry before proceeding further.

For best results, cover the joints a third time with G-P Triple Duty Joint Compound.

A prime coat should be used over the entire area before the final decoration.

To texture finished gypsumboard surface, G-P All Purpose may be used. For best results, apply a vinyl primer to the entire area before texturing. The texture may be applied with a roller, sponge, brush or other suitable implement, depending on the type of configuration desired. For heavy textures, use about 20 pints of water and for light textures use about 22 pints per 25 lbs. Protect woodwork and trim during application and remove all drops and splatters before they harden.

surface preparation for skim coating of concrete ceilings

Grind off the rough and jagged imperfections of the poured slab. The concrete must be dry, sound and free of rust, dirt, loose and scaling particles. Be sure any residue used as a parting agent to separate the forms has been cleaned away. A heavy coat of anti-rust primer should be applied by brush, roller or spray, to any exposed metal and must be allowed to dry thoroughly.

application of triple duty joint compound to concrete surfaces

Grout in all "form marks" and obvious imperfections with one application of Triple Duty Joint Compound and allow to dry thoroughly. Apply a second application at right angles to the previous coat and allow to dry thoroughly. Apply skim coat to insure a smooth uniform finish. The skim coat, when dry, may be touched up and lightly sanded to eliminate any unusually rough areas as well as any blade marks before the final decoration is applied. Any normal decoration or texture can be used over the finished surface.

availability: In 25 lb. bags throughout the U.S.

asbestos free ready mix products

G-P ready mix

This Georgia-Pacific joint compound is a prepared wet mix material to bond tape to gypsum-board for joint reinforcement, to fill and finish joints, cover and finish nail heads and corner beads and for texturing. Ready Mix has a controlled formulation and mixing qualities which result in greater coverage, uniform consistency, easier sanding and smoother workability while saving on job mixing time. Ready Mix can be stored for a maximum of 6 months and not lose any of its bonding or working properties.

coverage: Approximately 5 gallons per 700 square feet of gypsumboard.

availability: Asbestos free in 1 gallon and 5 gallon pails adjusted to either machine or hand tool consistency everywhere in the Continental United States. Four gallon boxes of asbestos free are available in the Southwest or West.

application instructions

Apply G-P Ready Mix System Compound to all flat joints and embed tapes. Leave a uniform thickness of compound under the tape and shear off excess material. At the same time, cover all nail heads and corner beads. Allow the application to dry thoroughly before the next step.

When the joint compound has thoroughly dried and whitened, cover the taped joint with the same material. Shear off the surplus, leaving a uniform coverage over the tapes and feather the edges. Repeat the spotting of the nail heads and finishing of the corner beads for each subsequent application or as many times as necessary.

The joint compound used to embed the tapes and the coat of joint compound over the tapes must be thoroughly dry before applying the next coat. Cover the joints again and shear off the excess as before, leaving a smooth, well feathered joint. Allow the joints to dry before proceeding further.

For best results, cover the joints a third time with G-P Ready Mix.

A prime coat should be used over the entire area before the final decoration.

To texture the finished gypsum-board surface, Denswall Textures or G-P All Purpose may be used. For best results, apply a vinyl primer to the entire area before texturing. The texture may be applied with a roller, sponge, brush or other suitable implement, depending on the type of configuration desired. Follow the instructions on the Denswall Texture bag for consistency. When using G-P All Purpose, heavy textures are obtained by adding about 20 pints of water and for light textures use about 22 pints per 25 lbs. Protect woodwork and trim during application and remove all drops and splatters before they harden.

use G-P casein or vinyl joint compounds for laminating

When two or more layers of gypsumboard are to be applied, the face layer or layers may be adhesively attached with fewer fasteners than normally required. For walls, the face layer may be attached with permanent perimeter fasteners only in conjunction with the adhesive. For ceilings, permanent fasteners must be applied no further apart than 24" o.c.; that is, there shall be one fastener at each edge and at least one fastener in the field of the board. Where fire ratings are involved, see fire test report for fastener positioning.



Bedding Compound, All Purpose Joint Compound, Triple Duty, or Ready Mix Joint Compound may be used as a laminating adhesive. Topping compounds shall not be used for this purpose. The adhesive may be applied by either of two methods:

1. For solid lamination, apply approximately $\frac{3}{16}$ " to $\frac{1}{4}$ " high beads 2" apart over the entire surface to be laminated.
2. For semi-solid lamination, apply 6" wide strips or bands of adhesive consisting of beads approximately $\frac{3}{8}$ " high and $1\frac{1}{2}$ " apart with the strips or bands located 16" o.c.

note: Temporary fasteners may be needed to hold the gypsumboard in place and removed after the adhesive has set. However, these do not replace whatever permanent fasteners are required.

asbestos free speed set™

G-P speed set

G-P Speed Set is a quick setting type gypsum base joint compound, containing a vinyl adhesive, to be used for applying tape, filling metal corner beads, concealing nail heads and finishing joints. This product is available with either a 60 minute or 90 minute working time. Setting time is approximately 30 minutes more than the working time. When set, this material will not shrink.

coverage: Approximately 50 to 60 lbs. per 1000 sq. ft. of gypsum-board.

availability: In 25 lb. bags, everywhere in the continental U.S.

mixing instructions

G-P Joint Speed Set System Compound should be mixed with clean, drinkable water at a temperature of 55°-80° F. In a clean mixing container, use 15 pints of water to the 25 lb. contents of this bag.

If the water and/or the bag contents are cold more than the above prescribed amount of water may be needed in order for the material to reach a workable consistency. Mix to the consistency the material will be used. Speed Set Compound should not be allowed to soak for more than a few minutes. This would reduce the working time. If desired, more water may be added at this time to obtain a thinner consistency.

application instructions

Speed Set Compound is a product which hardens prior to drying and thereby substantially eliminates further shrinkage. The setting action also provides additional bonding and is harder and stronger than conventional drying type joint compounds. It is recommended for use with round edge board for pre-filling and taping. It is also recommended for filling corner beads and



nailheads. It may also be used for taping and finishing regular tapered edge wallboard. Because of Speed Set's fast hardening, it can be used to complete more than one joint finishing operation in a day.

Apply G-P Speed Set Compound to all flat joints and embed tapes. Leave a uniform thickness of compound under the tapes and shear off excess material. At the same time, cover all nail heads and corner beads. Allow the application to harden thoroughly before the next step. No additional drying time is needed to control shrinkage.

When the Speed Set has hardened, cover the taped joint with the same material. Shear off the surplus, leaving a uniform coverage over the tapes and feather the edges. Repeat the spotting of the nail heads and finishing of the corner beads for each subsequent application or as many times as necessary.

Cover the joints again and shear off the excess as before, leaving a smooth, well feathered joint. Allow the joints to harden before proceeding further.

For best results, cover the joints a third time with G-P Speed Set.

A prime coat should be used over the entire area before the final decoration.

To texture the finished gypsum-board surface, Denswall Textures or G-P Triple Duty may be used. For best results apply a vinyl primer to the entire area before texturing. The texture may be applied with a roller, sponge, brush or other suitable implement, depending on the type of configuration desired. Follow the instructions on the Denswall Texture bag for consistency. When using G-P Triple Duty, heavy textures are obtained by adding about 20 pints of water and for light textures use about 22 pints per 25 lbs. Protect woodwork and trim during application and remove all drops and splatters before they harden.

recommendations

1. Do not mix more material than can be applied in 1 hour.
2. Do not mix with other joint compounds in either wet or dry form.
3. Clean tools and mixing equipment after each batch to prevent acceleration of setting time.
4. If stiffening occurs (except within the first 10 minutes), setting action is starting and material should be discarded.
5. Do not retemper mix—never add part of a previous batch to a fresh batch.
6. Minimum air, water mix and surface temperature of 55° must be maintained in working areas until joints are completely dry.

specialty products

asbestos free denswall[™] texturing products

wall and ceiling textures

Georgia-Pacific offers three basic textures. All are dry powder products and contain a tested balance of aggregate to produce the effect you want. The coverage, however, will vary with different types of surfaces, spray equipment, workmanship and customer requirements.

G-P wall texture


Packaged in a 25 lb. bag, this product has no aggregate added to its contents. G-P's wall texture may be applied with spray equipment, large wall brush, roller, or trowel. Wall Texture is white and matches all G-P ceiling textures. In addition, it offers good hiding properties, maximum coverage and great workability.

Aggregate can be added in the field as desired.




G-P vermiculite

Ceiling Texture is packaged in a 40 lb. bag. This product contains vermiculite aggregate and is available in fine, medium or coarse textures. Vermiculite aggregate offers an acoustical finish appearance for ceilings but does not provide acoustical sound correction. The use of this product results in a white, rugged texture with semi-rounded "hills and valleys" that help conceal surface defects while producing a beautiful, decorative textured ceiling.

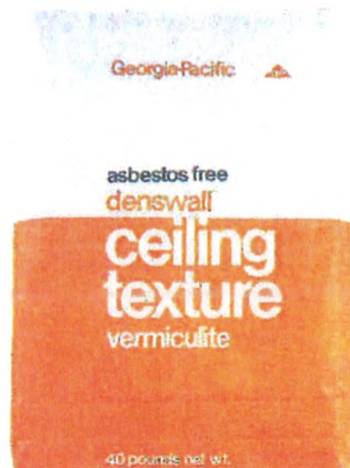

G-P polystyrene

Ceiling Texture is packaged in a 32 lb. bag. Polystyrene texture is designed for fast, economical spray application to ceilings. The resultant texture is white, with strong adhesion. Offering maximum coverage and excellent hiding qualities, polystyrene aggregate is a plastic bead which is shredded into coarse angular particles that produce an extremely rough texture. These aggregate particles will retain their size and shape during long periods of mechanical mixing. This is an ideal product for volume spray application.

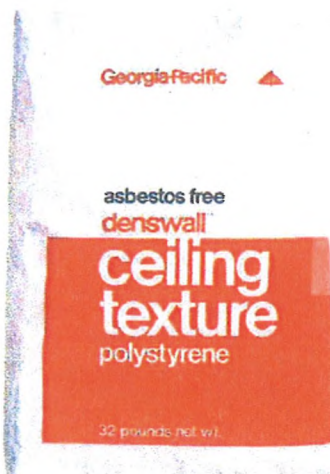

application to gypsumboard

All surfaces including joint compound applications, must be clean and dry. If surface has been previously painted, roughen any glossy paint, and clean well. Apply a white vinyl based primer or equivalent to new work prior to texturing. Protect woodwork and trim during application and remove all overspray from walls before the texture dries. For best results use the lowest air pressure that will produce a satisfactory spray pattern. If one coat will not cover due to uneven suction, or if a heavy application is desired, it may be necessary to apply a second coat. Allow the first coat to dry before applying the second coat.


application to concrete

All surfaces must be clean, dry and sound with no chalkiness or efflorescence. Prime all exposed metal with a rust inhibitive primer. New concrete should be aged at least 60 days. Irregularities and form marks must be smoothed. High spots can be ground down. Depressions and holes can be filled with G-P Joint Compound. For deep fills, G-P Speed Set Compound is recommended. Seal the entire surface with a white vinyl sealer or pigmented shellac. Spray the G-P Texture in two applications at right angles to each other, allowing the first coat to dry before applying the second.

DENS WALL™ TEXTURE	FINISH	BAG SIZE	WATER MIX*	REMIX	AVERAGE COVERAGE**	
					GYPSUMBOARD	CONCRETE
wall texture	Variable	25 lb.	Add 2 gallons	Do not exceed 1½ gallons additional	Spray 1,000 sq. ft. Trowel 200 sq. ft.	
vermiculite ceiling texture	Fine Medium Coarse	40 lb.	Add 4½ gallons	Do not exceed 1½ gallons additional	Spray 400 sq. ft.	300 sq. ft.
polystyrene ceiling texture	Coarse	32 lb.	Add 6 gallons	Do not exceed 2 gallons additional	Spray 250 sq. ft.	200 sq. ft.

*Mix until dry powder is wetted and well dispersed. Then allow to soak for 20 minutes. Remix and adjust to desired consistency.

**Depends upon texture appearance desired. Coverage can vary considerably.

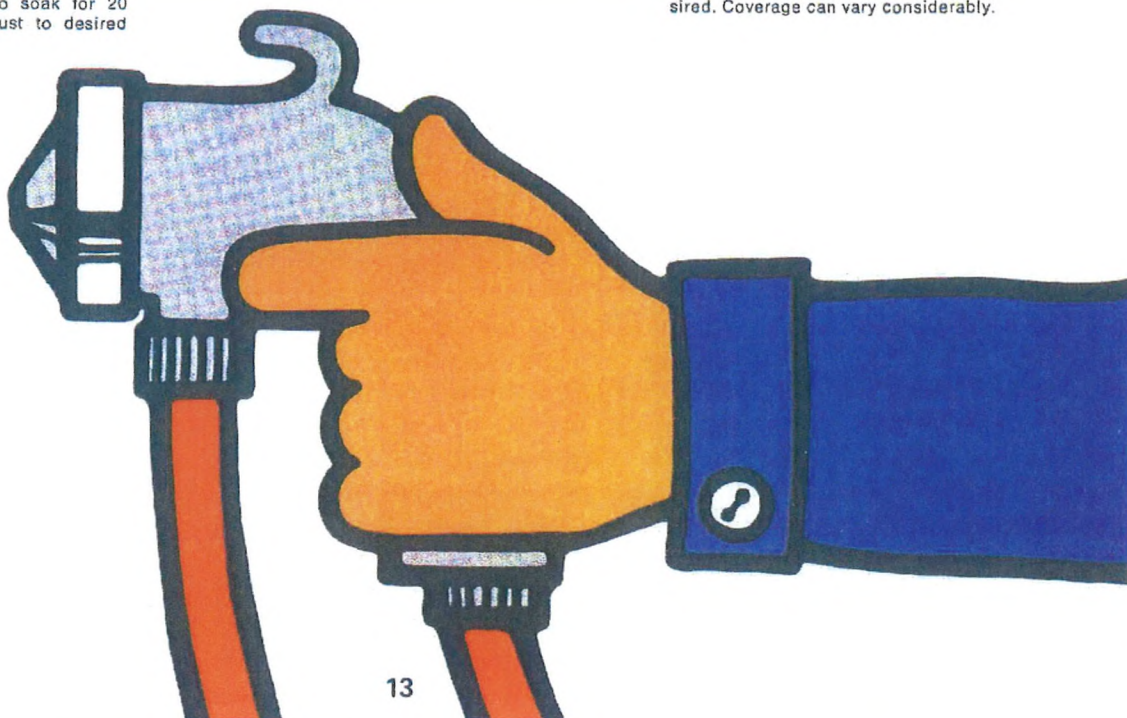

asbestos free joint/patching compound



G-P asbestos free joint system compound

Georgia-Pacific has packaged a joint compound specially designed for the do-it-yourselfer. It contains the same high quality formulation for superior performance demanded by professionals. It can be used almost immediately after mixing, and still retain the mixed consistency for extended periods of time.

For use in bedding and topping tape and spotting nail heads, joint system compound spreads smoothly, bonds tightly and resists edge cracking. It also feathers well, shrinks very little and sands easily.

availability: In either 5 lb. bags, 4 lb. bags with a sixty foot roll of tape, or 1 gal. can (Ready-Mix, no mixing required) everywhere in the continental U.S.

mixing: Joint system compound should be mixed in a clean metal container (not aluminum) using clean water at 55 degrees to 80 degrees Fahrenheit. To mix entire contents (5 lbs.), add dry compound to 3 pints of water and mix thoroughly (4 lb. bag—2½ pints of water). Mixture will be stiff but do not add more water. Cover the container with a wet cloth and let it stand for 30 minutes, then add more water if necessary to make the consistency slightly thinner than putty. Do not mix more than can be used in 36 hours.

application: With a semi-flexible broad knife, generously "butter" the joint with joint system compound, working it well into the joint. Shear off the excess material.

Press strip of GP tape in the center of the joint. Smooth down firmly into the compound, remove excess cement and level into an even surface.

When the first coat is dry, cover with joint compound. Shear off surface, leaving a smooth joint. When dry, another coat over the entire surface ensures best results.

Allow 24 hours drying time and then sand carefully with fine sandpaper for a smooth finish. For best results a vinyl primer should be applied before decoration.

G-P asbestos free patching plaster

mixing: Add G-P patching plaster to cool or cold water and stir to a putty consistency, free of lumps. Generally the larger the patch, the thicker the putty should be.

surface preparation: The areas to be patched must be clean and dry, and free of loose particles. Enlarge small cracks by cutting out old plaster to form an inverted "V". Dampen the entire area to be patched with water to promote adhesion between the old plaster and the new.

application: Small cracks and imperfections are filled by using patching plaster with a thinner consistency and forcing it into the cracks with a broad knife. Use the broad knife to "shear" off any excess plaster.

Large holes and imperfections require two coats. Apply the first coat so that it nearly fills the area being patched. Allow it to harden. While the first coat is still wet, apply a second coat. Bring this coat out flush to the finish surface and shear it off smooth with the tool. When the second coat is hard and dry, sand it to a smooth surface if necessary. Seal the surface with a good latex primer before painting or papering.

asbestos free joint/patching compound



G-P asbestos free joint system compound

Georgia-Pacific has packaged a joint compound specially designed for the do-it-yourselfer. It contains the same high quality formulation for superior performance demanded by professionals. It can be used almost immediately after mixing, and still retain the mixed consistency for extended periods of time.

For use in bedding and topping tape and spotting nail heads, joint system compound spreads smoothly, bonds tightly and resists edge cracking. It also feathers well, shrinks very little and sands easily.

availability: In either 5 lb. bags, 4 lb. bags with a sixty foot roll of tape, or 1 gal. can (Ready-Mix, no mixing required) everywhere in the continental U.S.

mixing: Joint system compound should be mixed in a clean metal container (not aluminum) using clean water at 55 degrees to 80 degrees Fahrenheit. To mix entire contents (5 lbs.), add dry compound to 3 pints of water and mix thoroughly (4 lb. bag—2½ pints of water). Mixture will be stiff but do not add more water. Cover the container with a wet cloth and let it stand for 30 minutes, then add more water if necessary to make the consistency slightly thinner than putty. Do not mix more than can be used in 36 hours.

application: With a semi-flexible broad knife, generously "butter" the joint with joint system compound, working it well into the joint. Shear off the excess material.

Press strip of GP tape in the center of the joint. Smooth down firmly into the compound, remove excess cement and level into an even surface.

When the first coat is dry, cover with joint compound. Shear off surface, leaving a smooth joint. When dry, another coat over the entire surface ensures best results.

Allow 24 hours drying time and then sand carefully with fine sandpaper for a smooth finish. For best results a vinyl primer should be applied before decoration.

G-P asbestos free patching plaster

mixing: Add G-P patching plaster to cool or cold water and stir to a putty consistency, free of lumps. Generally the larger the patch, the thicker the putty should be.

surface preparation: The areas to be patched must be clean and dry, and free of loose particles. Enlarge small cracks by cutting out old plaster to form an inverted "V". Dampen the entire area to be patched with water to promote adhesion between the old plaster and the new.

application: Small cracks and imperfections are filled by using patching plaster with a thinner consistency and forcing it into the cracks with a broad knife. Use the broad knife to "shear" off any excess plaster.


Large holes and imperfections require two coats. Apply the first coat so that it nearly fills the area being patched. Allow it to harden. While the first coat is still wet, apply a second coat. Bring this coat out flush to the finish surface and shear it off smooth with the tool. When the second coat is hard and dry, sand it to a smooth surface if necessary. Seal the surface with a good latex primer before painting or papering.

accessories

wallboard tape

Full 2" width, "Miracle Crease" spark perforated tape with skived edges and sanded surface on both sides. Bonding qualities are excellent. Porosity permits rapid drying of Joint Compound. Easy to use, economical, with minimal expansion. Stabilized against varying humidity conditions, it reduces uneven expansion and edge wrinkling.

packaging: Available in 60', 250', and 500' rolls as follows: 60' rolls packed 60 per box, approximately 24 lbs.; 250' rolls packed 20 per box, approximately 29 lbs.; 500' rolls packed 10 per box, approximately 28 lbs.

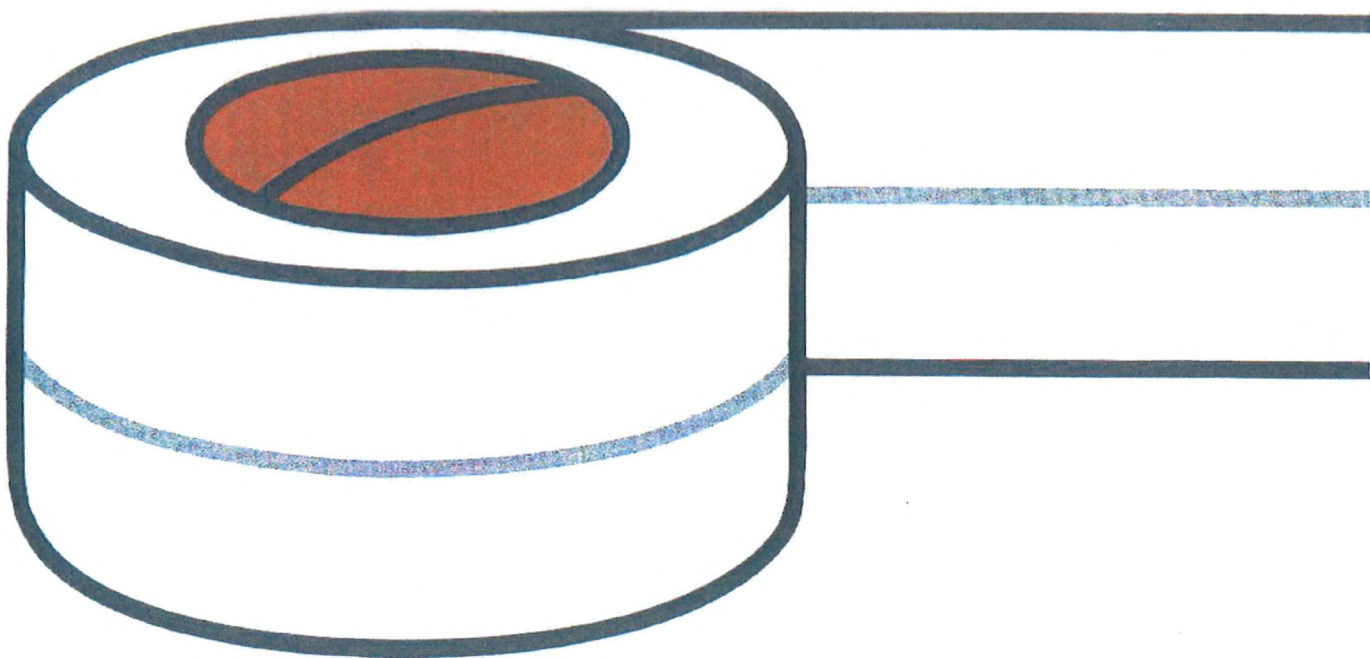

technical information

joint system drying time

Temperature and humidity have a direct effect on the drying time on joint treatment products. While there is very little that can be done to alter temperature and humidity under job conditions, care should be taken to note the average differences in drying times under different atmospheric conditions, so that problems may be minimized. Joint treat-

ment products must be thoroughly dry before successive coats are applied, and/or final decoration is applied. In all cases, a well ventilated area assists in the proper drying of these materials.

The chart shown below indicates the average drying periods for joint treatment products under different temperature and humidity conditions.

Relative Humidity	0	20%	40%	50%	60%	70%	80%	90%	98%
40 Temperature F	28 H	34 H	44 H	2 D	2½ D	3½ D	4½ D	9 D	37 D
60	13 H	16 H	20 H	24 H	29 H	38 H	2½ D	4½ D	18 D
80	6 H	8 H	10 H	12 H	13½ H	19½ H	27 H	49 H	9 D
100	3 H	4 H	5 H	6 H	8 H	10 H	14 H	26 H	5 D

H = hours D = days


painting of drywall

It is extremely important that the difference in absorption between the wallboard surface and the compound over joints and nails be equalized to provide uniformity of color, suction and texture

over the entire wall or ceiling. After the joint treatment has been completed and *thoroughly dried*, the surfaces should be sealed or primed with a good quality primer/sealer.

the primary cause of nail popping

Illustration #1 through #3 demonstrates what happens when green lumber (not thoroughly dried) is used for framing (Fig. 1). The wood pulls away from the wall, as the wood dries and shrinks (Fig. 2), then the nail pushes out through the gypsum-board (Fig. 3).

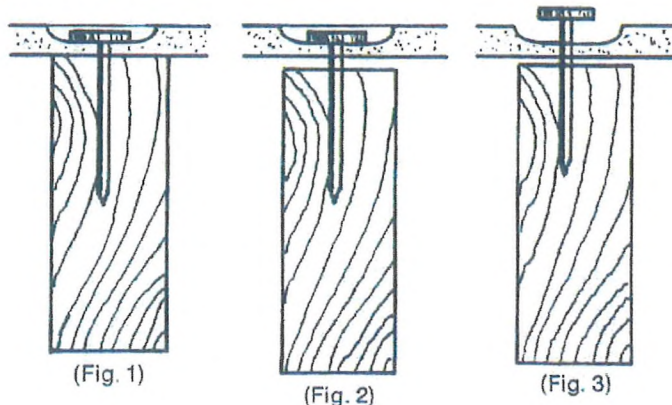

problems which occur in joint treatment

JOINT TREATMENT CONDITIONS	CAUSE	REMEDY OR PREVENTION
SHORT WORKING COMPOUND	Extremely warm dry weather during application.	Make allowance for fast drying. Minimize ventilation during application.
PUTREFACTION	Dirty or contaminated buckets. Aggravated by hot humid weather conditions.	Use only clean mixing pails and tools. Avoid excessive standing of mixed materials.
EXCESSIVE SHRINKAGE	Excessive amount of mixing water. Especially prevalent when cold water and cold compound are used.	Use 55°F minimum water and follow manufacturer's instructions.
EDGE CRACKING	Thick coats of compound under the tape. Fast drying conditions.	Avoid application over hot surfaces near pipes, radiators, salamanders. Control ventilation during the drying cycle in hot weather so as not to obtain radical changes in temperature, avoid drafts.
NAILS PHOTOGRAPHING	Airborne soot or dust particles collecting over nail-head. Shank of nail will conduct cold; airborne particles collect over this cooler area.	Dependent upon cleanliness of air. Deposits can be washed off. Insulate to provide uniform temperature.
TAPE PHOTOGRAPHY	Compound over tape is glazed due to tape being high. Deeper fills on either side of tape will not be glazed and will thus have a rougher texture. Low or high joints.	Press tapes in tightly. A sheer coat will equalize suction and texture. Refinish off level joint.
STARVED JOINTS	Delayed shrinkage (not allowing preceding coats to dry), insufficient compound applied over tape to fill recess. Over sanding.	Allow sufficient drying time between coats of compound. Keep sanding to a minimum. Apply additional coat.
BLISTERS IN TAPE	Insufficient compound under the tape. Tape not initially pressed into good contact with compound.	Open up blister by slitting tape. Fill cut with compound and press tape in place.
POOR BOND	Cold compound, water, or surfaces. Freezing of wet compound in pail or on wall after application. Insufficient soaking time.	Maintain minimum 55°F temperature. Protect from freezing. Allow necessary soaking time.
CRACKS IN INSIDE CORNER	Too much compound over the tape at apex of angle.	Wipe down corners correctly, leaving only small amount or no compound in the apex.
"BURN THRU" OR JOINTS SHOWING THRU PAINT "BLEEDING THRU" "SHOWING THRU"	1. Painting before the joint system is completely dry. 2. Crowning of the joints will cause a difference in light reflection. 3. Difference in texture and suction between compound and board. 4. Paint having poor hiding properties—thinning paint too much. (Same is true for textures, as well as paints.)	1. Allow sufficient drying time. 2. Avoid high crowns. 3. Apply primer. 4. Avoid excessive thinning of paints, or textures.
RIDGING	Movement of the framing or uneven shrinkage. Aggravated by cold humid conditions.	Let condition develop fully (6 months or 1 heating season). Sand ridge to tape (Do not cut tape) and fill concave areas each side. When dry, apply finish coat and redecorate.
NAIL POPPING	Shrinkage of framing, loose board, mis-aligned framing, or board core crushed in nailing.	Drive a second nail alongside the first, preferably catching the head of the popped nail with the head of the second nail.

DISTRIBUTION CENTERS

United States

ALABAMA

Birmingham
5400 B&N St.
(205) 941-0413
Huntsville
370 Highway 20 East
Madison, Alabama
(205) 772-9441
Mobile
5421 Georgia-Pacific Ave.
(205) 479-0534
Montgomery
4342 Baldwin Ave.
(205) 588-7380

ALASKA

Fairbanks
270 Elmwood St.
(907) 452-2131

ARIZONA

Phoenix
4621 White Center St.
(602) 953-1413
Tucson
430 E. Irvington Rd.
(520) 889-6731

ARKANSAS

Ft. Smith
8001 Johnny Ford Road
(501) 546-4051

CALIFORNIA

Little Rock
1701 Ogden St.
(909) 574-0212
Torrance
3850 Torrance Road
(310) 775-9778
San Francisco
1750 Lewis St.
(415) 534-4641
Fresno
3258 East Howe Ave.
(209) 511-0411
Los Angeles
14756 Neilson Ave.
City of Industry
(213) 958-3551
Oakland
3220 Polaris Ave.
San Leandro
(415) 552-5106
Riverside
1430 Chino Ave.
(714) 884-8393
Sacramento
2831 Orange Grove Ave.
North Highlands
(916) 487-4444
Salinas
1631 Industrial Ave.
(408) 738-9313
San Diego
301 West 24th St.
Riverside City
(714) 297-9955
San Francisco
1891 Divisadero Ave.
Cancosa Park
(415) 387-2211
San Jose
850 East Glen Rd.
(408) 297-7800
Santa Rosa
3417 Highland Road
(707) 544-3640

COLORADO

Denver
3600 Dryden St.
(303) 271-7500
Hartford
778 North Main St.
Manchester, Conn.
(203) 849-8700
Wallingford
805 North Collins St.
(703) 269-8725

CONNECTICUT

Wallingford
805 North Collins St.
(703) 269-8725
Wallingford
805 North Collins St.
(703) 269-8725

DELAWARE

Wilmington
Rittenhouse Ind. Pk.
Terminal Ave. & Christlode
(302) 659-8200

FLORIDA

Miami
3201 N.W. 10th St.
(305) 688-6867
Orlando
3522 All American Blvd.
(305) 290-3791
Pensacola
4601 McCoy Dr.
(904) 434-1501
Tallahassee
800 Maury St.
(904) 375-1148
Tampa
1701 East Columbus St.
(813) 901-1301
West Palm Beach
905 West 14th
Palm Beach
(305) 844-8371

GEORGIA

Atlanta
1513 North St.
(404) 424-9106
Atlanta
1513 North St.
(404) 424-9106
Augusta
1150 Gordon Highway
(803) 724-5678
Columbus
1401 Bradford Dr.
(404) 327-4921
Macon
7931 N.E. Ind. Blvd.
(706) 751-9700
Savannah
Tulip Rd.
and 90th Drive
(912) 333-0871

IDAHO

Boise
1615 Coleman Ave.
(208) 345-0441
Billings
412 White Oak Rd.
Bozeman, Mont.
(208) 452-9422
Chicago
15450 Northland Ave.
Park Ridge, Ill.
(708) 678-7940
15450 Northland Ave.
Park Ridge, Ill.
(708) 678-7940

ILLINOIS

Chicago
15450 Northland Ave.
Park Ridge, Ill.
(708) 678-7940
15450 Northland Ave.
Park Ridge, Ill.
(708) 678-7940
Chicago
15450 Northland Ave.
Park Ridge, Ill.
(708) 678-7940
Chicago
15450 Northland Ave.
Park Ridge, Ill.
(708) 678-7940

INDIANA

Indianapolis
1477 South Franklin Road
(317) 357-4754
Indianapolis
1477 South Franklin Road
(317) 357-4754
Indianapolis
1477 South Franklin Road
(317) 357-4754
Indianapolis
1477 South Franklin Road
(317) 357-4754

IOWA

Des Moines
5031 Northeast 17th St.
(515) 265-3251
Des Moines
5031 Northeast 17th St.
(515) 265-3251
Des Moines
5031 Northeast 17th St.
(515) 265-3251
Des Moines
5031 Northeast 17th St.
(515) 265-3251

KANSAS

Wichita
401 West 4th St. South
(316) 323-4831
Wichita
401 West 4th St. South
(316) 323-4831
Wichita
401 West 4th St. South
(316) 323-4831
Wichita
401 West 4th St. South
(316) 323-4831

KENTUCKY

Louisville
2778 Grassland Drive
(502) 481-3440
Louisville
2778 Grassland Drive
(502) 481-3440
Louisville
2778 Grassland Drive
(502) 481-3440
Louisville
2778 Grassland Drive
(502) 481-3440

LOUISIANA

Baton Rouge
1913 Lafayette St.
(504) 345-1451
Baton Rouge
1913 Lafayette St.
(504) 345-1451
Baton Rouge
1913 Lafayette St.
(504) 345-1451
Baton Rouge
1913 Lafayette St.
(504) 345-1451

MAINE

Bangor
Burnett St. & Hudson
(207) 947-3142
Bangor
Burnett St. & Hudson
(207) 947-3142
Bangor
Burnett St. & Hudson
(207) 947-3142
Bangor
Burnett St. & Hudson
(207) 947-3142

MARYLAND

Baltimore
6913 Quind Ave.
(301) 253-4700
Baltimore
6913 Quind Ave.
(301) 253-4700
Baltimore
6913 Quind Ave.
(301) 253-4700
Baltimore
6913 Quind Ave.
(301) 253-4700

MASSACHUSETTS

Boston
310 South Street
(617) 484-8201
Boston
310 South Street
(617) 484-8201
Boston
310 South Street
(617) 484-8201
Boston
310 South Street
(617) 484-8201

MICHIGAN

Ann Arbor
11500 South Drive
Livonia
(313) 322-5130
Ann Arbor
11500 South Drive
Livonia
(313) 322-5130
Ann Arbor
11500 South Drive
Livonia
(313) 322-5130
Ann Arbor
11500 South Drive
Livonia
(313) 322-5130

MINNESOTA

Minneapolis
1113 Gateway Lane Rd. 13
Maple Grove
(612) 425-5811
Minneapolis
1113 Gateway Lane Rd. 13
Maple Grove
(612) 425-5811
Minneapolis
1113 Gateway Lane Rd. 13
Maple Grove
(612) 425-5811
Minneapolis
1113 Gateway Lane Rd. 13
Maple Grove
(612) 425-5811

MISSISSIPPI

Jackson
325 Gulf Lane Rd.
(601) 829-4420
Jackson
325 Gulf Lane Rd.
(601) 829-4420
Jackson
325 Gulf Lane Rd.
(601) 829-4420
Jackson
325 Gulf Lane Rd.
(601) 829-4420

MISSOURI

St. Louis
17100 Northland Rd.
(314) 234-1378
St. Louis
17100 Northland Rd.
(314) 234-1378
St. Louis
17100 Northland Rd.
(314) 234-1378
St. Louis
17100 Northland Rd.
(314) 234-1378

NEBRASKA

Lincoln
540 "L" St.
(402) 433-2525
Lincoln
540 "L" St.
(402) 433-2525
Lincoln
540 "L" St.
(402) 433-2525
Lincoln
540 "L" St.
(402) 433-2525

NEVADA

Reno
289 N. McCarran Blvd.
(702) 359-7454
Reno
289 N. McCarran Blvd.
(702) 359-7454
Reno
289 N. McCarran Blvd.
(702) 359-7454
Reno
289 N. McCarran Blvd.
(702) 359-7454

NEW HAMPSHIRE

Manchester
300 Gay St.
(603) 557-3891
Manchester
300 Gay St.
(603) 557-3891
Manchester
300 Gay St.
(603) 557-3891
Manchester
300 Gay St.
(603) 557-3891

NEW JERSEY

Clifton
600 Newark Rd.
(201) 773-1000
Clifton
600 Newark Rd.
(201) 773-1000
Clifton
600 Newark Rd.
(201) 773-1000
Clifton
600 Newark Rd.
(201) 773-1000

NEW MEXICO

Albuquerque
1822 Broadway N.W.
(505) 242-2791
Albuquerque
1822 Broadway N.W.
(505) 242-2791
Albuquerque
1822 Broadway N.W.
(505) 242-2791
Albuquerque
1822 Broadway N.W.
(505) 242-2791

NEW YORK

Albany
Brewer and Ind. Bldg.
(518) 439-3080
Albany
Brewer and Ind. Bldg.
(518) 439-3080
Albany
Brewer and Ind. Bldg.
(518) 439-3080
Albany
Brewer and Ind. Bldg.
(518) 439-3080

NEW YORK (cont.)

Binghamton
Boscama Ind. Pk.
Catskill Road Extension
Binghamton
(607) 773-1120
Binghamton
Boscama Ind. Pk.
Catskill Road Extension
Binghamton
(607) 773-1120
Binghamton
Boscama Ind. Pk.
Catskill Road Extension
Binghamton
(607) 773-1120

NEW YORK (cont.)

Buffalo
2545 Warden Ave.
(716) 885-3333
Buffalo
2545 Warden Ave.
(716) 885-3333
Buffalo
2545 Warden Ave.
(716) 885-3333
Buffalo
2545 Warden Ave.
(716) 885-3333

NEW YORK (cont.)

Rochester
1450 East Henrietta Rd.
(716) 442-8000
Rochester
1450 East Henrietta Rd.
(716) 442-8000
Rochester
1450 East Henrietta Rd.
(716) 442-8000
Rochester
1450 East Henrietta Rd.
(716) 442-8000

NEW YORK (cont.)

Suffolk
Vernon Ave. and Park St.
Yaphank
(516) 724-7400
Suffolk
Vernon Ave. and Park St.
Yaphank
(516) 724-7400
Suffolk
Vernon Ave. and Park St.
Yaphank
(516) 724-7400
Suffolk
Vernon Ave. and Park St.
Yaphank
(516) 724-7400

NEW YORK (cont.)

Syracuse
Miller Park Dr.
(315) 437-1001
Syracuse
Miller Park Dr.
(315) 437-1001
Syracuse
Miller Park Dr.
(315) 437-1001
Syracuse
Miller Park Dr.
(315) 437-1001

NORTH CAROLINA

Asheville
Route #2, Asheville Road
(704) 298-5074
Asheville
Route #2, Asheville Road
(704) 298-5074
Asheville
Route #2, Asheville Road
(704) 298-5074
Asheville
Route #2, Asheville Road
(704) 298-5074

NORTH CAROLINA (cont.)

Charlotte
2308 Parkside Dr.
(704) 394-3171
Charlotte
2308 Parkside Dr.
(704) 394-3171
Charlotte
2308 Parkside Dr.
(704) 394-3171
Charlotte
2308 Parkside Dr.
(704) 394-3171

NORTH CAROLINA (cont.)

Greensboro
3005 Flagstone Dr.
(919) 275-9411
Greensboro
3005 Flagstone Dr.
(919) 275-9411
Greensboro
3005 Flagstone Dr.
(919) 275-9411
Greensboro
3005 Flagstone Dr.
(919) 275-9411

NORTH CAROLINA (cont.)

Raleigh
3501 Tarkenton Dr.
(919) 474-4439
Raleigh
3501 Tarkenton Dr.
(919) 474-4439
Raleigh
3501 Tarkenton Dr.
(919) 474-4439
Raleigh
3501 Tarkenton Dr.
(919) 474-4439

NORTH CAROLINA (cont.)

Wilmington
319 Mainland St.
(919) 799-5000
Wilmington
319 Mainland St.
(919) 799-5000
Wilmington
319 Mainland St.
(919) 799-5000
Wilmington
319 Mainland St.
(919) 799-5000

NORTH CAROLINA (cont.)

Fargo
204 No. 10th St.
Minneapolis, Minn.
(218) 238-1527
Fargo
204 No. 10th St.
Minneapolis, Minn.
(218) 238-1527
Fargo
204 No. 10th St.
Minneapolis, Minn.
(218) 238-1527
Fargo
204 No. 10th St.
Minneapolis, Minn.
(218) 238-1527

OHIO

Akron
550 Monroe Falls Road
(216) 734-7740
Akron
550 Monroe Falls Road
(216) 734-7740
Akron
550 Monroe Falls Road
(216) 734-7740
Akron
550 Monroe Falls Road
(216) 734-7740

OHIO (cont.)

Cincinnati
4710 Quies Dr.
(513) 374-4121
Cincinnati
4710 Quies Dr.
(513) 374-4121
Cincinnati
4710 Quies Dr.
(513) 374-4121
Cincinnati
4710 Quies Dr.
(513) 374-4121

OHIO (cont.)

Cleveland
18100 Northland Rd.
(216) 234-1378
Cleveland
18100 Northland Rd.
(216) 234-1378
Cleveland
18100 Northland Rd.
(216) 234-1378
Cleveland
18100 Northland Rd.
(216) 234-1378

OHIO (cont.)

Columbus
2100 Paradise Rd.
(614) 449-8256
Columbus
2100 Paradise Rd.
(614) 449-8256
Columbus
2100 Paradise Rd.
(614) 449-8256
Columbus
2100 Paradise Rd.
(614) 449-8256

OHIO (cont.)

Dayton
5150 Webster St.
(513) 278-5986
Dayton
5150 Webster St.
(513) 278-5986
Dayton
5150 Webster St.
(513) 278-5986
Dayton
5150 Webster St.
(513) 278-5986

OHIO (cont.)

Toledo
2815 Hill Ave.
(419) 526-3721
Toledo
2815 Hill Ave.
(419) 526-3721
Toledo
2815 Hill Ave.
(419) 526-3721
Toledo
2815 Hill Ave.
(419) 526-3721

OKLAHOMA

Oklahoma City
5512 N.W. Fourth St.
(405) 948-2717
Oklahoma City
5512 N.W. Fourth St.
(405) 948-2717
Oklahoma City
5512 N.W. Fourth St.
(405) 948-2717
Oklahoma City
5512 N.W. Fourth St.
(405) 948-2717

OKLAHOMA (cont.)

Tulsa
5717 North Maple
(918) 271-2211
Tulsa
5717 North Maple
(918) 271-2211
Tulsa
5717 North Maple
(918) 271-2211
Tulsa
5717 North Maple
(918) 271-2211

OREGON

Eugene
3445 W. 1st Ave.
(503) 343-0358
Eugene
3445 W. 1st Ave.
(503) 343-0358
Eugene
3445 W. 1st Ave.
(503) 343-0358
Eugene
3445 W. 1st Ave.
(503) 343-0358

PENNSYLVANIA

Lancaster
3630 Hempfield Industrial
Park
(717) 285-4544
Lancaster
3630 Hempfield Industrial
Park
(717) 285-4544
Lancaster
3630 Hempfield Industrial
Park
(717) 285-4544
Lancaster
3630 Hempfield Industrial
Park
(717) 285-4544

PENNSYLVANIA (cont.)

Philadelphia
801 First Ave.
King of Prussia
(215) 263-8600
Philadelphia
801 First Ave.
King of Prussia
(215) 263-8600
Philadelphia
801 First Ave.
King of Prussia
(215) 263-8600
Philadelphia
801 First Ave.
King of Prussia
(215) 263-8600

PENNSYLVANIA (cont.)

Pittsburgh
Huckler Rd. and Rt. 173
New Stanton
(412) 242-9160
Pittsburgh
Huckler Rd. and Rt. 173
New Stanton
(412) 242-9160
Pittsburgh
Huckler Rd. and Rt. 173
New Stanton
(412) 242-9160
Pittsburgh
Huckler Rd. and Rt. 173
New Stanton
(412) 242-9160

PENNSYLVANIA (cont.)

Scranton
150 Freedom Ave.
Tatopolis-Phoenix
(717) 655-2901
Scranton
150 Freedom Ave.
Tatopolis-Phoenix
(717) 655-2901
Scranton
150 Freedom Ave.
Tatopolis-Phoenix
(717) 655-2901
Scranton
150 Freedom Ave.
Tatopolis-Phoenix
(717) 655-2901

RHODE ISLAND

Providence
172 Jefferson Blvd.
Warwick
(401) 883-7700
Providence
172 Jefferson Blvd.
Warwick
(401) 883-7700
Providence
172 Jefferson Blvd.
Warwick
(401) 883-7700
Providence
172 Jefferson Blvd.
Warwick
(401) 883-7700

RHODE ISLAND (cont.)

South Carolina
Charleston
Barnett Ind. Park
(803) 524-5141
Charleston
Barnett Ind. Park
(803) 524-5141
Charleston
Barnett Ind. Park
(803) 524-5141
Charleston
Barnett Ind. Park
(803) 524-5141

RHODE ISLAND (cont.)

Columbia
255 Stonecroft Dr.
(803) 771-1740
Columbia
255 Stonecroft Dr.
(803) 771-1740
Columbia
255 Stonecroft Dr.
(803) 771-1740
Columbia
255 Stonecroft Dr.
(803) 771-1740

RHODE ISLAND (cont.)

Greenville
Hwy 101 Road
(803) 208-0000
Greenville
Hwy 101 Road
(803) 208-0000
Greenville
Hwy 101 Road
(803) 208-0000
Greenville
Hwy 101 Road
(803) 208-0000

RHODE ISLAND (cont.)

South Dakota
Sioux Falls
4331 No. 4th
(605) 508-5300
Sioux Falls
4331 No. 4th
(605) 508-5300
Sioux Falls
4331 No. 4th
(605) 508-5300
Sioux Falls
4331 No. 4th
(605) 508-5300

Georgia-Pacific

intracompany memo



File: 9454

to * See Below location
from Bob Morse location Portland
subject New Joint Systems Brochure date September 2, 1977

Attached is the new Joint Systems Brochure. The piece covers our entire line of joint compounds and textures in detail. Additional copies of this piece are available by completing this form below or using the standard Advertising/Sales Promotion order form.

R. E.

REM:jk
Attachment

* Messrs. G. S. Nelson
K. E. Powell
G. F. Baitinger
E. G. Seiler
O. E. Burch
T. R. Godfrey
D. C. Corkill
C. W. Lehnert
Branch Managers
Regional Managers
Gypsum Regional Managers
Gypsum Plant Managers

To: Bob Morse Advertising Dept.

Please send me _____ additional copies of the new G-P Joint Systems brochure.

Branch _____ Name _____


WK GP 5091

File 01321

Georgia-Pacific



joint systems
and specialty products
for gypsumboard

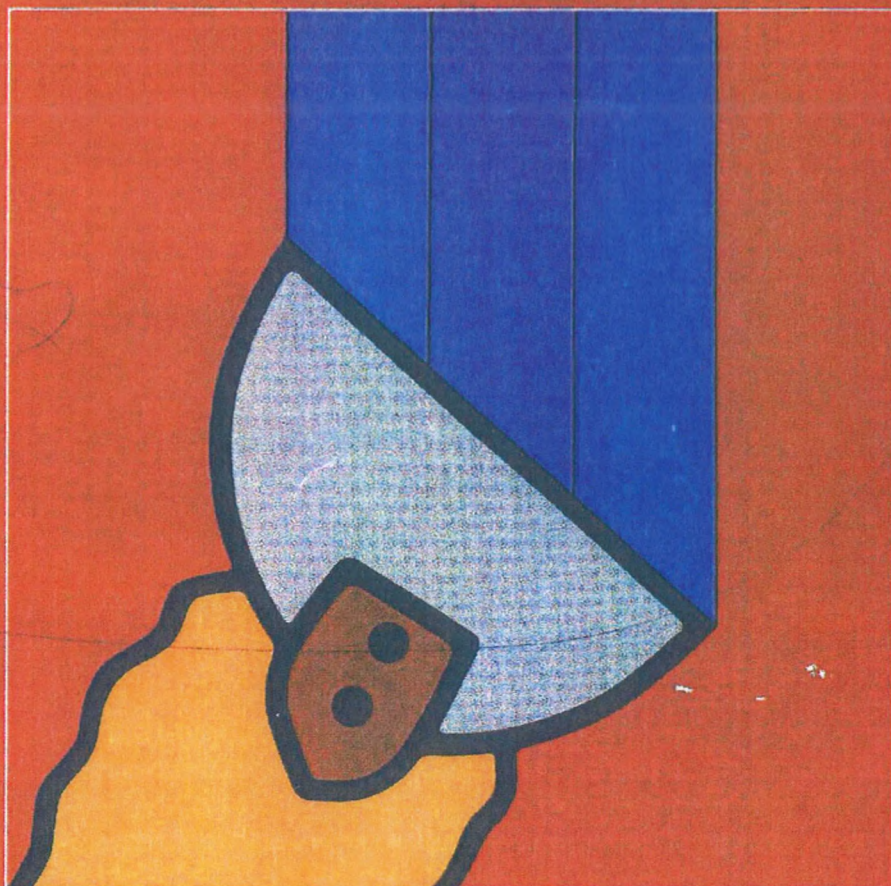

joint systems and specialty products

Why the name Georgia-Pacific makes such a difference.

The critical point in applying gypsumboard comes when it is time to reinforce and conceal the joints. A smooth monolithic surface is required, one that will accept various types of decoration. Georgia-Pacific produces a complete line of Joint System Products that includes the latest pre-mixed compounds along with the more conventional powders suitable for either hand tools or mechanical application. All G-P products conform to ASTM Specification no. C 475 and federal specification no. SS-J-570a.

There are several distinct advantages to Georgia-Pacific Joint System Products, including:

mixing stability. A wet mix consistency that remains stable, means you avoid those irritating adjustments before use.

plasticity. Joint System Products under the name Georgia-Pacific have exceptionally smooth application properties because of their plasticity. This plasticity enables far better control during the application and provides better shear and feather qualities.

bond durability. Georgia-Pacific products develop a strength and water resistance which produces an excellent bond and joints as strong as the board itself.

less shrinkage. By exhibiting a minimum of shrinkage, G-P product assure excellent job results.

high quality. Georgia-Pacific quality standards and controls are some of the most rigid and best known in the industry.

There are some natural **precautions** that should be taken with any joint compound or adhesive:

1. All powder formulas should be protected against moisture;
2. Each coat must be thoroughly dry before the succeeding coat or final decoration is applied;
3. Only clean mixing water should be used. Both water and powder should be at 55°-80° F.
4. One Georgia-Pacific product should not be mixed with another Georgia-Pacific product or with another manufacturer's product.

5. After the joint treatment is thoroughly dry, all surfaces should be sealed or primed with a vinyl or oil base primer/sealer. This imparts a uniform texture and suction over the entire wall or ceiling surfaces. When the primer/sealer has dried, apply the final decoration per the manufacturer's recommendations.

6. **Special Joint Finishing Recommendation for Wintertime Conditions.**

Cold weather, cold water, cold joint compounds and extremes of temperature due to efforts to provide heat are conditions that deserve special attention. During the application of the joint compounds, the bond, shrinkage and working properties are all adversely affected when they are used at temperatures significantly lower than 55°F. In order to minimize this problem, our products should be mixed with water that is 55°F or warmer, products should be stored in areas that are heated and the structures to be taped and finished should be heated to at least 55°F 24 hours in advance and subsequently until drying is complete.

As the building is heated after the gypsum board and joint compound are applied, there may be shrinkage of the framing members or movement due to warping of the framing or settling of the building. This can cause joint beading or nail popping. Once these conditions appear, it is advisable to postpone repairs until one complete heating season has passed.

There are some procedures and products that can help to minimize problems encountered during adverse weather, particularly in the winter. We recommend:

1. Round edge board pre-filled with Speed Set adhesive or joint compound prior to the taping of the joints. This system will reduce the incidence of joint beading.
2. Speed Set joint compound for the first coat on corner beads. This will prevent excessive shrinkage and provide a more secure bond at low temperatures. Under no conditions should topping compounds be used for the first coat over corner bead.
3. Speed Set joint compound for the embedding of the tape and the first coat over nail-heads. Less shrinkage and better bonds at low temperatures will be obtained.



color coded packaging

For ease of reference and to make certain that the right product is always used for the right job, Georgia-Pacific has color coded all its Joint System Products by their base properties. All Casein based products are packaged in natural kraft bags. Vinyl based products are available in yellow bags. The texturing products and the consumer line are all in white bags. A further differentiation is made with the lettering color, as the chart below indicates:

Note: Check with the G-P gypsum sales manager regarding the products available in your area.

asbestos free

joint
system
compound
with 60'
roll of tape

bedding

coverage: Approximately 15 to 20 lbs. per 1000 sq. ft. of gypsum-board used in conjunction with 40 to 45 lbs. of G-P Topping.

topping

coverage: Approximately 40 to 45 lbs. per 1000 sq. ft. of gypsum-board used in conjunction with 15 to 20 lbs. of G-P Bedding.

triple duty

coverage: Approximately 50 to 60 lbs. per 1000 sq. ft. of gypsum-board.

all purpose

coverage: Approximately 50 to 60 lbs. per 1000 sq. ft. of gypsum-board.

speed set

coverage: Approximately 50 to 60 lbs. per 1000 sq. ft. of gypsum-board.

wall texture

coverage: Will cover about 1,000 sq. ft. for light spray textures or about 200 sq. ft. for heavier applications.

vermiculite

coverage: Approximately 40 lbs. per 400 sq. ft.—sprayed.

polystyrene

coverage: Approximately 32 lbs. per 400 sq. ft.—sprayed.

joint system compound

coverage: Approximately 50 to 60 lbs. per 1000 sq. ft. of gypsum-board.

ready mix

coverage: Approximately 1½-5 gallon pails per 1000 sq. ft. of gypsum board. Also 1 gallon can covers joints on approximately 150 sq. ft.

CASEIN KRAFT



VINYL YELLOW




TEXTURE WHITE



casein base products

G-P Bedding and G-P Topping are two-bag systems of specialized joint compounds. They provide the very finest results since each product has been formulated for a highly specific use. G-P All Purpose is a one-bag system that may be used satisfactorily for a number of different applications.

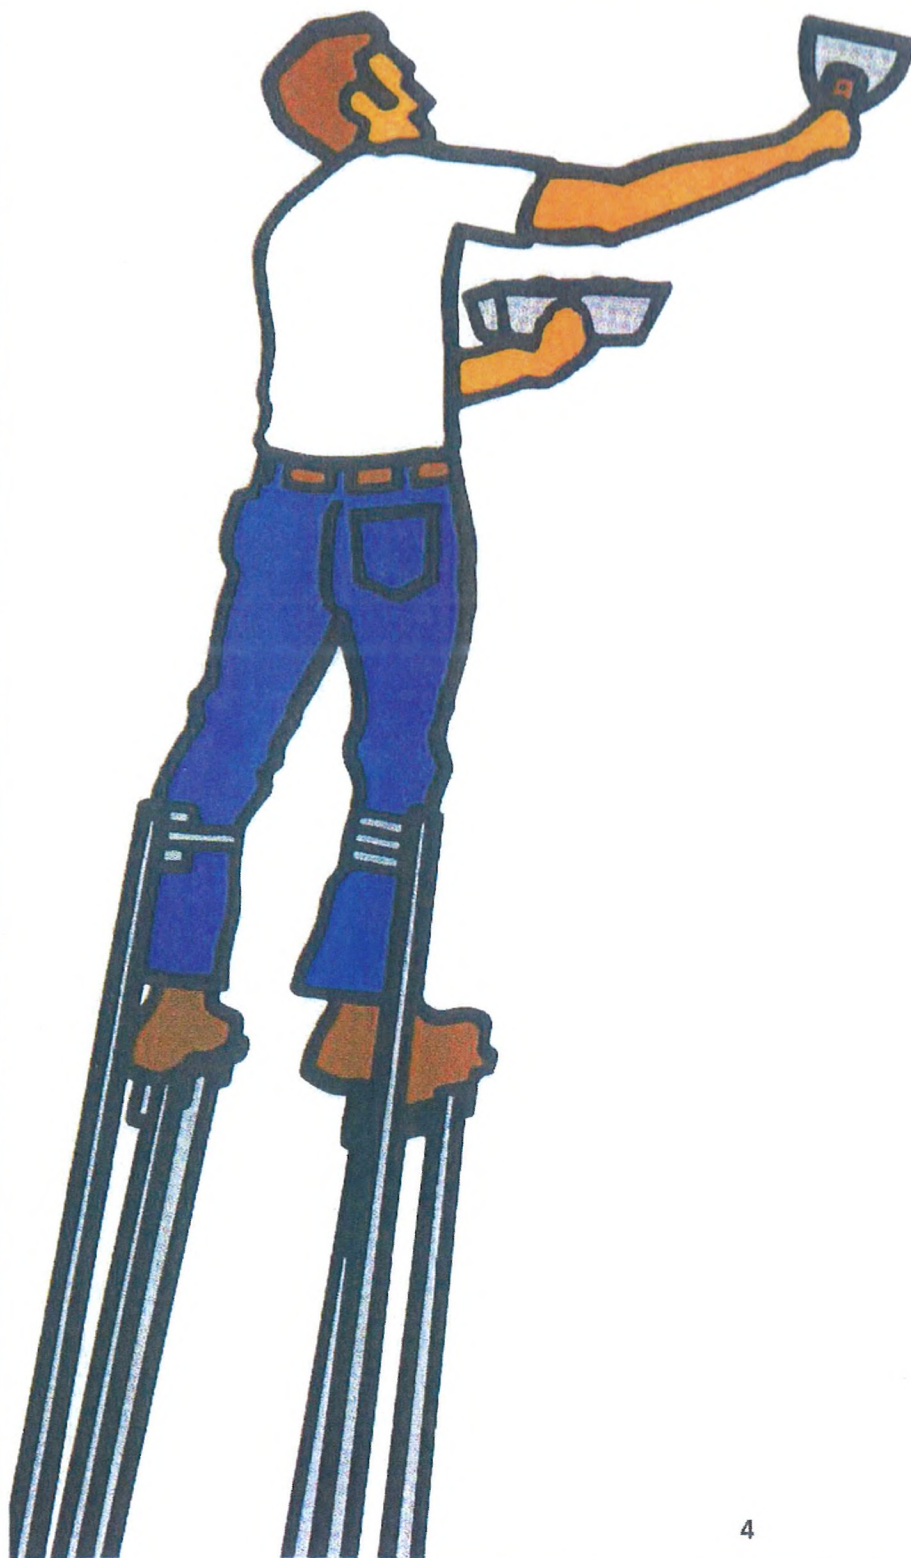

G-P bedding

This compound is designed as a fill coat and for adhesion of the gypsumboard tape to the joints, as well as for the initial application to nail heads and corner beads. Since it is used for this express purpose, G-P formulates its product to maximize the taping and adhesive qualities. G-P Bedding spreads smoothly and may be applied by either hand tools or by machine.

coverage: Approximately 15 to 20 lbs. per 1000 sq. ft. of gypsumboard used in conjunction with 40 to 45 lbs. of G-P Topping.

availability: In 25 lb. bags, only in the midwest and eastern U.S.

G-P topping

This compound is specifically designed for the second and third coats over the G-P Bedding. Since it is used only for topping, we are able to reduce the amount of adhesive and incorporate other materials which lessen shrinkage and make it much easier to work and sand. Topping should never be used to bond tape or for the first coat over a corner bead.

coverage: Approximately 40 to 45 lbs. per 1000 sq. ft. of gypsumboard used in conjunction with 15 to 20 lbs. of G-P Bedding.


availability: In 25 lb. bags, only in the mid-west and eastern U.S.

G-P all purpose

This product is formulated as a one bag system which can be used for topping, bedding and texturing, corner bead and nail spotting. G-P All Purpose is easy to mix, smooth working and exhibits relatively low shrinkage.

coverage: Approximately 50 to 60 lbs. per 1000 sq. ft. of gypsumboard.

availability: In a 25 lb. bag only in the mid-west and eastern U.S. Also available in an 18 lb. bag with a 250' roll of tape in the eastern U.S.

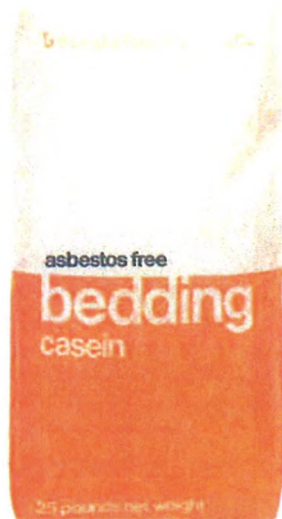

general mixing instructions

All casein products should be mixed with clean, drinkable water at a temperature of 60°-80° F. Use 16 pints of water per 25 lbs. of G-P All Purpose and G-P Bedding. With G-P Topping, the mixture is 16 pints water per 25 lbs.

If water and/or the contents are cold, more than the above prescribed amount of water may be needed in order for the material to reach a workable consistency. Mix the powder to a stiff consistency. After a soaking period of 20 to 30* minutes, the mix will lose its stiffness. After the soaking period, the material should be remixed without adding water until it becomes plastic and creamy. If desired, water may be added, after remixing, to obtain a thinner consistency.

*The required soaking time may double if the temperature of the mix is much lower than 55° F.

casein application

The following instructions indicate the proper steps for using G-P Casein Bedding and G-P Casein Topping in making gypsumboard joints. The same procedure applies if G-P All Purpose is used for the entire application.

Apply G-P Casein Bedding to all flat joints and embed tapes. Leave a uniform thickness of compound under the tapes and shear off excess material. At the same time, cover all nail heads and corner beads with the bedding compound. Allow the application to dry thoroughly before the next step.

When the Casein Bedding compound has thoroughly dried and whitened, cover the taped joint with G-P Casein Topping. Shear off the surplus, again leaving a uniform coverage over the tapes, and feather the edges. Repeat the spotting of all nail heads and finishing of the corner beads for each subsequent application, or as many times as necessary.

The bedding under the tapes and the first coat of topping over the tapes must be *thoroughly dry* before applying the next coat.

Cover the joints again with the topping compound and shear off the excess as before, leaving a smooth, well feathered joint. Allow the joints to dry before proceeding further.

For best results, cover the joint a third time with G-P Casein Topping.

A prime coat should be used over the entire area before the final decoration.


To texture finished gypsumboard surface, G-P Casein All Purpose may be used. For best results, apply a vinyl primer to the entire area before texturing. The texture may be applied with a roller, sponge, brush or other suitable implement, depending on the type of configuration desired. For heavy textures, use about 20 pints of water and for light textures use about 22 pints per 25 lbs. Protect woodwork and trim during application and remove all drops and splatters before they harden.

asbestos free vinyl base products

For those who require the very finest line of Joint Treatment compounds, G-P offers its vinyl based Bedding, Topping, All Purpose, Triple Duty, and Speed Set. These compounds are formulations incorporating chemicals which produce a variety of superior performance features. Their bright sun-yellow bags make them easily identifiable.

advantages:

1. They retain the mixed consistency for extended periods of time.
2. Mixed compound will not spoil if left in tightly closed container for extended periods (30-60 days).
3. Shrinkage and cracking has been reduced to a minimum.
4. Consistency is not affected by cold water and cold compound as much as casein products.

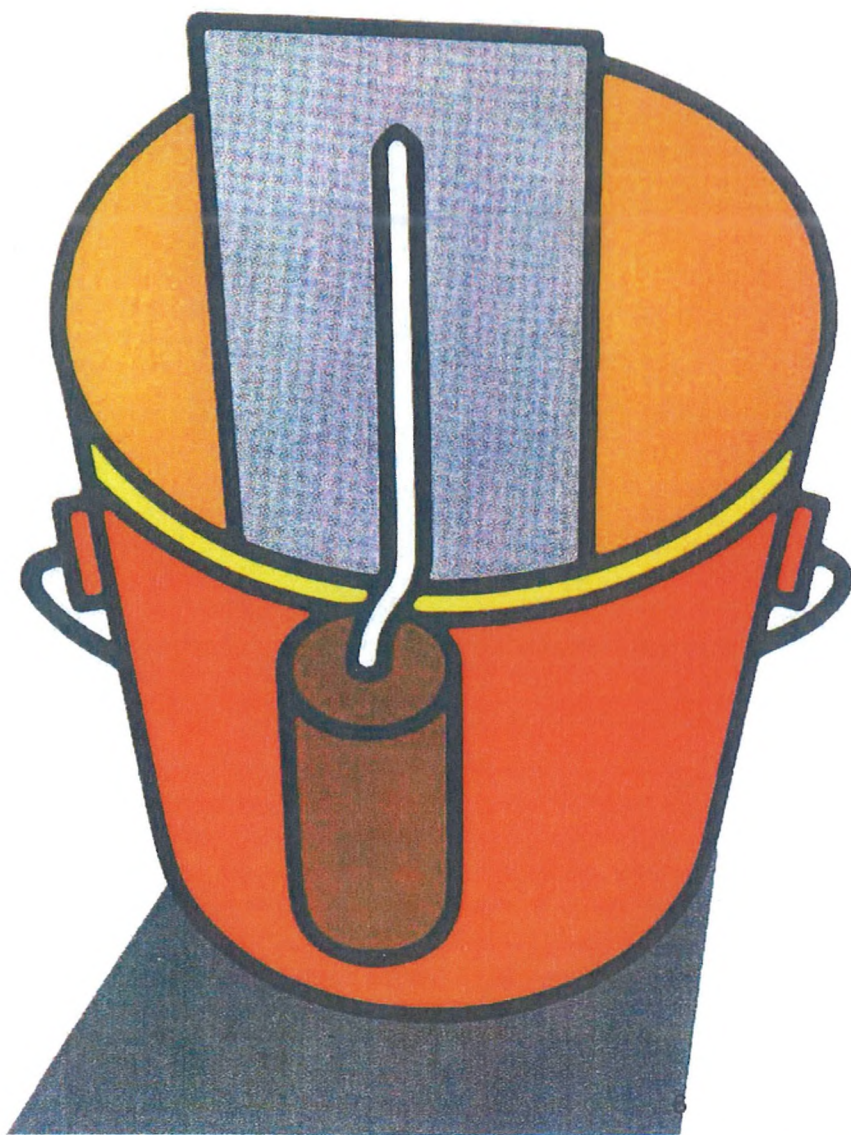

G-P vinyl bedding

This product is formulated primarily for embedding the gypsumboard tape. It may also be used to coat metal trim, fasteners and corner beads. G-P Vinyl Bedding spreads smoothly, has superior bonding qualities and maximum resistance to edge cracking.

coverage: Approximately 15 to 20 lbs. per 1000 sq. ft. of gypsumboard used in conjunction with 40 to 45 lbs. of G-P Topping.

availability: In 25 lb. bags throughout the U.S.

G-P vinyl topping

This product is specially formulated to give superior finishing results. Used for second and third coats over the bedding coat, this product is extremely smooth working, has excellent feathering qualities, low shrinkage and is easy to sand. Topping should never be used to bond tape or for the first coat over corner bead.

coverage: Approximately 40 to 45 lbs. per 1000 sq. ft. of gypsumboard used in conjunction with 15 to 20 lbs. of G-P Bedding.


availability: In 25 lb. bags throughout the U.S.

G-P all purpose

This product is formulated as a one-bag system which can be used for bedding tape, finishing over tapes, nails, corner beads as well as texturing gypsumboard. It has very good topping and bedding characteristics along with good texturing properties. G-P All Purpose is easy to mix, smooth working and exhibits relatively low shrinkage.

coverage: Approximately 50 to 60 lbs. per 1000 sq. ft. of gypsumboard.

availability: In 25 lb. bags and an 18 lb. bag with a 250' roll of tape, throughout the U.S.

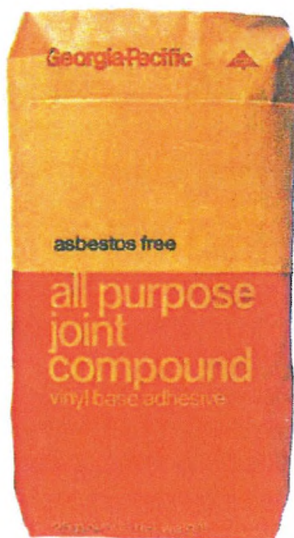

general mixing instructions

All vinyl products should be mixed with clean, drinkable water at a temperature of 60°-80° F. Use 17 pints of water per 25 lbs. of G-P All Purpose and G-P Bedding. With G-P Topping, the mixture is 16 pints water per 25 lbs.

If water and/or the bag contents are cold more than above prescribed amount of water may be needed in order for the material to reach a workable consistency. Mix the powder to a stiff consistency. After a soaking period of 10 to 15 minutes, the mix will lose its stiffness. After the soaking period, the material should be remixed without adding water until it becomes plastic-like and creamy. If desired, water may be added, after remixing, to obtain a thinner consistency.

application

The following instructions indicate the proper steps for using G-P Vinyl Bedding and G-P Vinyl Topping in making gypsumboard joints. The same procedure applies if G-P All Purpose is used for the entire application.

Apply G-P Vinyl Bedding to all flat joints and embed tapes. Leave a uniform thickness of compound under the tapes and shear off excess material. At the same time, cover all nail heads and corner beads with the bedding compound. Allow the application to dry thoroughly before the next step.

When the Vinyl Bedding compound has thoroughly dried and whitened, cover the taped joint with G-P Vinyl Topping. Shear off the surplus, again leaving a uniform coverage over the tapes and feather the edges. Repeat the spotting of the nail heads and finishing of the corner beads for each subsequent application, or as many times as necessary.

The Bedding under the tapes and the first coat of Topping over the tapes must be *thoroughly dry* before applying the next coat.

Cover the joints again with the topping compound and shear off the excess as before, leaving a smooth, well feathered joint. Allow joints to dry before proceeding further.

For best results, cover the joints a third time with G-P Vinyl Topping.

A prime coat should be used over the entire area before the final decoration.

To texture finished gypsumboard surface, G-P Vinyl All Purpose or G-P Triple Duty may be used. For best results, apply a vinyl primer to the entire area before texturing. The texture may be applied with a roller, sponge, brush or other suitable implement, depending on the type of configuration desired. For heavy textures, use about 20 pints of water and for light textures use about 22 pints per 25 lbs. Protect woodwork and trim during application and remove all drops and splatters before they harden.

asbestos free vinyl base products

G-P joint system

This G-P gypsumboard Joint Compound is formulated primarily for use in bedding and topping tape and spotting nail heads. It spreads smoothly and features superior bonding qualities and gives maximum resistance to edge cracking. In topping, it feathers well, shrinks little and sands easily.

coverage: Approximately 50 to 60 lbs. per 1000 sq. ft.

availability: In 18 lb. bag with one roll of 250' tape, only in the eastern and northeastern U. S.

caution: Do not mix G-P joint compound with any other material.

mixing instructions

G-P Joint System Compound is a vinyl adhesive base. It should be mixed with clean, drinkable water at a temperature of 55°-80° F. Use 11 pints of water to the 18 lb. contents of this bag.

If the water and/or the bag contents are cold, more than the above prescribed amount of water may be needed in order for the material to reach a workable consistency. Mix the powder to a stiff consistency. After a soaking period of 15 to 20 minutes, the mix will lose its stiffness. After the soaking period, the material should be remixed without adding water until it becomes plastic-like and creamy. If desired, water may be added, after remixing, to obtain a thinner consistency.

application instructions

Apply G-P Joint System Compound to all flat joints and embed tapes. Leave a uniform thickness of compound under the tapes and shear off excess material. At the same time, cover all nail heads and corner beads. Allow the application to dry thoroughly before the next step.

When the joint compound has thoroughly dried and whitened, cover the taped joint with the same material. Shear off the surplus, leaving a uniform coverage over the tapes and feather the edges. Repeat the spotting of the nail heads and finishing of the corner beads for each subsequent



application or as many times as necessary.

The layer of joint compound used to embed the tapes and the coat of joint compound over the tapes must be thoroughly dry before applying the next coat. Cover the joints again and shear off the excess as before, leaving a smooth, well feathered joint. Allow joints to dry before proceeding further.

For best results, cover the joints a third time with G-P Joint Compound.

A prime coat should be used over the entire area before the final decoration.

To texture the finished gypsumboard surface, G-P All Purpose or G-P Triple Duty may be used. For best results, apply a vinyl primer to the entire area before texturing. The texture may be applied with a roller, sponge, brush or other suitable implement, depending on the type of configuration desired. For heavy textures, use about 14½ pints of water and for light textures use about 16 pints per 18 lbs. Protect woodwork and trim during application and remove all drops and splatters before they harden.

G-P triple duty™

G-P Triple Duty gypsumboard compound is a vinyl based multi-purpose product which can be used for all coats in the reinforcing and concealing of joints in gypsumboard construction. It can be used for taping, finishing, spotting, nail heads, filling corner beads and texturing. The binder in Triple Duty gives this product a wet life of 30 to 60 days (provided the container is kept sealed tightly to prevent drying) which allows premixing in large quantities. Triple Duty has low shrinkage and can be easily sanded. After application by hand tools or machine, the compound leaves a surface ready for priming and decoration with no further preparation necessary.

coverage: Approximately 50 to 60 lbs. per 1,000 square feet (12 to 50 lbs. per 1,000 square feet when used as a texturing material).

availability: In 25 lb. or 50 lb. bags everywhere in the continental U.S.

mixing instructions

G-P Triple Duty Joint Compound is a vinyl adhesive. It should be mixed with clean, drinkable water at a temperature of 55°-80° F. in a clean mixing container. Use 16 pints of water to 25 lbs. of Triple Duty Joint Compound.

If the water and/or the bag contents are cold more than the above prescribed amount of water may be needed in order for the material to reach a workable consistency. Mix the powder to a stiff consistency. After a soaking period of 10 to 15 minutes, the mix will lose its stiffness. After the soaking period, the material should be remixed without adding water until it becomes plastic-like and creamy. If desired, more water may be added, after remixing, to obtain a thinner consistency.

If desired, this product can be kept in a wet state for up to 60 days and remain usable provided the container is sealed tightly to prevent air drying. However, if the material is kept in a wet state for prolonged periods it should be protected from freezing.



application instructions

Apply Triple Duty Joint System Compound to all flat joints and embed tapes. Leave a uniform thickness of compound under the tapes and shear off excess material. At the same time, cover all nail heads and corner beads. Allow the application to dry thoroughly before the next step.

When the joint compound has thoroughly dried and whitened, cover the taped joint with the same material. Shear off the surplus, leaving a uniform coverage over the tapes, and feather the edges. Repeat the spotting of the nail heads and finishing of the corner beads for each subsequent application or as many times as necessary.

The layer of Triple Duty used to embed the tapes and the coat of joint compound over the tapes must be thoroughly dry before applying the next coat.

Cover the joints again and shear off the excess as before, leaving a smooth, well feathered joint. Allow the joints to dry before proceeding further.

For best results, cover the joints a third time with G-P Triple Duty Joint Compound.

A prime coat should be used over the entire area before the final decoration.

To texture finished gypsumboard surface, G-P All Purpose may be used. For best results, apply a vinyl primer to the entire area before texturing. The texture may be applied with a roller, sponge, brush or other suitable implement, depending on the type of configuration desired. For heavy textures, use about 20 pints of water and for light textures use about 22 pints per 25 lbs. Protect woodwork and trim during application and remove all drops and splatters before they harden.

surface preparation for skim coating of concrete ceilings

Grind off the rough and jagged imperfections of the poured slab. The concrete must be dry, sound and free of rust, dirt, loose and scaling particles. Be sure any residue used as a parting agent to separate the forms has been cleaned away. A heavy coat of anti-rust primer should be applied by brush, roller or spray, to any exposed metal and must be allowed to dry thoroughly.

application of triple duty joint compound to concrete surfaces

Grout in all "form marks" and obvious imperfections with one application of Triple Duty Joint Compound and allow to dry thoroughly. Apply a second application at right angles to the previous coat and allow to dry thoroughly. Apply skim coat to insure a smooth uniform finish. The skim coat, when dry, may be touched up and lightly sanded to eliminate any unusually rough areas as well as any blade marks before the final decoration is applied. Any normal decoration or texture can be used over the finished surface.

availability: In 25 lb. bags throughout the U.S.

asbestos free ready mix products

G-P ready mix

This Georgia-Pacific joint compound is a prepared wet mix material to bond tape to gypsum-board for joint reinforcement, to fill and finish joints, cover and finish nail heads and corner beads and for texturing. Ready Mix has a controlled formulation and mixing qualities which result in greater coverage, uniform consistency, easier sanding and smoother workability while saving on job mixing time. Ready Mix can be stored for a maximum of 6 months and not lose any of its bonding or working properties.

coverage: Approximately 5 gallons per 700 square feet of gypsumboard.

availability: Asbestos free in 1 gallon and 5 gallon pails adjusted to either machine or hand tool consistency everywhere in the Continental United States. Four gallon boxes of asbestos free are available in the Southwest or West.

application instructions

Apply G-P Ready Mix System Compound to all flat joints and embed tapes. Leave a uniform thickness of compound under the tape and shear off excess material. At the same time, cover all nail heads and corner beads. Allow the application to dry thoroughly before the next step.

When the joint compound has thoroughly dried and whitened, cover the taped joint with the same material. Shear off the surplus, leaving a uniform coverage over the tapes and feather the edges. Repeat the spotting of the nail heads and finishing of the corner beads for each subsequent application or as many times as necessary.

The joint compound used to embed the tapes and the coat of joint compound over the tapes must be thoroughly dry before applying the next coat. Cover the joints again and shear off the excess as before, leaving a smooth, well feathered joint. Allow the joints to dry before proceeding further.

For best results, cover the joints a third time with G-P Ready Mix.

A prime coat should be used over the entire area before the final decoration.

To texture the finished gypsum-board surface, Denswall Textures or G-P All Purpose may be used. For best results, apply a vinyl primer to the entire area before texturing. The texture may be applied with a roller, sponge, brush or other suitable implement, depending on the type of configuration desired. Follow the instructions on the Denswall Texturing bag for consistency. When using G-P All Purpose, heavy textures are obtained by adding about 20 pints of water and for light textures use about 22 pints per 25 lbs. Protect woodwork and trim during application and remove all drops and splatters before they harden.

use G-P casein or vinyl joint compounds for laminating

When two or more layers of gypsumboard are to be applied, the face layer or layers may be adhesively attached with fewer fasteners than normally required. For walls, the face layer may be attached with permanent perimeter fasteners only in conjunction with the adhesive. For ceilings, permanent fasteners must be applied no further apart than 24" o.c.; that is, there shall be one fastener at each edge and at least one fastener in the field of the board. Where fire ratings are involved, see fire test report for fastener positioning.



Bedding Compound, All Purpose Joint Compound, Triple Duty, or Ready Mix Joint Compound may be used as a laminating adhesive. Topping compounds shall not be used for this purpose. The adhesive may be applied by either of two methods:

1. For solid lamination, apply approximately $\frac{3}{16}$ " to $\frac{1}{4}$ " high beads 2" apart over the entire surface to be laminated.
2. For semi-solid lamination, apply 6" wide strips or bands of adhesive consisting of beads approximately $\frac{3}{16}$ " high and $1\frac{1}{2}$ " apart with the strips or bands located 16" o.c.

note: Temporary fasteners may be needed to hold the gypsumboard in place and removed after the adhesive has set. However, these do not replace whatever permanent fasteners are required.

asbestos free speed set™

G-P speed set

G-P Speed Set is a quick setting type gypsum base joint compound, containing a vinyl adhesive, to be used for applying tape, filling metal corner beads, concealing nail heads and finishing joints. This product is available with either a 60 minute or 90 minute working time. Setting time is approximately 30 minutes more than the working time. When set, this material will not shrink.

coverage: Approximately 50 to 60 lbs. per 1000 sq. ft. of gypsum-board.

availability: In 25 lb. bags, everywhere in the continental U.S.

mixing instructions

G-P Joint Speed Set System Compound should be mixed with clean, drinkable water at a temperature of 55°-80° F. In a clean mixing container, use 15 pints of water to the 25 lb. contents of this bag.

If the water and/or the bag contents are cold more than the above prescribed amount of water may be needed in order for the material to reach a workable consistency. Mix to the consistency the material will be used. Speed Set Compound should not be allowed to soak for more than a few minutes. This would reduce the working time. If desired, more water may be added at this time to obtain a thinner consistency.

application instructions

Speed Set Compound is a product which hardens prior to drying and thereby substantially eliminates further shrinkage. The setting action also provides additional bonding and is harder and stronger than conventional drying type joint compounds. It is recommended for use with round edge board for pre-filling and taping. It is also recommended for filling corner beads and



nailheads. It may also be used for taping and finishing regular tapered edge wallboard. Because of Speed Set's fast hardening, it can be used to complete more than one joint finishing operation in a day.

Apply G-P Speed Set Compound to all flat joints and embed tapes. Leave a uniform thickness of compound under the tapes and shear off excess material. At the same time, cover all nail heads and corner beads. Allow the application to harden thoroughly before the next step. No additional drying time is needed to control shrinkage.

When the Speed Set has hardened, cover the taped joint with the same material. Shear off the surplus, leaving a uniform coverage over the tapes and feather the edges. Repeat the spotting of the nail heads and finishing of the corner beads for each subsequent application or as many times as necessary.

Cover the joints again and shear off the excess as before, leaving a smooth, well feathered joint. Allow the joints to harden before proceeding further.

For best results, cover the joints a third time with G-P Speed Set.

A prime coat should be used over the entire area before the final decoration.

To texture the finished gypsum-board surface, Denswall Textures or G-P Triple Duty may be used. For best results apply a vinyl primer to the entire area before texturing. The texture may be applied with a roller, sponge, brush or other suitable implement, depending on the type of configuration desired. Follow the instructions on the Denswall Texture bag for consistency. When using G-P Triple Duty, heavy textures are obtained by adding about 20 pints of water and for light textures use about 22 pints per 25 lbs. Protect woodwork and trim during application and remove all drops and splatters before they harden.

recommendations

1. Do not mix more material than can be applied in 1 hour.
2. Do not mix with other joint compounds in either wet or dry form.
3. Clean tools and mixing equipment after each batch to prevent acceleration of setting time.
4. If stiffening occurs (except within the first 10 minutes), setting action is starting and material should be discarded.
5. Do not retemper mix—never add part of a previous batch to a fresh batch.
6. Minimum air, water mix and surface temperature of 55° must be maintained in working areas until joints are completely dry.

specialty products

asbestos free denswall[™] texturing products

wall and ceiling textures

Georgia-Pacific offers three basic textures. All are dry powder products and contain a tested balance of aggregate to produce the effect you want. The coverage, however, will vary with different types of surfaces, spray equipment, workmanship and customer requirements.

G-P wall texture

Packaged in a 25 lb. bag, this product has no aggregate added to its contents. G-P's wall texture may be applied with spray equipment, large wall brush, roller, or trowel. Wall Texture is white and matches all G-P ceiling textures. In addition, it offers good hiding properties, maximum coverage and great workability.

Aggregate can be added in the field as desired.




G-P vermiculite

Ceiling Texture is packaged in a 40 lb. bag. This product contains vermiculite aggregate and is available in fine, medium or coarse textures. Vermiculite aggregate offers an acoustical finish appearance for ceilings but does not provide acoustical sound correction. The use of this product results in a white, rugged texture with semi-rounded "hills and valleys" that help conceal surface defects while producing a beautiful, decorative textured ceiling.



G-P polystyrene

Ceiling Texture is packaged in a 32 lb. bag. Polystyrene texture is designed for fast, economical spray application to ceilings. The resultant texture is white, with strong adhesion. Offering maximum coverage and excellent hiding qualities, polystyrene aggregate is a plastic bead which is shredded into coarse angular particles that produce an extremely rough texture. These aggregate particles will retain their size and shape during long periods of mechanical mixing. This is an ideal product for volume spray application.

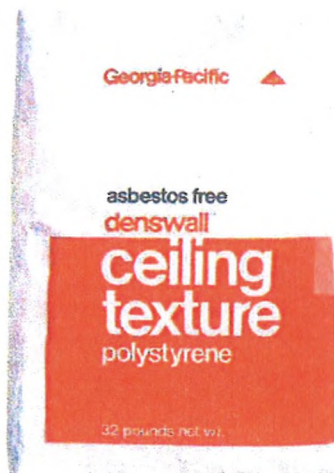

application to gypsumboard

All surfaces including joint compound applications, must be clean and dry. If surface has been previously painted, roughen any glossy paint, and clean well. Apply a white vinyl based primer or equivalent to new work prior to texturing. Protect woodwork and trim during application and remove all overspray from walls before the texture dries. For best results use the lowest air pressure that will produce a satisfactory spray pattern. If one coat will not cover due to uneven suction, or if a heavy application is desired, it may be necessary to apply a second coat. Allow the first coat to dry before applying the second coat.


application to concrete

All surfaces must be clean, dry and sound with no chalkiness or efflorescence. Prime all exposed metal with a rust inhibitive primer. New concrete should be aged at least 60 days. Irregularities and form marks must be smoothed. High spots can be ground down. Depressions and holes can be filled with G-P Joint Compound. For deep fills, G-P Speed Set Compound is recommended. Seal the entire surface with a white vinyl sealer or pigmented shellac. Spray the G-P Texture in two applications at right angles to each other, allowing the first coat to dry before applying the second.

DENS WALL™ TEXTURE	FINISH	BAG SIZE	WATER MIX*	REMIX	AVERAGE COVERAGE**	
					GYPSUMBOARD	CONCRETE
wall texture	Variable	25 lb.	Add 2 gallons	Do not exceed 1½ gallons additional	Spray 1,000 sq. ft. Trowel 200 sq. ft.	
vermiculite ceiling texture	Fine Medium Coarse	40 lb.	Add 4½ gallons	Do not exceed 1½ gallons additional	Spray 400 sq. ft.	300 sq. ft.
polystyrene ceiling texture	Coarse	32 lb.	Add 6 gallons	Do not exceed 2 gallons additional	Spray 250 sq. ft.	200 sq. ft.

*Mix until dry powder is wetted and well dispersed. Then allow to soak for 20 minutes. Remix and adjust to desired consistency.

**Depends upon texture appearance desired. Coverage can vary considerably.

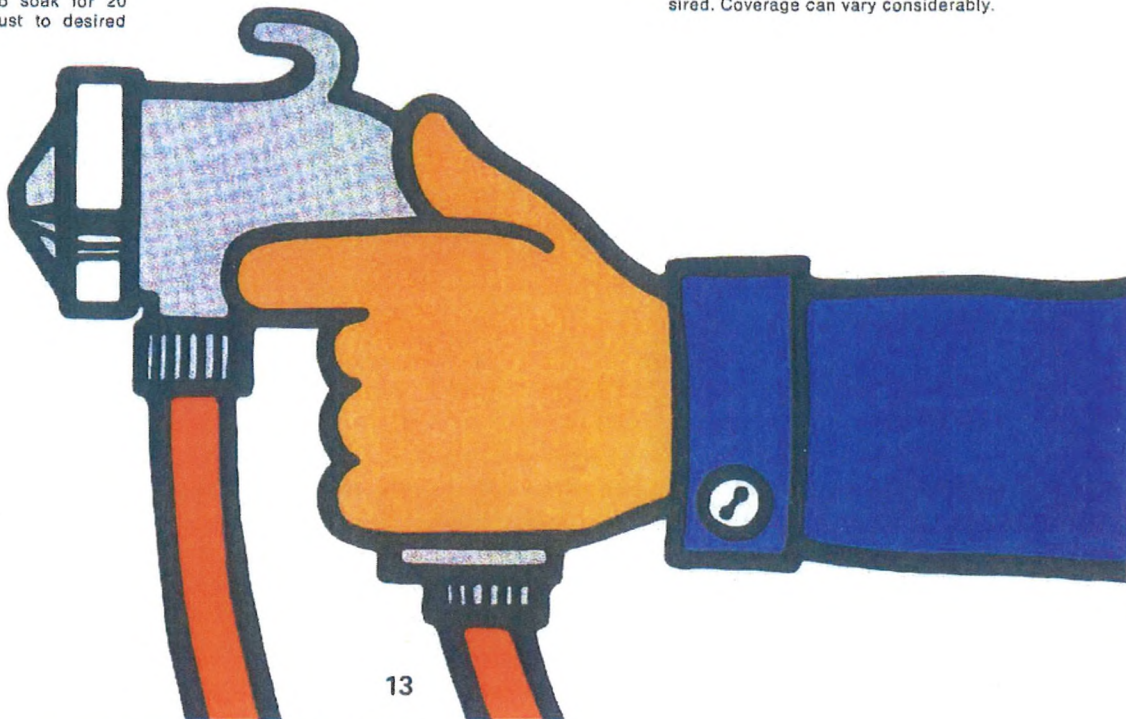

asbestos free joint/patching compound



G-P asbestos free joint system compound

Georgia-Pacific has packaged a joint compound specially designed for the do-it-yourselfer. It contains the same high quality formulation for superior performance demanded by professionals. It can be used almost immediately after mixing, and still retain the mixed consistency for extended periods of time.

For use in bedding and topping tape and spotting nail heads, joint system compound spreads smoothly, bonds tightly and resists edge cracking. It also feathers well, shrinks very little and sands easily.

availability: In either 5 lb. bags, 4 lb. bags with a sixty foot roll of tape, or 1 gal. can (Ready-Mix, no mixing required) everywhere in the continental U.S.

mixing: Joint system compound should be mixed in a clean metal container (not aluminum) using clean water at 55 degrees to 80 degrees Fahrenheit. To mix entire contents (5 lbs.), add dry compound to 3 pints of water and mix thoroughly (4 lb. bag—2½ pints of water). Mixture will be stiff but do not add more water. Cover the container with a wet cloth and let it stand for 30 minutes, then add more water if necessary to make the consistency slightly thinner than putty. Do not mix more than can be used in 36 hours.

application: With a semi-flexible broad knife, generously "butter" the joint with joint system compound, working it well into the joint. Shear off the excess material.

Press strip of GP tape in the center of the joint. Smooth down firmly into the compound, remove excess cement and level into an even surface.

When the first coat is dry, cover with joint compound. Shear off surface, leaving a smooth joint. When dry, another coat over the entire surface ensures best results.

Allow 24 hours drying time and then sand carefully with fine sandpaper for a smooth finish. For best results a vinyl primer should be applied before decoration.

G-P asbestos free patching plaster

mixing: Add G-P patching plaster to cool or cold water and stir to a putty consistency, free of lumps. Generally the larger the patch, the thicker the putty should be.

surface preparation: The areas to be patched must be clean and dry, and free of loose particles. Enlarge small cracks by cutting out old plaster to form an inverted "V". Dampen the entire area to be patched with water to promote adhesion between the old plaster and the new.

application: Small cracks and imperfections are filled by using patching plaster with a thinner consistency and forcing it into the cracks with a broad knife. Use the broad knife to "shear" off any excess plaster.

Large holes and imperfections require two coats. Apply the first coat so that it nearly fills the area being patched. Allow it to harden. While the first coat is still wet, apply a second coat. Bring this coat out flush to the finish surface and shear it off smooth with the tool. When the second coat is hard and dry, sand it to a smooth surface if necessary. Seal the surface with a good latex primer before painting or papering.

asbestos free joint/patching compound



G-P asbestos free joint system compound

Georgia-Pacific has packaged a joint compound specially designed for the do-it-yourselfer. It contains the same high quality formulation for superior performance demanded by professionals. It can be used almost immediately after mixing, and still retain the mixed consistency for extended periods of time.

For use in bedding and topping tape and spotting nail heads, joint system compound spreads smoothly, bonds tightly and resists edge cracking. It also feathers well, shrinks very little and sands easily.

availability: In either 5 lb. bags, 4 lb. bags with a sixty foot roll of tape, or 1 gal. can (Ready-Mix, no mixing required) everywhere in the continental U.S.

mixing: Joint system compound should be mixed in a clean metal container (not aluminum) using clean water at 55 degrees to 80 degrees Fahrenheit. To mix entire contents (5 lbs.), add dry compound to 3 pints of water and mix thoroughly (4 lb. bag—2½ pints of water). Mixture will be stiff but do not add more water. Cover the container with a wet cloth and let it stand for 30 minutes, then add more water if necessary to make the consistency slightly thinner than putty. Do not mix more than can be used in 36 hours.

application: With a semi-flexible broad knife, generously "butter" the joint with joint system compound, working it well into the joint. Shear off the excess material.

Press strip of GP tape in the center of the joint. Smooth down firmly into the compound, remove excess cement and level into an even surface.

When the first coat is dry, cover with joint compound. Shear off surface, leaving a smooth joint. When dry, another coat over the entire surface ensures best results.

Allow 24 hours drying time and then sand carefully with fine sandpaper for a smooth finish. For best results a vinyl primer should be applied before decoration.

G-P asbestos free patching plaster

mixing: Add G-P patching plaster to cool or cold water and stir to a putty consistency, free of lumps. Generally the larger the patch, the thicker the putty should be.

surface preparation: The areas to be patched must be clean and dry, and free of loose particles. Enlarge small cracks by cutting out old plaster to form an inverted "V". Dampen the entire area to be patched with water to promote adhesion between the old plaster and the new.

application: Small cracks and imperfections are filled by using patching plaster with a thinner consistency and forcing it into the cracks with a broad knife. Use the broad knife to "shear" off any excess plaster.


Large holes and imperfections require two coats. Apply the first coat so that it nearly fills the area being patched. Allow it to harden. While the first coat is still wet, apply a second coat. Bring this coat out flush to the finish surface and shear it off smooth with the tool. When the second coat is hard and dry, sand it to a smooth surface if necessary. Seal the surface with a good latex primer before painting or papering.

accessories

wallboard tape

Full 2" width, "Miracle Crease" spark perforated tape with skived edges and sanded surface on both sides. Bonding qualities are excellent. Porosity permits rapid drying of Joint Compound. Easy to use, economical, with minimal expansion. Stabilized against varying humidity conditions, it reduces uneven expansion and edge wrinkling.

packaging: Available in 60', 250', and 500' rolls as follows: 60' rolls packed 60 per box, approximately 24 lbs.; 250' rolls packed 20 per box, approximately 29 lbs.; 500' rolls packed 10 per box, approximately 28 lbs.

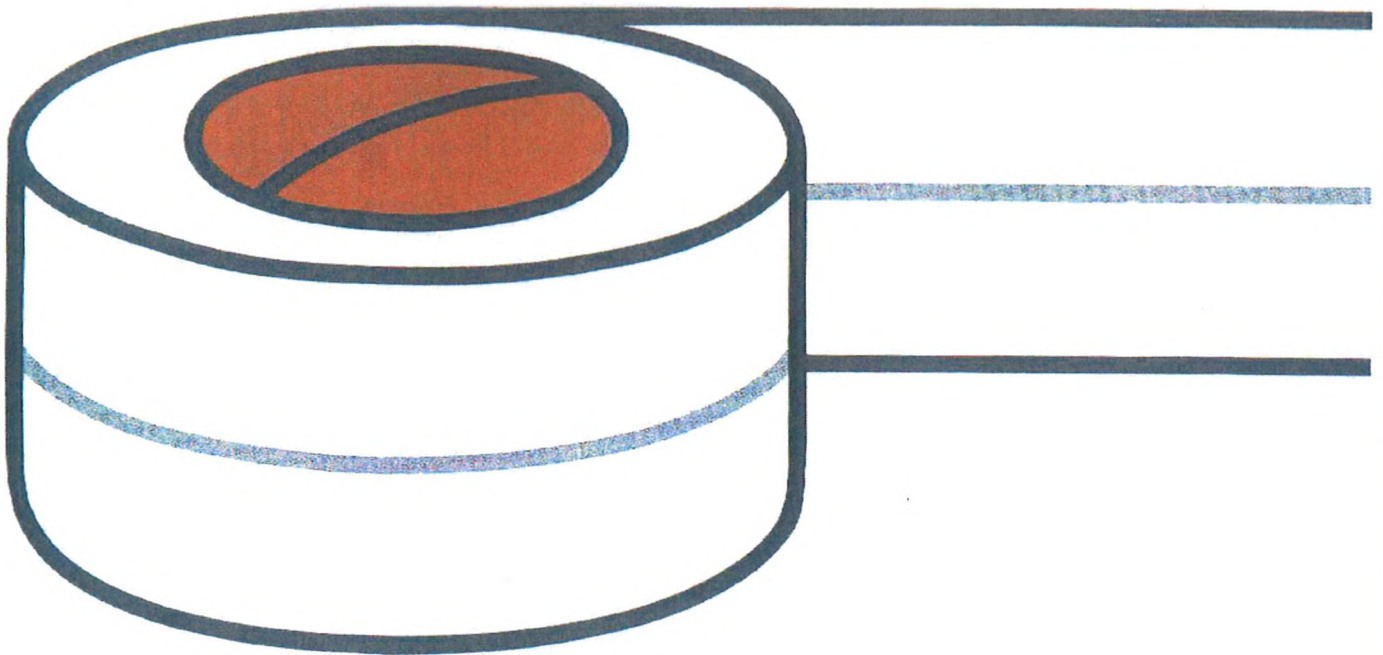

technical information

joint system drying time

Temperature and humidity have a direct effect on the drying time on joint treatment products. While there is very little that can be done to alter temperature and humidity under job conditions, care should be taken to note the average differences in drying times under different atmospheric conditions, so that problems may be minimized. Joint treat-

ment products must be thoroughly dry before successive coats are applied, and/or final decoration is applied. In all cases, a well ventilated area assists in the proper drying of these materials.

The chart shown below indicates the average drying periods for joint treatment products under different temperature and humidity conditions.

Relative Humidity	0	20%	40%	50%	60%	70%	80%	90%	98%
40 Temperature ° F.	28 H	34 H	44 H	2 D	2½ D	3½ D	4½ D	9 D	37 D
60	13 H	16 H	20 H	24 H	29 H	38 H	2½ D	4½ D	18 D
80	6 H	8 H	10 H	12 H	13½ H	19½ H	27 H	49 H	9 D
100	3 H	4 H	5 H	6 H	8 H	10 H	14 H	26 H	5 D

H = hours D = days


painting of drywall

It is extremely important that the difference in absorption between the wallboard surface and the compound over joints and nails be equalized to provide uniformity of color, suction and texture

over the entire wall or ceiling. After the joint treatment has been completed and *thoroughly dried*, the surfaces should be sealed or primed with a good quality primer/sealer.

the primary cause of nail popping

Illustration #1 through #3 demonstrates what happens when green lumber (not thoroughly dried) is used for framing (Fig. 1). The wood pulls away from the wall, as the wood dries and shrinks (Fig. 2), then the nail pushes out through the gypsum-board (Fig. 3).

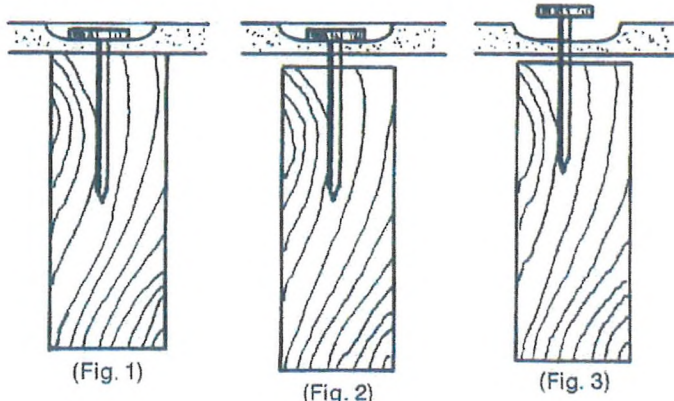

problems which occur in joint treatment

JOINT TREATMENT CONDITIONS	CAUSE	REMEDY OR PREVENTION
SHORT WORKING COMPOUND	Extremely warm dry weather during application.	Make allowance for fast drying. Minimize ventilation during application.
PUTREFACTION	Dirty or contaminated buckets. Aggravated by hot humid weather conditions.	Use only clean mixing pails and tools. Avoid excessive standing of mixed materials.
EXCESSIVE SHRINKAGE	Excessive amount of mixing water. Especially prevalent when cold water and cold compound are used.	Use 55°F minimum water and follow manufacturer's instructions.
EDGE CRACKING	Thick coats of compound under the tape. Fast drying conditions.	Avoid application over hot surfaces near pipes, radiators, salamanders. Control ventilation during the drying cycle in hot weather so as not to obtain radical changes in temperature, avoid drafts.
NAILS PHOTOGRAPHING	Airborne soot or dust particles collecting over nail-head. Shank of nail will conduct cold; airborne particles collect over this cooler area.	Dependent upon cleanliness of air. Deposits can be washed off. Insulate to provide uniform temperature.
TAPE PHOTOGRAPHY	Compound over tape is glazed due to tape being high. Deeper fills on either side of tape will not be glazed and will thus have a rougher texture. Low or high joints.	Press tapes in tightly. A sheer coat will equalize suction and texture. Refinish off level joint.
STARVED JOINTS	Delayed shrinkage (not allowing preceding coats to dry), insufficient compound applied over tape to fill recess. Over sanding.	Allow sufficient drying time between coats of compound. Keep sanding to a minimum. Apply additional coat.
BLISTERS IN TAPE	Insufficient compound under the tape. Tape not initially pressed into good contact with compound.	Open up blister by slitting tape. Fill cut with compound and press tape in place.
POOR BOND	Cold compound, water, or surfaces. Freezing of wet compound in pail or on wall after application. Insufficient soaking time.	Maintain minimum 55°F temperature. Protect from freezing. Allow necessary soaking time.
CRACKS IN INSIDE CORNER	Too much compound over the tape at apex of angle.	Wipe down corners correctly, leaving only small amount or no compound in the apex.
"BURN THRU" OR JOINTS SHOWING THRU PAINT "BLEEDING THRU" "SHOWING THRU"	1. Painting before the joint system is completely dry. 2. Crowning of the joints will cause a difference in light reflection. 3. Difference in texture and suction between compound and board. 4. Paint having poor hiding properties—thinning paint too much. (Same is true for textures, as well as paints.)	1. Allow sufficient drying time. 2. Avoid high crowns. 3. Apply primer. 4. Avoid excessive thinning of paints, or textures.
RIDGING	Movement of the framing or uneven shrinkage. Aggravated by cold humid conditions.	Let condition develop fully (6 months or 1 heating season). Sand ridge to tape (Do not cut tape) and fill concave areas each side. When dry, apply finish coat and redecorate.
NAIL POPPING	Shrinkage of framing, loose board, mis-aligned framing, or board core crushed in nailing.	Drive a second nail alongside the first, preferably catching the head of the popped nail with the head of the second nail.

DISTRIBUTION CENTERS

United States

ALABAMA

Birmingham
5100 8th St.
(205) 841-6415
Huntsville
370 Highway 20 East
Madison, Alabama
(205) 772-8881

Mobile

3431 Georgia-Pacific Ave.
(205) 479-0604

Montgomery

4342 Galloway Ave.
(205) 268-7380

ALASKA

Fairbanks
272 Illinois St.
(907) 452-2131

ARIZONA

Phoenix
487 White Center St.
(602) 930-1413

Tucson

430 E. Irvington Rd.
(602) 898-6721

ARKANSAS

Ft. Smith
8801 Joyce Lane Road
(501) 548-4251

Little Rock

2101 Ogden St.
(501) 524-0212

Tomball

2800 Concession Road
(817) 775-8100

CALIFORNIA

Alhambra
1700 Lewis St.
(714) 534-4441

Fresno

5208 East Morse Ave.
(209) 241-6471

Los Angeles

1750 Nelson Ave.
City of Industry
(213) 688-3831

Oakland

2200 Patterson Ave.
San Leandro
(415) 552-5150

Riverside

1430 Citrus Ave.
(714) 884-6393

Sacramento

2801 Orange Grove Ave.
North Highlands
(916) 481-4444

Seattle

1031 Industrial Ave.
(408) 738-0813

San Diego

901 West 34th St.
Riverside City
(714) 265-9665

San Francisco

7871 Bayview Ave.
San Francisco
(415) 367-3211

San Jose

650 East 5th St.
(408) 297-7800

Santa Rosa

3417 Highland Road
(707) 544-3640

COLORADO

Denver
3500 Nevada St.
(303) 371-7800

CONNECTICUT

Hartford
773 North Main St.
Manchester, Conn.
(203) 646-3700

Wallingford

806 North Colony St.
(203) 268-8735

DELAWARE

Wilmington
Riverside Ind. Pk.
Tartan Ave. & Cheltenham
(302) 656-8203

FLORIDA

St. Myers
3507 Work Drive
(813) 532-3937

Jacksonville

1535 Holmes St.
(904) 396-8711

Miami

3201 N.W. 110th St.
(305) 898-8883

Orlando

3383 All American Blvd.
(407) 393-3701

Port St. Joe

4801 McCay Dr.
(813) 434-3501

Tallahassee

589 Mabry St.
(904) 378-2110

Tampa

1701 East Columbus Dr.
(813) 901-1301

West Palm Beach

305 West 14th
Palm Beach
(407) 844-8771

GEORGIA

Atlanta
1013 North St.
(404) 424-3636

Atlanta

2555 Peachtree Corners Dr.
Norcross, Ga.
(404) 446-7100

Augusta

1520 Gordon Highway
(404) 724-6578

Columbus

1411 Boulevard Dr.
(404) 327-4521

Macon

7501 N.E. Ind. Blvd.
(912) 731-0700

Savannah

1411 E. Ind. Blvd.
(912) 731-0700

Indianapolis

1411 E. Ind. Blvd.
(912) 731-0700

ILLINOIS

Chicago
10450 Wacker Ave.
Franklin Park
(312) 678-2900

Harmon

(312) 923-3308

Quincy

300 East Fourth Ave.
Moline, Ill.
(309) 787-6121

INDIANA

Elkhart
285 Gables Rd.
(219) 294-4481

Evansville

620 North Congress Ave.
(812) 427-8123

Fort Wayne

1620 Bluffton Road
(219) 347-1831

Indianapolis

1417 South Franklin Road
(317) 357-8754

IOWA

Des Moines
5501 Northrup 17th St.
(515) 365-5251

KANSAS

Wichita
401 West 47th St. South
(316) 352-4031

KENTUCKY

Louisville
2718 Grandview Drive
(502) 481-8410

LOUISIANA

Baton Rouge
1201 Lakeside St.
(504) 345-7401

Lafayette

274 S. W. Evangeline
Thruway
(337) 252-2831

New Orleans

7300 Ambassador Ave.
(504) 241-2300

Shreveport

2801 Zephyr Ave. Dr.
(504) 396-4771

MAINE

Bangor
Bennett St. & High St.
(207) 347-0142

Portland

808 Warren Ave.
(603) 797-8684

MARYLAND

Baltimore
5011 Quind Ave.
(301) 295-4700

Salisbury

Armstrong Parkway &
Marshall Rd.
(301) 548-2181

MASSACHUSETTS

Roslin
305 Springfield St.
Wilmington
(617) 349-8203

Springfield

121 Memorial Drive
Memorial Bldg. Park
(413) 731-7330

MICHIGAN

Detroit
11800 Seals Drive
Livonia
(313) 522-4100

Grand Rapids

325 Buchanan Ave. S.W.
(616) 241-1825

Grayling

26 Horton St.
(517) 348-5445

Legion

2750 E. Wash. Rd.
(517) 752-4334

MINNESOTA

Minneapolis
1115 Century Line Rd. 18
Maple Grove
(612) 425-6811

MISSISSIPPI

Jackson
555 Gulf Line Rd.
(601) 959-4420

MISSOURI

Capo Girardeau
North Road
(314) 334-9531

Kansas City

1445 Toney St.
North Kansas City
(816) 842-3386

St. Louis

6025 Brynmore Dr.
Hazelwood
(314) 711-0731

Springfield

1220 East Chetwy St.
(417) 869-1841

MONTANA

Billings
800 Daniel St.
(406) 245-3126

Great Falls

901 River Drive S.
(406) 160-3471

NEBRASKA

Lincoln
545 "L" St.
(402) 439-7525

NEVADA

Reno
259 N. McCarran Blvd.
(702) 350-7454

NEW HAMPSHIRE

Manchester
300 Day St.
(603) 327-3881

NEW JERSEY

Clifton
400 Alderson Rd.
(201) 771-1000

Franklin

140 S. 2nd, Route 4100
Fairfield
(609) 545-1168

NEW MEXICO

Albuquerque
1520 San Mateo N.W.
(505) 242-2791

NEW YORK

Albany
Brown and Ind. Rds.
(518) 469-8080

Binghamton

Broomfield Pk.
Catskill Road Extension
Kirkwood
(607) 775-1120

Buffalo

2545 Walden Ave.
(716) 685-3330

Rochester

1480 East Henrietta Rd.
(716) 442-1821

Suffolk

Yaphank Ave. and Park St.
Yaphank
(516) 324-7400

Syracuse

Madison Park Dr.
(315) 437-1201

NORTH CAROLINA

Ashville
Route 72, Asheville Road
(704) 298-3074

Charlotte

3300 Parkside Dr.
(704) 394-1171

Greensboro

5005 Figgston Dr.
(919) 275-9431

Raleigh

3501 Tapered Dr.
(919) 275-4439

Wilmington

3115 Marlboro St.
(919) 799-5000

NORTH DAKOTA

Fargo
304 N. 18th St.
Minot, Minn.
(701) 208-1329

OHIO

Akron
560 Mulholland Falls Road
(216) 334-1140

Cincinnati

4710 Dues Dr.
(513) 274-4721

Cleveland

19100 Hoffman Rd.
(216) 234-1378

Columbus

2700 Riverside Rd.
(614) 445-5256

Dayton

5150 Webster St.
(513) 278-5986

Toledo

2815 Hill Ave.
(419) 329-0721

OKLAHOMA

Oklahoma City
5519 N.W. Fourth St.
(405) 544-6727

Tulsa

5117 North Mingo
(918) 731-2211

OREGON

Eugene
3445 W. 1st Ave.
(503) 345-4386

Portland

12515 S.W. Astor Avenue
Beaverton
(503) 643-6611

PENNSYLVANIA

Lancaster
3630 Hempfield Industrial
Park
(717) 385-4544

Philadelphia

801 First Ave.
King of Prussia
(215) 268-4600

Pittsburgh

Hunker Rd. and St. 119
New Stanton
(412) 342-9100

Scranton

150 Patton Ave.
Cataleghua-Pocono
(717) 855-2801

RHODE ISLAND

Providence
172 Jefferson Blvd.
Warwick
(401) 483-7700

SOUTH CAROLINA

Charleston
Dennis Ind. Park
(803) 324-5191

Columbia

325 Brinkers Rd.
(803) 771-7740

Greenville

Haywood Road
(803) 268-0000

SOUTH DAKOTA

Sioux Falls
4301 N. 4th
(605) 598-5500

TENNESSEE

Bristol
100 Hwy. Ind. Blvd.
(615) 463-4121

Chattanooga

201 East 26th St.
(615) 908-8079

Knoxville

1381 Mitchell St. N.E.
(615) 546-4441

Memphis

Georgia-Pacific

intracompany memo

File: 9454

to * See Below location
from Bob Morse location Portland
subject New Joint Systems Brochure date September 2, 1977

Attached is the new Joint Systems Brochure. The piece covers our entire line of joint compounds and textures in detail. Additional copies of this piece are available by completing this form below or using the standard Advertising/Sales Promotion order form.

R. E. 

REM:jk
Attachment

* Messrs. G. S. Nelson
K. E. Powell
G. F. Baitinger
E. G. Seiler
O. E. Burch
T. R. Godfrey
D. C. Corkill
C. W. Lehnert
Branch Managers
Regional Managers
Gypsum Regional Managers
Gypsum Plant Managers

To: Bob Morse Advertising Dept.

Please send me _____ additional copies of the new G-P Joint Systems brochure.

Branch _____ Name _____


WK GP 5091

File 01321

Georgia-Pacific



joint systems
and specialty products
for gypsumboard

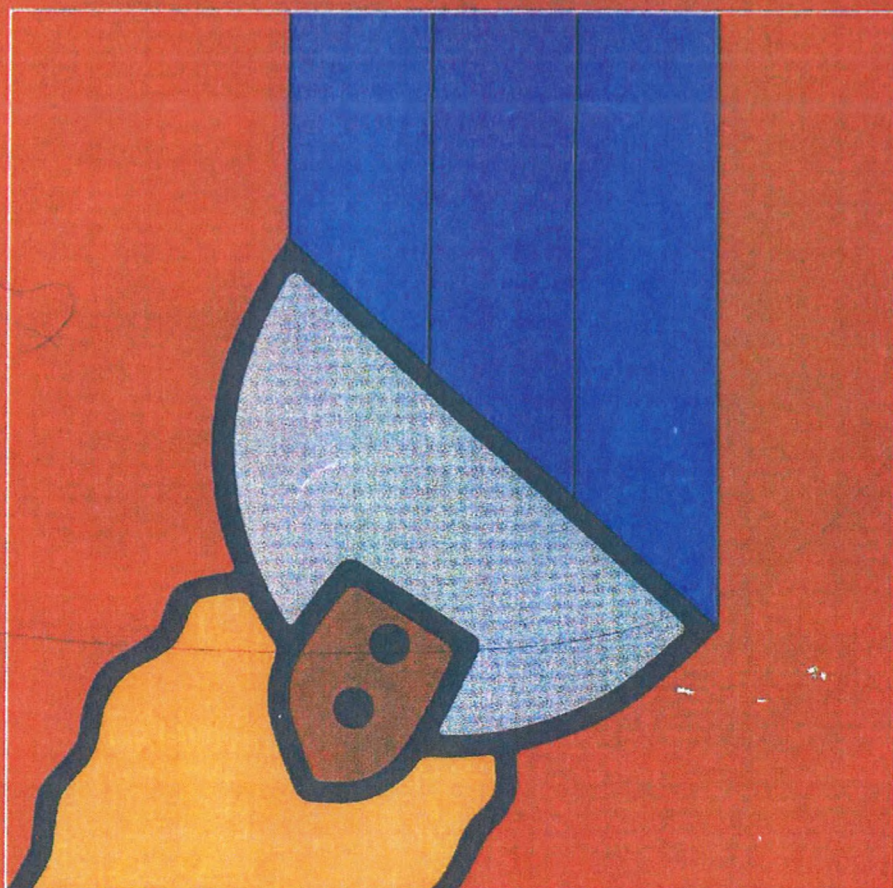

joint systems and specialty products

Why the name Georgia-Pacific makes such a difference.

The critical point in applying gypsumboard comes when it is time to reinforce and conceal the joints. A smooth monolithic surface is required, one that will accept various types of decoration. Georgia-Pacific produces a complete line of Joint System Products that includes the latest pre-mixed compounds along with the more conventional powders suitable for either hand tools or mechanical application. All G-P products conform to ASTM Specification no. C 475 and federal specification no. SS-J-570a.

There are several distinct advantages to Georgia-Pacific Joint System Products, including:

mixing stability. A wet mix consistency that remains stable, means you avoid those irritating adjustments before use.

plasticity. Joint System Products under the name Georgia-Pacific have exceptionally smooth application properties because of their plasticity. This plasticity enables far better control during the application and provides better shear and feather qualities.

bond durability. Georgia-Pacific products develop a strength and water resistance which produces an excellent bond and joints as strong as the board itself.

less shrinkage. By exhibiting a minimum of shrinkage, G-P product assure excellent job results.

high quality. Georgia-Pacific quality standards and controls are some of the most rigid and best known in the industry.

There are some natural **precautions** that should be taken with any joint compound or adhesive:

1. All powder formulas should be protected against moisture;
2. Each coat must be thoroughly dry before the succeeding coat or final decoration is applied;
3. Only clean mixing water should be used. Both water and powder should be at 55°-80° F.
4. One Georgia-Pacific product should not be mixed with another Georgia-Pacific product or with another manufacturer's product.

5. After the joint treatment is thoroughly dry, all surfaces should be sealed or primed with a vinyl or oil base primer/sealer. This imparts a uniform texture and suction over the entire wall or ceiling surfaces. When the primer/sealer has dried, apply the final decoration per the manufacturer's recommendations.

6. Special Joint Finishing Recommendation for Wintertime Conditions.

Cold weather, cold water, cold joint compounds and extremes of temperature due to efforts to provide heat are conditions that deserve special attention. During the application of the joint compounds, the bond, shrinkage and working properties are all adversely affected when they are used at temperatures significantly lower than 55°F. In order to minimize this problem, our products should be mixed with water that is 55°F or warmer, products should be stored in areas that are heated and the structures to be taped and finished should be heated to at least 55°F 24 hours in advance and subsequently until drying is complete.

As the building is heated after the gypsum board and joint compound are applied, there may be shrinkage of the framing members or movement due to warping of the framing or settling of the building. This can cause joint beading or nail popping. Once these conditions appear, it is advisable to postpone repairs until one complete heating season has passed.

There are some procedures and products that can help to minimize problems encountered during adverse weather, particularly in the winter. We recommend:

1. Round edge board pre-filled with Speed Set adhesive or joint compound prior to the taping of the joints. This system will reduce the incidence of joint beading.
2. Speed Set joint compound for the first coat on corner beads. This will prevent excessive shrinkage and provide a more secure bond at low temperatures. Under no conditions should topping compounds be used for the first coat over corner bead.
3. Speed Set joint compound for the embedding of the tape and the first coat over nail-heads. Less shrinkage and better bonds at low temperatures will be obtained.



color coded packaging

For ease of reference and to make certain that the right product is always used for the right job, Georgia-Pacific has color coded all its Joint System Products by their base properties. All Casein based products are packaged in natural kraft bags. Vinyl based products are available in yellow bags. The texturing products and the consumer line are all in white bags. A further differentiation is made with the lettering color, as the chart below indicates:

Note: Check with the G-P gypsum sales manager regarding the products available in your area.

asbestos free

joint
system
compound
with 60'
roll of tape

bedding

coverage: Approximately 15 to 20 lbs. per 1000 sq. ft. of gypsum-board used in conjunction with 40 to 45 lbs. of G-P Topping.

topping

coverage: Approximately 40 to 45 lbs. per 1000 sq. ft. of gypsum-board used in conjunction with 15 to 20 lbs. of G-P Bedding.

triple duty

coverage: Approximately 50 to 60 lbs. per 1000 sq. ft. of gypsum-board.

all purpose

coverage: Approximately 50 to 60 lbs. per 1000 sq. ft. of gypsum-board.

speed set

coverage: Approximately 50 to 60 lbs. per 1000 sq. ft. of gypsum-board.

wall texture

coverage: Will cover about 1,000 sq. ft. for light spray textures or about 200 sq. ft. for heavier applications.

vermiculite

coverage: Approximately 40 lbs. per 400 sq. ft.—sprayed.

polystyrene

coverage: Approximately 32 lbs. per 400 sq. ft.—sprayed.

joint system compound

coverage: Approximately 50 to 60 lbs. per 1000 sq. ft. of gypsum-board.

ready mix

coverage: Approximately 1½-5 gallon pails per 1000 sq. ft. of gypsum board. Also 1 gallon can covers joints on approximately 150 sq. ft.

CASEIN KRAFT



VINYL YELLOW




TEXTURE WHITE



casein base products

G-P Bedding and G-P Topping are two-bag systems of specialized joint compounds. They provide the very finest results since each product has been formulated for a highly specific use. G-P All Purpose is a one-bag system that may be used satisfactorily for a number of different applications.

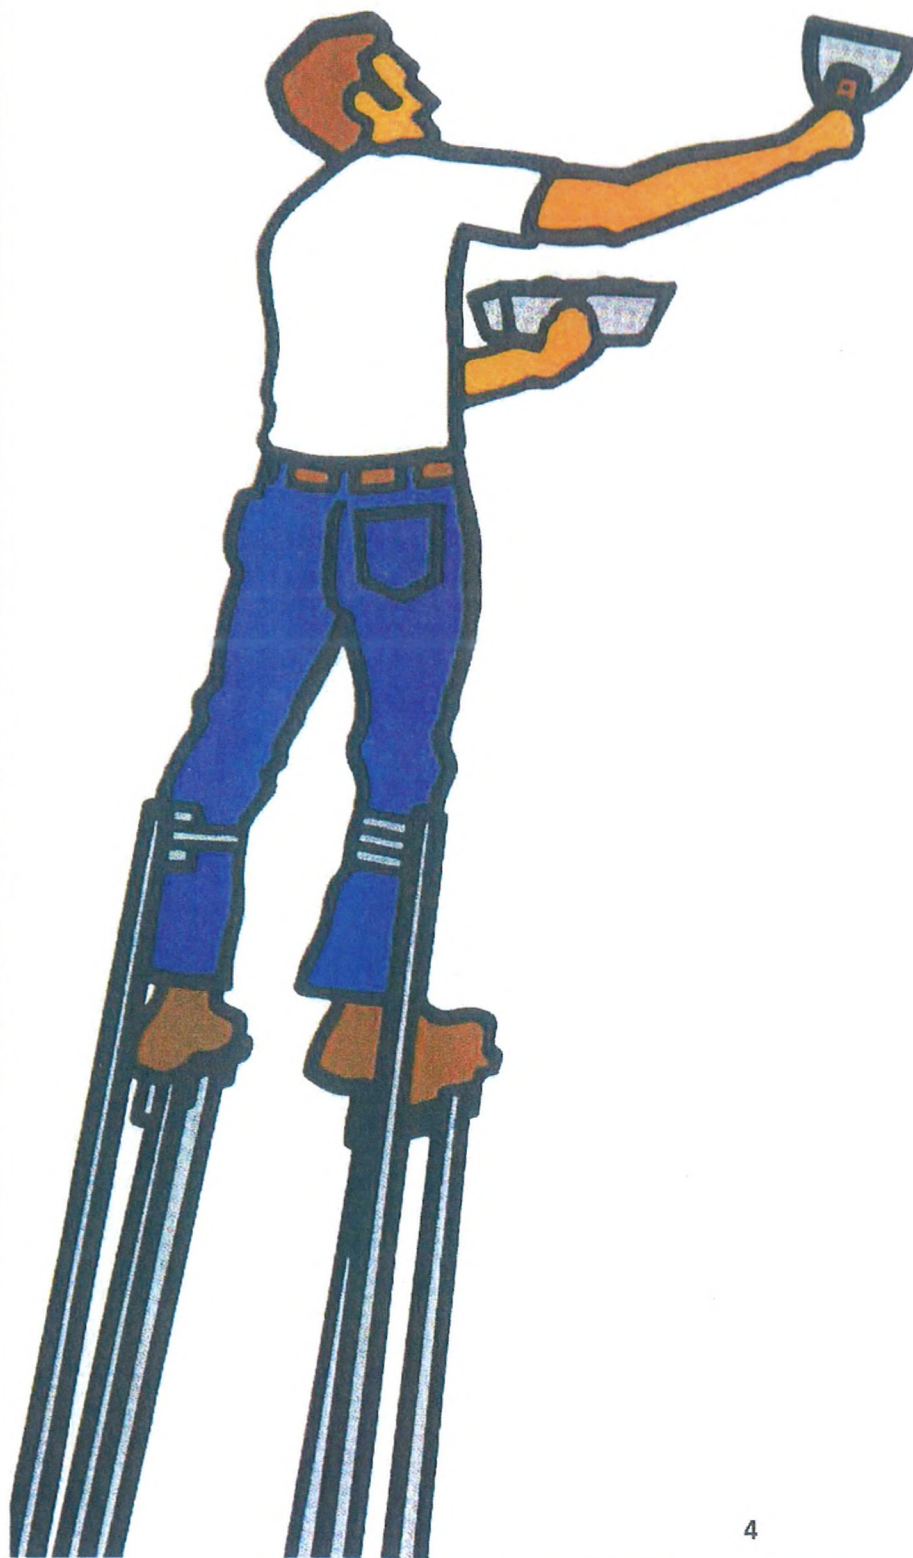

G-P bedding

This compound is designed as a fill coat and for adhesion of the gypsumboard tape to the joints, as well as for the initial application to nail heads and corner beads. Since it is used for this express purpose, G-P formulates its product to maximize the taping and adhesive qualities. G-P Bedding spreads smoothly and may be applied by either hand tools or by machine.

coverage: Approximately 15 to 20 lbs. per 1000 sq. ft. of gypsumboard used in conjunction with 40 to 45 lbs. of G-P Topping.

availability: In 25 lb. bags, only in the midwest and eastern U.S.

G-P topping

This compound is specifically designed for the second and third coats over the G-P Bedding. Since it is used only for topping, we are able to reduce the amount of adhesive and incorporate other materials which lessen shrinkage and make it much easier to work and sand. Topping should never be used to bond tape or for the first coat over a corner bead.

coverage: Approximately 40 to 45 lbs. per 1000 sq. ft. of gypsumboard used in conjunction with 15 to 20 lbs. of G-P Bedding.

availability: In 25 lb. bags, only in the mid-west and eastern U.S.

G-P all purpose

This product is formulated as a one bag system which can be used for topping, bedding and texturing, corner bead and nail spotting. G-P All Purpose is easy to mix, smooth working and exhibits relatively low shrinkage.

coverage: Approximately 50 to 60 lbs. per 1000 sq. ft. of gypsumboard.

availability: In a 25 lb. bag only in the mid-west and eastern U.S. Also available in an 18 lb. bag with a 250' roll of tape in the eastern U.S.



general mixing instructions

All casein products should be mixed with clean, drinkable water at a temperature of 60°-80° F. Use 16 pints of water per 25 lbs. of G-P All Purpose and G-P Bedding. With G-P Topping, the mixture is 16 pints water per 25 lbs.

If water and/or the contents are cold, more than the above prescribed amount of water may be needed in order for the material to reach a workable consistency. Mix the powder to a stiff consistency. After a soaking period of 20 to 30* minutes, the mix will lose its stiffness. After the soaking period, the material should be remixed without adding water until it becomes plastic and creamy. If desired, water may be added, after remixing, to obtain a thinner consistency.

*The required soaking time may double if the temperature of the mix is much lower than 55° F.

casein application

The following instructions indicate the proper steps for using G-P Casein Bedding and G-P Casein Topping in making gypsumboard joints. The same procedure applies if G-P All Purpose is used for the entire application.

Apply G-P Casein Bedding to all flat joints and embed tapes. Leave a uniform thickness of compound under the tapes and shear off excess material. At the same time, cover all nail heads and corner beads with the bedding compound. Allow the application to dry thoroughly before the next step.

When the Casein Bedding compound has thoroughly dried and whitened, cover the taped joint with G-P Casein Topping. Shear off the surplus, again leaving a uniform coverage over the tapes, and feather the edges. Repeat the spotting of all nail heads and finishing of the corner beads for each subsequent application, or as many times as necessary.

The bedding under the tapes and the first coat of topping over the tapes must be *thoroughly dry* before applying the next coat.

Cover the joints again with the topping compound and shear off the excess as before, leaving a smooth, well feathered joint. Allow the joints to dry before proceeding further.

For best results, cover the joint a third time with G-P Casein Topping.

A prime coat should be used over the entire area before the final decoration.


To texture finished gypsumboard surface, G-P Casein All Purpose may be used. For best results, apply a vinyl primer to the entire area before texturing. The texture may be applied with a roller, sponge, brush or other suitable implement, depending on the type of configuration desired. For heavy textures, use about 20 pints of water and for light textures use about 22 pints per 25 lbs. Protect woodwork and trim during application and remove all drops and splatters before they harden.

asbestos free vinyl base products

For those who require the very finest line of Joint Treatment compounds, G-P offers its vinyl based Bedding, Topping, All Purpose, Triple Duty, and Speed Set. These compounds are formulations incorporating chemicals which produce a variety of superior performance features. Their bright sun-yellow bags make them easily identifiable.

advantages:

1. They retain the mixed consistency for extended periods of time.
2. Mixed compound will not spoil if left in tightly closed container for extended periods (30-60 days).
3. Shrinkage and cracking has been reduced to a minimum.
4. Consistency is not affected by cold water and cold compound as much as casein products.

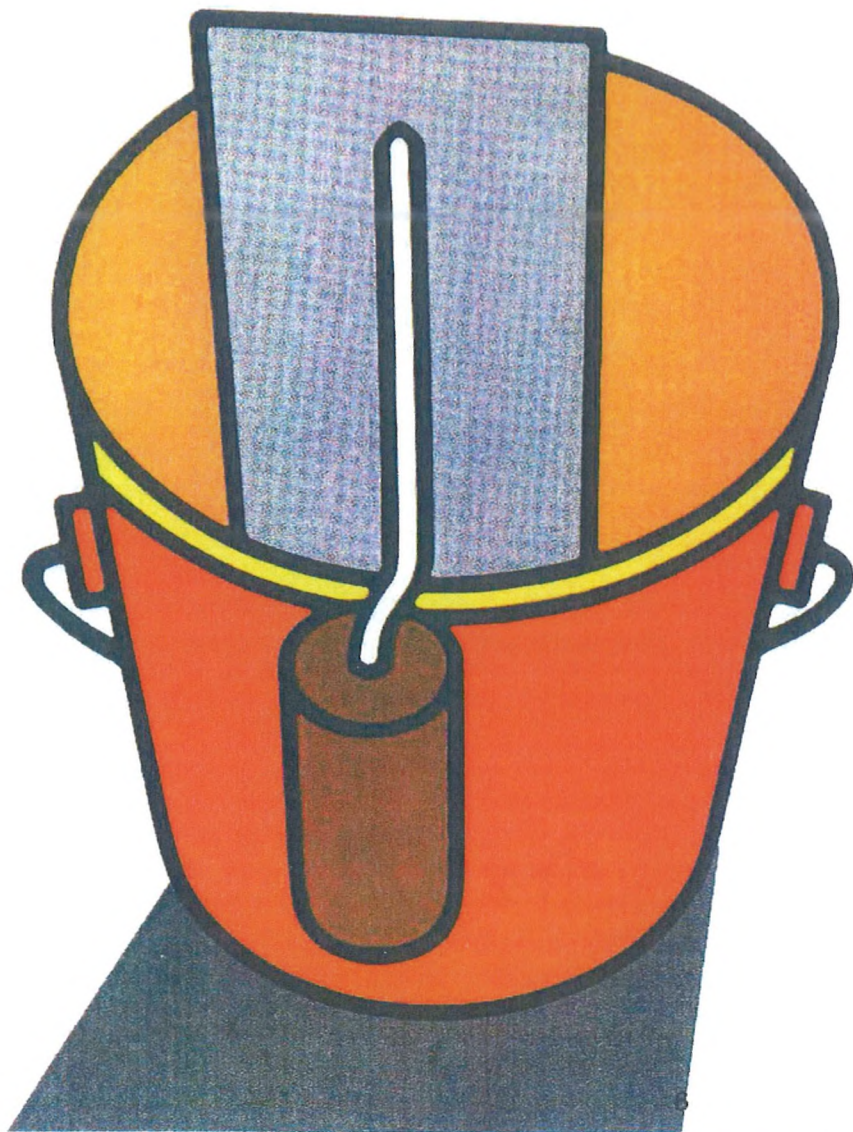

G-P vinyl bedding

This product is formulated primarily for embedding the gypsumboard tape. It may also be used to coat metal trim, fasteners and corner beads. G-P Vinyl Bedding spreads smoothly, has superior bonding qualities and maximum resistance to edge cracking.

coverage: Approximately 15 to 20 lbs. per 1000 sq. ft. of gypsumboard used in conjunction with 40 to 45 lbs. of G-P Topping.

availability: In 25 lb. bags throughout the U.S.

G-P vinyl topping

This product is specially formulated to give superior finishing results. Used for second and third coats over the bedding coat, this product is extremely smooth working, has excellent feathering qualities, low shrinkage and is easy to sand. Topping should never be used to bond tape or for the first coat over corner bead.

coverage: Approximately 40 to 45 lbs. per 1000 sq. ft. of gypsumboard used in conjunction with 15 to 20 lbs. of G-P Bedding.

availability: In 25 lb. bags throughout the U.S.

G-P all purpose

This product is formulated as a one-bag system which can be used for bedding tape, finishing over tapes, nails, corner beads as well as texturing gypsumboard. It has very good topping and bedding characteristics along with good texturing properties. G-P All Purpose is easy to mix, smooth working and exhibits relatively low shrinkage.

coverage: Approximately 50 to 60 lbs. per 1000 sq. ft. of gypsumboard.

availability: In 25 lb. bags and an 18 lb. bag with a 250' roll of tape, throughout the U.S.



general mixing instructions

All vinyl products should be mixed with clean, drinkable water at a temperature of 60°-80° F. Use 17 pints of water per 25 lbs. of G-P All Purpose and G-P Bedding. With G-P Topping, the mixture is 16 pints water per 25 lbs.

If water and/or the bag contents are cold more than above prescribed amount of water may be needed in order for the material to reach a workable consistency. Mix the powder to a stiff consistency. After a soaking period of 10 to 15 minutes, the mix will lose its stiffness. After the soaking period, the material should be remixed without adding water until it becomes plastic-like and creamy. If desired, water may be added, after remixing, to obtain a thinner consistency.

application

The following instructions indicate the proper steps for using G-P Vinyl Bedding and G-P Vinyl Topping in making gypsumboard joints. The same procedure applies if G-P All Purpose is used for the entire application.

Apply G-P Vinyl Bedding to all flat joints and embed tapes. Leave a uniform thickness of compound under the tapes and shear off excess material. At the same time, cover all nail heads and corner beads with the bedding compound. Allow the application to dry thoroughly before the next step.

When the Vinyl Bedding compound has thoroughly dried and whitened, cover the taped joint with G-P Vinyl Topping. Shear off the surplus, again leaving a uniform coverage over the tapes and feather the edges. Repeat the spotting of the nail heads and finishing of the corner beads for each subsequent application, or as many times as necessary.

The Bedding under the tapes and the first coat of Topping over the tapes must be *thoroughly dry* before applying the next coat.

Cover the joints again with the topping compound and shear off the excess as before, leaving a smooth, well feathered joint. Allow joints to dry before proceeding further.

For best results, cover the joints a third time with G-P Vinyl Topping.

A prime coat should be used over the entire area before the final decoration.

To texture finished gypsumboard surface, G-P Vinyl All Purpose or G-P Triple Duty may be used. For best results, apply a vinyl primer to the entire area before texturing. The texture may be applied with a roller, sponge, brush or other suitable implement, depending on the type of configuration desired. For heavy textures, use about 20 pints of water and for light textures use about 22 pints per 25 lbs. Protect woodwork and trim during application and remove all drops and splatters before they harden.

asbestos free vinyl base products

G-P joint system

This G-P gypsumboard Joint Compound is formulated primarily for use in bedding and topping tape and spotting nail heads. It spreads smoothly and features superior bonding qualities and gives maximum resistance to edge cracking. In topping, it feathers well, shrinks little and sands easily.

coverage: Approximately 50 to 60 lbs. per 1000 sq. ft.

availability: In 18 lb. bag with one roll of 250' tape, only in the eastern and northeastern U. S.

caution: Do not mix G-P joint compound with any other material.

mixing instructions

G-P Joint System Compound is a vinyl adhesive base. It should be mixed with clean, drinkable water at a temperature of 55°-80° F. Use 11 pints of water to the 18 lb. contents of this bag.

If the water and/or the bag contents are cold, more than the above prescribed amount of water may be needed in order for the material to reach a workable consistency. Mix the powder to a stiff consistency. After a soaking period of 15 to 20 minutes, the mix will lose its stiffness. After the soaking period, the material should be remixed without adding water until it becomes plastic-like and creamy. If desired, water may be added, after remixing, to obtain a thinner consistency.

application instructions

Apply G-P Joint System Compound to all flat joints and embed tapes. Leave a uniform thickness of compound under the tapes and shear off excess material. At the same time, cover all nail heads and corner beads. Allow the application to dry thoroughly before the next step.

When the joint compound has thoroughly dried and whitened, cover the taped joint with the same material. Shear off the surplus, leaving a uniform coverage over the tapes and feather the edges. Repeat the spotting of the nail heads and finishing of the corner beads for each subsequent



application or as many times as necessary.

The layer of joint compound used to embed the tapes and the coat of joint compound over the tapes must be thoroughly dry before applying the next coat. Cover the joints again and shear off the excess as before, leaving a smooth, well feathered joint. Allow joints to dry before proceeding further.

For best results, cover the joints a third time with G-P Joint Compound.

A prime coat should be used over the entire area before the final decoration.

To texture the finished gypsumboard surface, G-P All Purpose or G-P Triple Duty may be used. For best results, apply a vinyl primer to the entire area before texturing. The texture may be applied with a roller, sponge, brush or other suitable implement, depending on the type of configuration desired. For heavy textures, use about 14½ pints of water and for light textures use about 16 pints per 18 lbs. Protect woodwork and trim during application and remove all drops and splatters before they harden.

G-P triple duty™

G-P Triple Duty gypsumboard compound is a vinyl based multi-purpose product which can be used for all coats in the reinforcing and concealing of joints in gypsumboard construction. It can be used for taping, finishing, spotting, nail heads, filling corner beads and texturing. The binder in Triple Duty gives this product a wet life of 30 to 60 days (provided the container is kept sealed tightly to prevent drying) which allows premixing in large quantities. Triple Duty has low shrinkage and can be easily sanded. After application by hand tools or machine, the compound leaves a surface ready for priming and decoration with no further preparation necessary.

coverage: Approximately 50 to 60 lbs. per 1,000 square feet (12 to 50 lbs. per 1,000 square feet when used as a texturing material).

availability: In 25 lb. or 50 lb. bags everywhere in the continental U.S.

mixing instructions

G-P Triple Duty Joint Compound is a vinyl adhesive. It should be mixed with clean, drinkable water at a temperature of 55°-80° F. in a clean mixing container. Use 16 pints of water to 25 lbs. of Triple Duty Joint Compound.

If the water and/or the bag contents are cold more than the above prescribed amount of water may be needed in order for the material to reach a workable consistency. Mix the powder to a stiff consistency. After a soaking period of 10 to 15 minutes, the mix will lose its stiffness. After the soaking period, the material should be remixed without adding water until it becomes plastic-like and creamy. If desired, more water may be added, after remixing, to obtain a thinner consistency.

If desired, this product can be kept in a wet state for up to 60 days and remain usable provided the container is sealed tightly to prevent air drying. However, if the material is kept in a wet state for prolonged periods it should be protected from freezing.



application instructions

Apply Triple Duty Joint System Compound to all flat joints and embed tapes. Leave a uniform thickness of compound under the tapes and shear off excess material. At the same time, cover all nail heads and corner beads. Allow the application to dry thoroughly before the next step.

When the joint compound has thoroughly dried and whitened, cover the taped joint with the same material. Shear off the surplus, leaving a uniform coverage over the tapes, and feather the edges. Repeat the spotting of the nail heads and finishing of the corner beads for each subsequent application or as many times as necessary.

The layer of Triple Duty used to embed the tapes and the coat of joint compound over the tapes must be thoroughly dry before applying the next coat.

Cover the joints again and shear off the excess as before, leaving a smooth, well feathered joint. Allow the joints to dry before proceeding further.

For best results, cover the joints a third time with G-P Triple Duty Joint Compound.

A prime coat should be used over the entire area before the final decoration.

To texture finished gypsumboard surface, G-P All Purpose may be used. For best results, apply a vinyl primer to the entire area before texturing. The texture may be applied with a roller, sponge, brush or other suitable implement, depending on the type of configuration desired. For heavy textures, use about 20 pints of water and for light textures use about 22 pints per 25 lbs. Protect woodwork and trim during application and remove all drops and splatters before they harden.

surface preparation for skim coating of concrete ceilings

Grind off the rough and jagged imperfections of the poured slab. The concrete must be dry, sound and free of rust, dirt, loose and scaling particles. Be sure any residue used as a parting agent to separate the forms has been cleaned away. A heavy coat of anti-rust primer should be applied by brush, roller or spray, to any exposed metal and must be allowed to dry thoroughly.

application of triple duty joint compound to concrete surfaces

Grout in all "form marks" and obvious imperfections with one application of Triple Duty Joint Compound and allow to dry thoroughly. Apply a second application at right angles to the previous coat and allow to dry thoroughly. Apply skim coat to insure a smooth uniform finish. The skim coat, when dry, may be touched up and lightly sanded to eliminate any unusually rough areas as well as any blade marks before the final decoration is applied. Any normal decoration or texture can be used over the finished surface.

availability: In 25 lb. bags throughout the U.S.

asbestos free ready mix products

G-P ready mix

This Georgia-Pacific joint compound is a prepared wet mix material to bond tape to gypsum-board for joint reinforcement, to fill and finish joints, cover and finish nail heads and corner beads and for texturing. Ready Mix has a controlled formulation and mixing qualities which result in greater coverage, uniform consistency, easier sanding and smoother workability while saving on job mixing time. Ready Mix can be stored for a maximum of 6 months and not lose any of its bonding or working properties.

coverage: Approximately 5 gallons per 700 square feet of gypsumboard.

availability: Asbestos free in 1 gallon and 5 gallon pails adjusted to either machine or hand tool consistency everywhere in the Continental United States.

Four gallon boxes of asbestos free are available in the Southwest or West.

application instructions

Apply G-P Ready Mix System Compound to all flat joints and embed tapes. Leave a uniform thickness of compound under the tape and shear off excess material. At the same time, cover all nail heads and corner beads. Allow the application to dry thoroughly before the next step.

When the joint compound has thoroughly dried and whitened, cover the taped joint with the same material. Shear off the surplus, leaving a uniform coverage over the tapes and feather the edges. Repeat the spotting of the nail heads and finishing of the corner beads for each subsequent application or as many times as necessary.

The joint compound used to embed the tapes and the coat of joint compound over the tapes must be thoroughly dry before applying the next coat. Cover the joints again and shear off the excess as before, leaving a smooth, well feathered joint. Allow the joints to dry before proceeding further.

For best results, cover the joints a third time with G-P Ready Mix.

A prime coat should be used over the entire area before the final decoration.

To texture the finished gypsum-board surface, Denswall Textures or G-P All Purpose may be used. For best results, apply a vinyl primer to the entire area before texturing. The texture may be applied with a roller, sponge, brush or other suitable implement, depending on the type of configuration desired. Follow the instructions on the Denswall Texture bag for consistency. When using G-P All Purpose, heavy textures are obtained by adding about 20 pints of water and for light textures use about 22 pints per 25 lbs. Protect woodwork and trim during application and remove all drops and splatters before they harden.

use G-P casein or vinyl joint compounds for laminating

When two or more layers of gypsumboard are to be applied, the face layer or layers may be adhesively attached with fewer fasteners than normally required. For walls, the face layer may be attached with permanent perimeter fasteners only in conjunction with the adhesive. For ceilings, permanent fasteners must be applied no further apart than 24" o.c.; that is, there shall be one fastener at each edge and at least one fastener in the field of the board. Where fire ratings are involved, see fire test report for fastener positioning.



Bedding Compound, All Purpose Joint Compound, Triple Duty, or Ready Mix Joint Compound may be used as a laminating adhesive. Topping compounds shall not be used for this purpose. The adhesive may be applied by either of two methods:

1. For solid lamination, apply approximately $\frac{3}{16}$ " to $\frac{1}{4}$ " high beads 2" apart over the entire surface to be laminated.
2. For semi-solid lamination, apply 6" wide strips or bands of adhesive consisting of beads approximately $\frac{3}{16}$ " high and $1\frac{1}{2}$ " apart with the strips or bands located 16" o.c.

note: Temporary fasteners may be needed to hold the gypsumboard in place and removed after the adhesive has set. However, these do not replace whatever permanent fasteners are required.

asbestos free speed set™

G-P speed set

G-P Speed Set is a quick setting type gypsum base joint compound, containing a vinyl adhesive, to be used for applying tape, filling metal corner beads, concealing nail heads and finishing joints. This product is available with either a 60 minute or 90 minute working time. Setting time is approximately 30 minutes more than the working time. When set, this material will not shrink.

coverage: Approximately 50 to 60 lbs. per 1000 sq. ft. of gypsum-board.

availability: In 25 lb. bags, everywhere in the continental U.S.

mixing instructions

G-P Joint Speed Set System Compound should be mixed with clean, drinkable water at a temperature of 55°-80° F. In a clean mixing container, use 15 pints of water to the 25 lb. contents of this bag.

If the water and/or the bag contents are cold more than the above prescribed amount of water may be needed in order for the material to reach a workable consistency. Mix to the consistency the material will be used. Speed Set Compound should not be allowed to soak for more than a few minutes. This would reduce the working time. If desired, more water may be added at this time to obtain a thinner consistency.

application instructions

Speed Set Compound is a product which hardens prior to drying and thereby substantially eliminates further shrinkage. The setting action also provides additional bonding and is harder and stronger than conventional drying type joint compounds. It is recommended for use with round edge board for pre-filling and taping. It is also recommended for filling corner beads and



nailheads. It may also be used for taping and finishing regular tapered edge wallboard. Because of Speed Set's fast hardening, it can be used to complete more than one joint finishing operation in a day.

Apply G-P Speed Set Compound to all flat joints and embed tapes. Leave a uniform thickness of compound under the tapes and shear off excess material. At the same time, cover all nail heads and corner beads. Allow the application to harden thoroughly before the next step. No additional drying time is needed to control shrinkage.

When the Speed Set has hardened, cover the taped joint with the same material. Shear off the surplus, leaving a uniform coverage over the tapes and feather the edges. Repeat the spotting of the nail heads and finishing of the corner beads for each subsequent application or as many times as necessary.

Cover the joints again and shear off the excess as before, leaving a smooth, well feathered joint. Allow the joints to harden before proceeding further.

For best results, cover the joints a third time with G-P Speed Set.

A prime coat should be used over the entire area before the final decoration.

To texture the finished gypsum-board surface, Denswall Textures or G-P Triple Duty may be used. For best results apply a vinyl primer to the entire area before texturing. The texture may be applied with a roller, sponge, brush or other suitable implement, depending on the type of configuration desired. Follow the instructions on the Denswall Texture bag for consistency. When using G-P Triple Duty, heavy textures are obtained by adding about 20 pints of water and for light textures use about 22 pints per 25 lbs. Protect woodwork and trim during application and remove all drops and splatters before they harden.

recommendations

1. Do not mix more material than can be applied in 1 hour.
2. Do not mix with other joint compounds in either wet or dry form.
3. Clean tools and mixing equipment after each batch to prevent acceleration of setting time.
4. If stiffening occurs (except within the first 10 minutes), setting action is starting and material should be discarded.
5. Do not retemper mix—never add part of a previous batch to a fresh batch.
6. Minimum air, water mix and surface temperature of 55° must be maintained in working areas until joints are completely dry.

specialty products

asbestos free denswall[™] texturing products

wall and ceiling textures

Georgia-Pacific offers three basic textures. All are dry powder products and contain a tested balance of aggregate to produce the effect you want. The coverage, however, will vary with different types of surfaces, spray equipment, workmanship and customer requirements.

G-P wall texture


Packaged in a 25 lb. bag, this product has no aggregate added to its contents. G-P's wall texture may be applied with spray equipment, large wall brush, roller, or trowel. Wall Texture is white and matches all G-P ceiling textures. In addition, it offers good hiding properties, maximum coverage and great workability.

Aggregate can be added in the field as desired.




G-P vermiculite

Ceiling Texture is packaged in a 40 lb. bag. This product contains vermiculite aggregate and is available in fine, medium or coarse textures. Vermiculite aggregate offers an acoustical finish appearance for ceilings but does not provide acoustical sound correction. The use of this product results in a white, rugged texture with semi-rounded "hills and valleys" that help conceal surface defects while producing a beautiful, decorative textured ceiling.

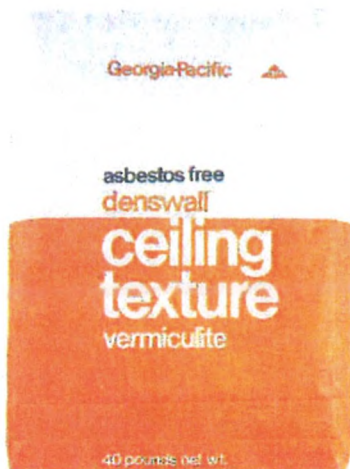

G-P polystyrene

Ceiling Texture is packaged in a 32 lb. bag. Polystyrene texture is designed for fast, economical spray application to ceilings. The resultant texture is white, with strong adhesion. Offering maximum coverage and excellent hiding qualities, polystyrene aggregate is a plastic bead which is shredded into coarse angular particles that produce an extremely rough texture. These aggregate particles will retain their size and shape during long periods of mechanical mixing. This is an ideal product for volume spray application.

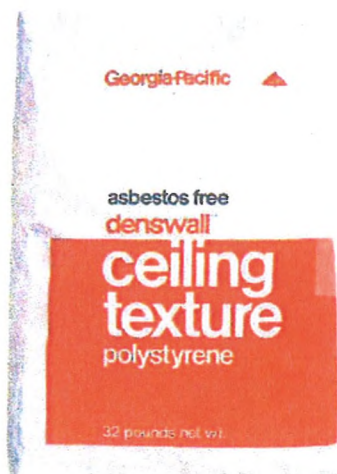

application to gypsumboard

All surfaces including joint compound applications, must be clean and dry. If surface has been previously painted, roughen any glossy paint, and clean well. Apply a white vinyl based primer or equivalent to new work prior to texturing. Protect woodwork and trim during application and remove all overspray from walls before the texture dries. For best results use the lowest air pressure that will produce a satisfactory spray pattern. If one coat will not cover due to uneven suction, or if a heavy application is desired, it may be necessary to apply a second coat. Allow the first coat to dry before applying the second coat.


application to concrete

All surfaces must be clean, dry and sound with no chalkiness or efflorescence. Prime all exposed metal with a rust inhibitive primer. New concrete should be aged at least 60 days. Irregularities and form marks must be smoothed. High spots can be ground down. Depressions and holes can be filled with G-P Joint Compound. For deep fills, G-P Speed Set Compound is recommended. Seal the entire surface with a white vinyl sealer or pigmented shellac. Spray the G-P Texture in two applications at right angles to each other, allowing the first coat to dry before applying the second.

DENS WALL™ TEXTURE	FINISH	BAG SIZE	WATER MIX*	REMIX	AVERAGE COVERAGE**	
					GYPSUMBOARD	CONCRETE
wall texture	Variable	25 lb.	Add 2 gallons	Do not exceed 1½ gallons additional	Spray 1,000 sq. ft. Trowel 200 sq. ft.	
vermiculite ceiling texture	Fine Medium Coarse	40 lb.	Add 4½ gallons	Do not exceed 1½ gallons additional	Spray 400 sq. ft.	300 sq. ft.
polystyrene ceiling texture	Coarse	32 lb.	Add 6 gallons	Do not exceed 2 gallons additional	Spray 250 sq. ft.	200 sq. ft.

*Mix until dry powder is wetted and well dispersed. Then allow to soak for 20 minutes. Remix and adjust to desired consistency.

**Depends upon texture appearance desired. Coverage can vary considerably.

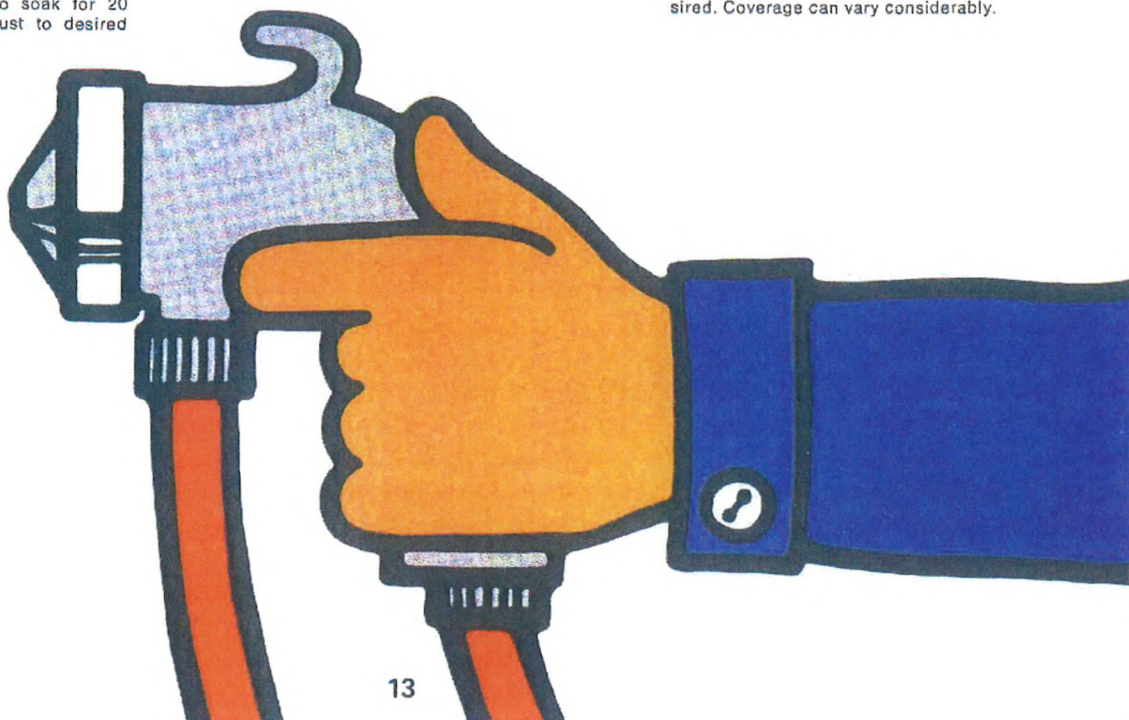

asbestos free joint/patching compound



G-P asbestos free joint system compound

Georgia-Pacific has packaged a joint compound specially designed for the do-it-yourselfer. It contains the same high quality formulation for superior performance demanded by professionals. It can be used almost immediately after mixing, and still retain the mixed consistency for extended periods of time.

For use in bedding and topping tape and spotting nail heads, joint system compound spreads smoothly, bonds tightly and resists edge cracking. It also feathers well, shrinks very little and sands easily.

availability: In either 5 lb. bags, 4 lb. bags with a sixty foot roll of tape, or 1 gal. can (Ready-Mix, no mixing required) everywhere in the continental U.S.

mixing: Joint system compound should be mixed in a clean metal container (not aluminum) using clean water at 55 degrees to 80 degrees Fahrenheit. To mix entire contents (5 lbs.), add dry compound to 3 pints of water and mix thoroughly (4 lb. bag—2½ pints of water). Mixture will be stiff but do not add more water. Cover the container with a wet cloth and let it stand for 30 minutes, then add more water if necessary to make the consistency slightly thinner than putty. Do not mix more than can be used in 36 hours.

application: With a semi-flexible broad knife, generously "butter" the joint with joint system compound, working it well into the joint. Shear off the excess material.

Press strip of GP tape in the center of the joint. Smooth down firmly into the compound, remove excess cement and level into an even surface.

When the first coat is dry, cover with joint compound. Shear off surface, leaving a smooth joint. When dry, another coat over the entire surface ensures best results.

Allow 24 hours drying time and then sand carefully with fine sandpaper for a smooth finish. For best results a vinyl primer should be applied before decoration.

G-P asbestos free patching plaster

mixing: Add G-P patching plaster to cool or cold water and stir to a putty consistency, free of lumps. Generally the larger the patch, the thicker the putty should be.

surface preparation: The areas to be patched must be clean and dry, and free of loose particles. Enlarge small cracks by cutting out old plaster to form an inverted "V". Dampen the entire area to be patched with water to promote adhesion between the old plaster and the new.

application: Small cracks and imperfections are filled by using patching plaster with a thinner consistency and forcing it into the cracks with a broad knife. Use the broad knife to "shear" off any excess plaster.

Large holes and imperfections require two coats. Apply the first coat so that it nearly fills the area being patched. Allow it to harden. While the first coat is still wet, apply a second coat. Bring this coat out flush to the finish surface and shear it off smooth with the tool. When the second coat is hard and dry, sand it to a smooth surface if necessary. Seal the surface with a good latex primer before painting or papering.

asbestos free joint/patching compound



G-P asbestos free joint system compound

Georgia-Pacific has packaged a joint compound specially designed for the do-it-yourselfer. It contains the same high quality formulation for superior performance demanded by professionals. It can be used almost immediately after mixing, and still retain the mixed consistency for extended periods of time.

For use in bedding and topping tape and spotting nail heads, joint system compound spreads smoothly, bonds tightly and resists edge cracking. It also feathers well, shrinks very little and sands easily.

availability: In either 5 lb. bags, 4 lb. bags with a sixty foot roll of tape, or 1 gal. can (Ready-Mix, no mixing required) everywhere in the continental U.S.

mixing: Joint system compound should be mixed in a clean metal container (not aluminum) using clean water at 55 degrees to 80 degrees Fahrenheit. To mix entire contents (5 lbs.), add dry compound to 3 pints of water and mix thoroughly (4 lb. bag—2½ pints of water). Mixture will be stiff but do not add more water. Cover the container with a wet cloth and let it stand for 30 minutes, then add more water if necessary to make the consistency slightly thinner than putty. Do not mix more than can be used in 36 hours.

application: With a semi-flexible broad knife, generously "butter" the joint with joint system compound, working it well into the joint. Shear off the excess material.

Press strip of GP tape in the center of the joint. Smooth down firmly into the compound, remove excess cement and level into an even surface.

When the first coat is dry, cover with joint compound. Shear off surface, leaving a smooth joint. When dry, another coat over the entire surface ensures best results.

Allow 24 hours drying time and then sand carefully with fine sandpaper for a smooth finish. For best results a vinyl primer should be applied before decoration.

G-P asbestos free patching plaster

mixing: Add G-P patching plaster to cool or cold water and stir to a putty consistency, free of lumps. Generally the larger the patch, the thicker the putty should be.

surface preparation: The areas to be patched must be clean and dry, and free of loose particles. Enlarge small cracks by cutting out old plaster to form an inverted "V". Dampen the entire area to be patched with water to promote adhesion between the old plaster and the new.

application: Small cracks and imperfections are filled by using patching plaster with a thinner consistency and forcing it into the cracks with a broad knife. Use the broad knife to "shear" off any excess plaster.


Large holes and imperfections require two coats. Apply the first coat so that it nearly fills the area being patched. Allow it to harden. While the first coat is still wet, apply a second coat. Bring this coat out flush to the finish surface and shear it off smooth with the tool. When the second coat is hard and dry, sand it to a smooth surface if necessary. Seal the surface with a good latex primer before painting or papering.

accessories

wallboard tape

Full 2" width, "Miracle Crease" spark perforated tape with skived edges and sanded surface on both sides. Bonding qualities are excellent. Porosity permits rapid drying of Joint Compound. Easy to use, economical, with minimal expansion. Stabilized against varying humidity conditions, it reduces uneven expansion and edge wrinkling.

packaging: Available in 60', 250', and 500' rolls as follows: 60' rolls packed 60 per box, approximately 24 lbs.; 250' rolls packed 20 per box, approximately 29 lbs.; 500' rolls packed 10 per box, approximately 28 lbs.

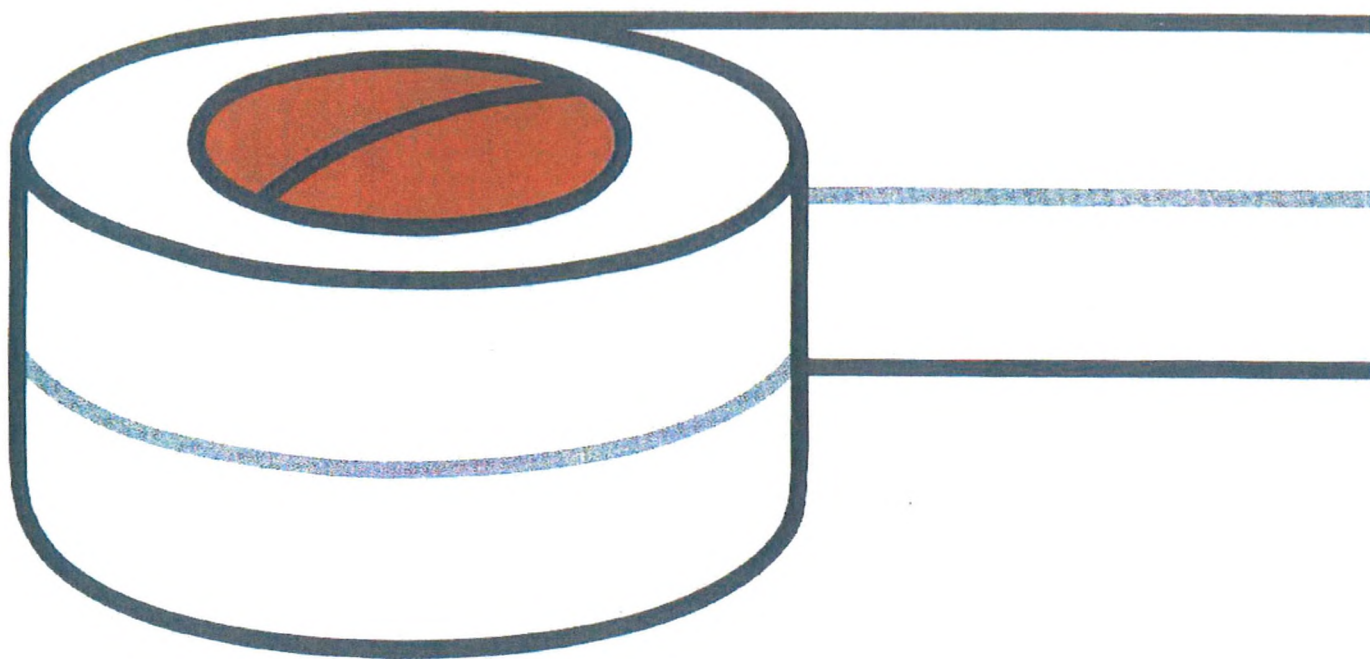

technical information

joint system drying time

Temperature and humidity have a direct effect on the drying time on joint treatment products. While there is very little that can be done to alter temperature and humidity under job conditions, care should be taken to note the average differences in drying times under different atmospheric conditions, so that problems may be minimized. Joint treat-

ment products must be thoroughly dry before successive coats are applied, and/or final decoration is applied. In all cases, a well ventilated area assists in the proper drying of these materials.

The chart shown below indicates the average drying periods for joint treatment products under different temperature and humidity conditions.

Relative Humidity	0	20%	40%	50%	60%	70%	80%	90%	98%
40 Temperature F.	28 H	34 H	44 H	2 D	2½ D	3½ D	4½ D	9 D	37 D
60	13 H	16 H	20 H	24 H	29 H	38 H	2½ D	4½ D	18 D
80	6 H	8 H	10 H	12 H	13½ H	19½ H	27 H	49 H	9 D
100	3 H	4 H	5 H	6 H	8 H	10 H	14 H	26 H	5 D

H = hours D = days


painting of drywall

It is extremely important that the difference in absorption between the wallboard surface and the compound over joints and nails be equalized to provide uniformity of color, suction and texture

over the entire wall or ceiling. After the joint treatment has been completed and *thoroughly dried*, the surfaces should be sealed or primed with a good quality primer/sealer.

the primary cause of nail popping

Illustration #1 through #3 demonstrates what happens when green lumber (not thoroughly dried) is used for framing (Fig. 1). The wood pulls away from the wall, as the wood dries and shrinks (Fig. 2), then the nail pushes out through the gypsum-board (Fig. 3).

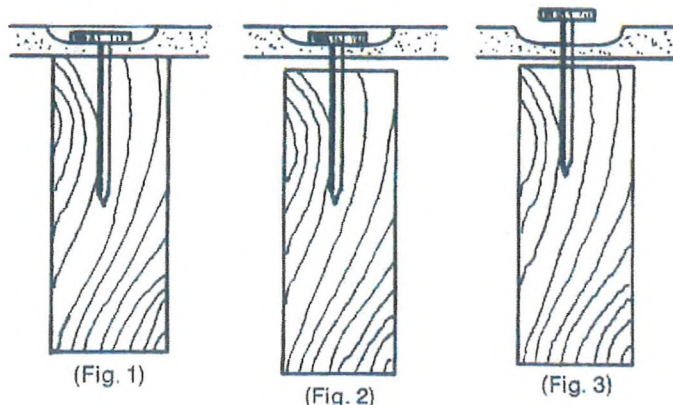

problems which occur in joint treatment

JOINT TREATMENT CONDITIONS	CAUSE	REMEDY OR PREVENTION
SHORT WORKING COMPOUND	Extremely warm dry weather during application.	Make allowance for fast drying. Minimize ventilation during application.
PUTREFACTION	Dirty or contaminated buckets. Aggravated by hot humid weather conditions.	Use only clean mixing pails and tools. Avoid excessive standing of mixed materials.
EXCESSIVE SHRINKAGE	Excessive amount of mixing water. Especially prevalent when cold water and cold compound are used.	Use 55°F minimum water and follow manufacturer's instructions.
EDGE CRACKING	Thick coats of compound under the tape. Fast drying conditions.	Avoid application over hot surfaces near pipes, radiators, salamanders. Control ventilation during the drying cycle in hot weather so as not to obtain radical changes in temperature, avoid drafts.
NAILS PHOTOGRAPHING	Airborne soot or dust particles collecting over nail-head. Shank of nail will conduct cold; airborne particles collect over this cooler area.	Dependent upon cleanliness of air. Deposits can be washed off. Insulate to provide uniform temperature.
TAPE PHOTOGRAPHY	Compound over tape is glazed due to tape being high. Deeper fills on either side of tape will not be glazed and will thus have a rougher texture. Low or high joints.	Press tapes in tightly. A sheer coat will equalize suction and texture. Refinish off level joint.
STARVED JOINTS	Delayed shrinkage (not allowing preceding coats to dry), insufficient compound applied over tape to fill recess. Over sanding.	Allow sufficient drying time between coats of compound. Keep sanding to a minimum. Apply additional coat.
BLISTERS IN TAPE	Insufficient compound under the tape. Tape not initially pressed into good contact with compound.	Open up blister by slitting tape. Fill cut with compound and press tape in place.
POOR BOND	Cold compound, water, or surfaces. Freezing of wet compound in pail or on wall after application. Insufficient soaking time.	Maintain minimum 55°F temperature. Protect from freezing. Allow necessary soaking time.
CRACKS IN INSIDE CORNER	Too much compound over the tape at apex of angle.	Wipe down corners correctly, leaving only small amount or no compound in the apex.
"BURN THRU" OR JOINTS SHOWING THRU PAINT "BLEEDING THRU" "SHOWING THRU"	1. Painting before the joint system is completely dry. 2. Crowning of the joints will cause a difference in light reflection. 3. Difference in texture and suction between compound and board. 4. Paint having poor hiding properties—thinning paint too much. (Same is true for textures, as well as paints.)	1. Allow sufficient drying time. 2. Avoid high crowns. 3. Apply primer. 4. Avoid excessive thinning of paints, or textures.
RIDGING	Movement of the framing or uneven shrinkage. Aggravated by cold humid conditions.	Let condition develop fully (6 months or 1 heating season). Sand ridge to tape (Do not cut tape) and fill concave areas each side. When dry, apply finish coat and redecorate.
NAIL POPPING	Shrinkage of framing, loose board, mis-aligned framing, or board core crushed in nailing.	Drive a second nail alongside the first, preferably catching the head of the popped nail with the head of the second nail.

DISTRIBUTION CENTERS

United States

ALABAMA
Birmingham
4000 Buhl St.
(205) 341-0415

Huntsville
170 Highway 20 East
Madison, Alabama
(205) 772-8481

Mobile
5431 Georgia Pk. Dr. Ave.
(205) 473-0504

Montgomery
4542 Ardmore Ave.
(205) 288-7380

ALASKA
Fairbanks
270 Hopper St.
(907) 452-2133

ARIZONA
Phoenix
4801 White Center St.
(602) 933-1413

Tucson
450 E. Irvington Rd.
(602) 888-8721

KANSAS
St. Louis
6001 Jenny Lind Road
(314) 548-4251

LINE ROCK
2101 Ogden St.
(314) 574-0212

TERRASANO
3000 Terrasano Road
(602) 772-8110

CALIFORNIA
Anaheim
1750 Lewis St.
(714) 554-4541

Fresno
3208 East Morris Ave.
(209) 351-0411

Los Angeles
14750 Nelson Ave.
City of Industry
(213) 868-3551

Oakland
2550 Palmdale Ave.
San Leandro
(415) 352-5136

Riverside
1459 China Ave.
(714) 884-5243

Sacramento
2031 Orange Grove Ave.
North Highlands
(916) 481-4444

Salinas
1031 Industrial Ave.
(408) 738-0313

San Diego
901 West 24th St.
National City
(714) 395-0955

San Fernando
1591 Downing Ave.
Canales Park
(818) 367-0211

San Jose
600 East Glen Rd.
(408) 297-7550

San Jose
3417 Grandview Road
(408) 544-3640

COLORADO
Denver
3800 Nevada St.
(303) 371-7500

CONNECTICUT
Hartford
178 York Main St.
Manchester, Conn.
(203) 545-9700

Wallingford
809 North Oxford St.
(203) 268-8725

DELAWARE
Wilmington
Ridgeway Ind. Pk.
Tarmidat Ave. & Christiana
(302) 658-8233

FLORIDA
St. Myers
3501 West Drive
(813) 532-3957

Jacksonville
1503 Hahn St.
(904) 355-4711

Miami
3201 N.W. 17th St.
(305) 688-0857

Orlando
3582 Alt. American Blvd.
(407) 293-3701

Pensacola
4801 McCoy Dr.
(904) 434-5501

Tallahassee
889 Mabry St.
(904) 375-2145

Tampa
1701 East Columbus St.
(813) 851-1351

West Palm Beach
305 West 1st St.
West Palm Beach
(407) 344-8171

GEORGIA
Albany
1013 North St.
(404) 452-5136

Atlanta
2351 Peachtree Dunwoody Dr.
North Atlanta, Ga.
(404) 448-7400

Augusta
1150 Gordon Highway
(404) 722-5575

Columbus
1411 Grandview Dr.
(604) 327-6221

Macon
7531 N.E. Ind. Blvd.
(706) 731-0700

Savannah
Fidelity Bldg.
West 10th Drive
(912) 333-0811

INDIANA
Indianapolis
1875 Columbus Ave.
(202) 345-0441

ILLINOIS
Bloomington
4221 White Oak Rd.
Normal, Illinois
(800) 492-9422

Chicago
10450 Weyland Ave.
Franklin Park
(312) 478-2590

17645 Lathrop Ave.
Naperville
(312) 923-3038

Quincy
305 East Fourth Ave.
Moline, Ill.
(508) 787-8121

INDIANA
Elkhart
209 Collins Rd.
(219) 294-5481

Evansville
425 North Congress Ave.
(812) 427-8123

Fort Wayne
8620 Bluffton Road
(219) 747-1651

Indianapolis
1417 South Franklin Road
(317) 357-3754

IOWA
Des Moines
5501 Northwest 17th St.
(515) 265-3251

KANSAS
Wichita
401 West 4th St. South
(316) 355-4801

KENTUCKY
Louisville
2715 Grasslands Drive
(502) 481-5410

LOUISIANA
Baton Rouge
1711 Lumbert St.
(504) 345-7401

Lafayette
314 S. P. Scroggins
Thibodaux
(504) 252-2551

New Orleans
7300 Almonester Ave.
(504) 241-2300

Shreveport
2501 Valley View Dr.
(504) 895-4771

MAINE
Bangor
Bentley St. & Hodgdon
(207) 347-0142

Portland
508 Warren Ave.
(207) 757-8654

MARYLAND
Baltimore
8411 Grand Ave.
(301) 255-4700

Salisbury
Armstrong Parkway &
Market Rd.
(301) 348-2181

MASSACHUSETTS
Boston
310 Southwicks St.
Roxbury
(617) 344-9300

Springfield
121 Memorial Drive
Memorial Ind. Park
(413) 731-7330

MICHIGAN
Detroit
11801 Seven Drive
Livonia
(313) 522-4700

Grand Rapids
325 Buchanan Ave. S.W.
(616) 241-1808

Grainley
215 Hudson St.
(313) 348-5443

Saginaw
1750 E. Wacker Rd.
(313) 752-9134

MINNESOTA
Minneapolis
4175 Century Line Rd. 18
Maple Grove
(612) 425-5811

MISSISSIPPI
Jackson
955 Gulf Line Rd.
(601) 859-5420

MISSOURI
Cape Girardeau
North Road
(314) 334-9552

KANSAS CITY
1445 Tamey St.
North Kansas City
(816) 842-0366

St. Louis
5025 Rockness Dr.
Hazelwood
(314) 731-0131

Springfield
2225 East Cherry St.
(314) 809-1841

MONTANA
Billings
500 Daniel St.
(406) 245-3126

Great Falls
901 River Drive S.
(406) 453-3471

NEBRASKA
Lincoln
545 "L" St.
(402) 432-7525

NEVADA
Reno
309 N. McCarran Blvd.
Sparks
(702) 350-7454

NEW HAMPSHIRE
Manchester
300 Gay St.
(603) 527-3881

NEW JERSEY
Clifton
400 Alwood Rd.
(201) 773-1900

Tranton
500 S.S. Road #110
Fairfield
(609) 545-1168

NEW MEXICO
Albuquerque
1822 Delamar N.W.
(505) 342-2791

Albany
Brown and Ind. Rds.
(518) 439-8030

Binghamton
Bingham Ind. Pk.
Catskill Road Extension
Binghamton
(607) 725-1100

Buffalo
2555 Walden Ave.
(716) 885-2330

Rochester
1480 East Henrietta Rd.
(716) 442-1801

Syracuse
Lockport Ave. and Park St.
Syracuse
(315) 524-7400

Syracuse
Miller Park Dr.
(315) 437-1201

NORTH CAROLINA
Asheville
Route #1, Asheville Road
(704) 298-5074

Charlotte
2308 Parkside Dr.
(704) 394-3171

Greensboro
3803 Flagstone Dr.
(919) 275-8431

Raleigh
3501 Tanglewood Dr.
(919) 875-4439

Wilmington
319 Main St.
(919) 739-5000

NORTH DAKOTA
Fargo
204 Ave. 18th St.
Moorhead, Minn.
(704) 328-1320

OHIO
Akron
550 Mainline Falls Road
(216) 734-1742

Cincinnati
4719 Dixie Dr.
(513) 774-4123

Cleveland
15100 Highland Rd.
(216) 234-1375

Columbus
2196 Refugee Rd.
(614) 443-8356

Dayton
3150 Webster St.
(513) 273-5986

Toledo
2815 Hill Ave.
(419) 338-0701

OKLAHOMA
Oklahoma City
5519 N.W. Fourth St.
(405) 344-6717

Tulsa
3717 North Mingo
(918) 571-2211

OREGON
Eugene
5445 W. 1st Ave.
(503) 343-4386

Portland
13315 S.W. Adams Avenue
Beaverton
(503) 343-5811

PENNSYLVANIA
Lancaster
3533 Hemfield Industrial
Park
(717) 385-4544

Philadelphia
801 Park Ave.
King of Prussia
(215) 283-8600

Pittsburgh
Hunter Rd. and Rt. 113
New Stanton
(412) 242-3100

Scranton
158 Princeton Ave.
Catskill-Pittston
(717) 865-2801

RHODE ISLAND
Providence
170 Jethroton Blvd.
Warwick
(401) 463-7700

SOUTH CAROLINA
Charleston
Dennis Ind. Park
(803) 324-5191

Columbia
355 S. Columbia St.
(803) 721-7710

Greenville
Hickory Road
(803) 268-3000

SOUTH DAKOTA
Sioux Falls
4501 N. 4th
(605) 338-5300

Tacoma
2002 Ross Way
(206) 380-4373

TENNESSEE
Bristol
100 Hwy. Indus. Blvd.
(615) 683-4121

Chattanooga
201 East 26th St.
(615) 268-8019

Knoxville
1281 Mitchell St. N.E.
(615) 546-4441

Memphis
424 Miller Dr.
(901) 365-2100

Nashville
371 38th Ave. N.
(615) 329-0800

TEXAS
Amarillo
80 Lakeside Drive
(806) 373-6706

Austin
2016 East Sixth St.
(512) 470-1400

Beaumont
6950 Oakwood Drive
(713) 892-8121

Corpus Christi
531 Comstock Dr.
(512) 894-0211

Dallas
1900 John Connally Dr.
Creston
(214) 342-4251

El Paso
9000 Mayfield St.
(915) 778-6552

Ford Worth
4747 Mark IV Parkway
(817) 625-0331

Houston
550 Gethsemane Dr.
(713) 675-7721

Lubbock
702 E. 34th St.
(806) 747-3626

San Antonio
508 North W. R. White Rd.
(512) 353-4110

Texas
508 North W. R. White Rd.
(512) 353-4110

UTAH
Salt Lake City
1975 S. 300 W.
(801) 486-4231

VERMONT
Burlington
Pine Haven Shook Road
Shelburne, Vt.
(802) 383-2511

VIRGINIA
Lynchburg
Gardner Mill Rd. at
Timberlake
(804) 250-9041

Norfolk
200 Pryor St.
Virginia Beach
(804) 486-0821

Richmond
Corner Dabney &
Buckingham Sts.
(804) 355-9187

WASHINGTON
Bellingham
829 Cornwell Avenue
(206) 733-9000

Seattle
12812 N.E. 17th St.
Woodinville
(206) 486-0741

Spokane
6815 E. Myrtle
(509) 328-3000

Tacoma
2002 Ross Way
(206) 380-4373

WASHINGTON, D.C.
Washington, D.C.
8421 Ardwick-Alderson Road
Landover, Maryland
(202) 322-2270

West Washington, D.C.
11801 Ball's Ford Rd.
Manassas, Virginia
(703) 361-3147

WEST VIRGINIA
Charleston
Rock Branch Ind. Pk.
Peters, W. Va.
(204) 253-8130

WISCONSIN
Madison
703 Mayfield Ave.
(608) 241-3874

Minneapolis
5050 North 11th St.
(612) 454-7800

Waukegan
801 S. 62nd Ave.
(715) 342-5651

Canadian Branches
Georgia-Pacific Building
Montreal, LTD.
Calgary
8209-30th St. S.E.
Calgary, Alberta
(403) 278-4438

Moncton
175 MacNaughton Dr.
Moncton, New Brunswick
(506) 854-6640

Montreal
4050 Notre Dame St., East
Montreal, Quebec
(514) 253-0300

Quebec City
48 Abraham Martin St.
L'Ange-Bassin, Port of Quebec
Quebec City, Quebec
(418) 692-5671

Toronto
173 Carleton Drive
Richmond, Ontario
(416) 575-8386

GYPSUM/SALES OFFICES

Mid Atlantic
8121 Archwick Apartment Rd.
Landover, Maryland 20785
(301) 773-3325

Midwest
3515 North Cinnamon
Franklin Park, Illinois 60131
(312) 478-4400

Northeast
P.O. Box 128
Burlington, New York
(514) 737-8600

Grand Rapids District
P.O. Box 1549
Grand Rapids, Michigan 49501
(616) 450-2415

Southeast
P.O. Box 906
Norcross, Georgia 30071
(404) 449-7900

Southwest
1800 John Connally Dr.
Carrollton, Texas 75006
(214) 342-4251

Western
P.O. Box 24373
Oakland, California 94625
(415) 483-4510

Georgia-Pacific
300 S.W. Fifth Avenue
Portland, Oregon 97204

7558 • 10/77 10th M
Lithographed in U.S.A.