



Balkamp


WEATHERLY 606-236

CATALOG No. BA682AP

September 1968

Supplement To BA68AP

UNIVERSAL CHOKE CONVERSION KITS

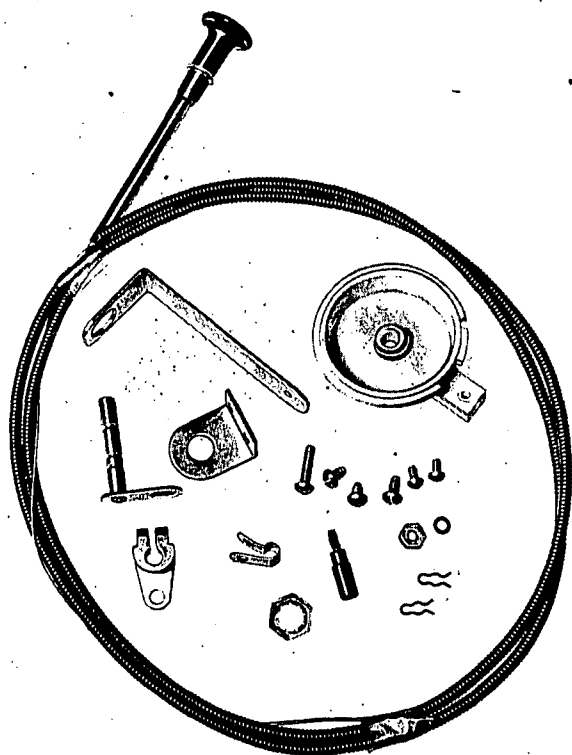

• HELPS BREAK VAPOR LOCKS

• SAVE ON GAS

• EASILY INSTALLED

SEMIAUTOMATIC

- 3-5461** Fits: Buick, Cadillac, Chevrolet, Oldsmobile, and Pontiac with Rochester and Stromberg Carburetors prior to 1954.
- 3-5462** Fits: Ford, Mercury, Lincoln, Comet, Fairlane, Meteor, Falcon, Plymouth, Valiant V-8, DeSoto, Dodge, Dart V-8, Chrysler, Imperial, Rambler, and Ambassador; with Ford, Carter, Stromberg, and most Holly Carburetors after 1954.
- 3-5463** Fits: Plymouth 6, Dodge 6, DeSoto 6 and straight 8, Chrysler 6 and straight 8, Valiant 6, Dart 6, and other cars with non-climatic (well-type) automatic chokes.
- 3-5467** Fits: Volkswagon, Volkswagon 1200, and Karmann Ghia.

MANUAL

- 3-5468** Fits: All cars prior to 1964 except Ford 1962-64, and cars using Holley No. 1909 Carburetors.