



CHEMICAL EXPOSURE INDEX GUIDE

SEPTEMBER 1993
Second Edition

DO A 046841
CONFIDENTIAL

TABLE OF CONTENTS

	Page
Preface	i
Introduction	1
Procedure for Chemical Exposure Index Calculations	2
Scenarios for Estimation of Airborne Release Rates	4
Emergency Response Planning Guidelines (ERPG) and Dow Emergency Exposure Planning Guideline (EEPG)	5
Guidelines for Estimating the Amount of Material Becoming Airborne Following a Release	8
Estimating the Airborne Quantity for Gas Releases	11
Estimating Airborne Quantity for Liquid Releases	12
CEI and Hazard Distance Calculation	16
Chemical Exposure Index Summary Form	20
Figures	
Figure 1 — Procedure for Calculation of Chemical Exposure Index (CEI)	3
Figure 2 — Flowchart for Calculating the Airborne Quantity	10
Figure 3A — CEI vs. Airborne Quantity (SI Units)	18
Figure 3B — CEI vs. Airborne Quantity (US/Brit Units)	19
Tables	
Table 1 — Emergency Response Planning Guidelines: ERPGs/EEPGs	6
Table 2A — Physical Property Table for CEI (SI Units)	21
Table 2B — Physical Property Table for CEI (US/Brit Units)	22
Appendices	
Appendix 1 — Chemical Exposure Index Review Process	23
Appendix 2 — Containment and Mitigation Checklist	26
Appendix 3 — Example CEI Calculations (4 examples)	27
Appendix 4 — Chemical Exposure Index for Selected Chemicals for Releases..... for Releases from a 2-inch Diameter Hole	38

PROCEDURE FOR CHEMICAL EXPOSURE INDEX (CEI) CALCULATIONS

1. To develop a Chemical Exposure Index (CEI), the following items are needed:
 - a. An accurate plot plan of the plant and the surrounding area.
 - b. A simplified process flow sheet showing containment vessels, major piping and chemical inventories.
 - c. Physical and chemical properties of the material being investigated, as well as the ERPG/EEPG (pages 5-7) values.
 - d. A CEI Guide (Second edition).
 - e. A CEI Form (page 20).


Figure 1 (page 3) is a schematic overview of the CEI calculation. This chart will be helpful as you proceed through this guide.

2. Identify on the process flow sheet any process piping or equipment that could contribute to a significant release of an acutely toxic chemical.
3. Determine the Chemical Exposure Index and the Hazard Distances as explained in the following pages of this guide.
4. Fill out CEI Summary Sheet (page 20).
5. Determine if further analysis or review is necessary as outlined in the *Corporate Process Risk Management Guidelines for Facilities and Distribution*.

DO A 046843
CONFIDENTIAL

FIGURE 1

**PROCEDURE FOR CALCULATION OF
CHEMICAL EXPOSURE INDEX (CEI)**

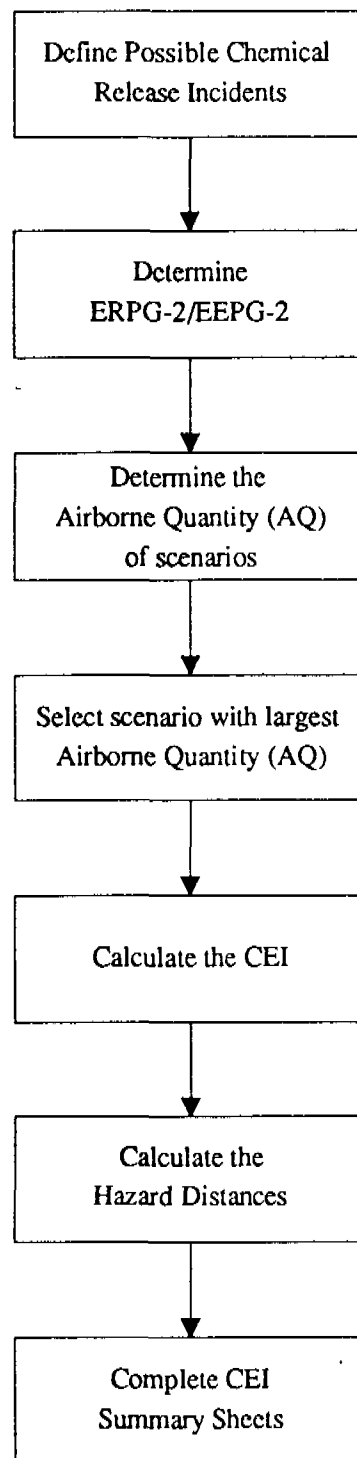

DO A 046844
CONFIDENTIAL

SCENARIOS FOR ESTIMATION OF AIRBORNE RELEASE RATES

The purpose of scenario selection is to determine which process piping or equipment has the greatest potential for the release of significant quantities of acutely toxic chemicals. Since the CEI now serves as a screening tool for further process hazards analysis, it is important that the calculations be done consistently on a global basis. The scenario selection process for determining airborne release rate has, therefore, been standardized to help achieve this goal. The selections listed below were chosen to include the most probable credible events based on historical performance of the chemical industry.

Evaluating several scenarios will aid in determining the largest potential airborne release. Process conditions such as temperature, pressure and physical state should be considered as well as pipe size since they have a significant impact on airborne release rates.

Scenario Selection for CEI: *Select the scenario that gives the largest airborne release.*

1. PROCESS PIPES

Rupture of the largest diameter process pipe as follows:

- For smaller than 2-inch diameter — full bore rupture
- For 2- through 4-inch diameter — rupture equal to that of 2-inch diameter pipe
- For greater than 4-inch diameter — rupture area equal to 20% of pipe cross section area

2. HOSES

Full bore rupture

3. PRESSURE RELIEF DEVICES RELIEVING DIRECTLY TO THE ATMOSPHERE

Calculated total release rate at set pressure. Refer to pressure relief calculation or contact process engineering. All material released is assumed to be airborne.

4. VESSELS

Rupture based on largest diameter process pipe attached to the vessel using pipe criteria above.

5. TANK OVERFLOWS AND SPILLS

6. OTHERS

Scenarios can be established based on the plant's or technology's experience, they can be the outcome of a review or derived from hazard analysis studies. They can also be based on the experience of another technology if the event could occur in this unit. Contact Process Engineering for special cases that may include reactivity or mixtures.

The treatment of instantaneous and very short duration continuous releases is simplified for the CEI calculation. Release from all scenarios are assumed to continue for at least a five minute duration. If a release is instantaneous or exceeds the total inventory within this duration, the release rate is calculated by dividing the total inventory by five minutes.

After this evaluation, choose the largest airborne release rate for the CEI calculation (page 20).

EMERGENCY RESPONSE PLANNING GUIDELINES (ERPG) AND DOW EMERGENCY EXPOSURE PLANNING GUIDELINES (EEPG)

The American Industrial Hygiene Association (AIHA) has published Emergency Response Planning Guidelines (ERPG) values which are intended to provide estimates of concentration ranges where one might reasonably anticipate observing adverse effects.

These guidelines are intended to be used as a planning tool for various Dow programs to determine priority concerns, to evaluate the adequacy of containment, to identify downwind areas which might need to take action during a release and to develop community emergency response plans. The need for an ERPG is based on the volatility of a chemical, its toxicity, the releasable quantity and the public's perception of the potential hazard.

The Emergency Exposure Planning Guidelines (EEPGs) are the Dow equivalent to the AIHA published ERPGs. These are provided when AIHA ERPGs do not exist. ERPG/EEPG definitions are as follows:

ERPG-1/EEPG-1 is the maximum airborne concentration below which it is believed that nearly all individuals could be exposed for one hour without experiencing other than mild transient adverse health effects or perceiving a clearly objectionable odor.


ERPG-2/EEPG-2 is the maximum airborne concentration below which it is believed that nearly all individuals could be exposed for up to one hour without experiencing or developing irreversible or other serious health effects or symptoms that could impair their abilities to take protective action.

ERPG-3/EEPG-3 is the maximum airborne concentration below which it is believed that nearly all individuals could be exposed for up to one hour without experiencing or developing life-threatening health effects.

*9/4/99 Use same scenarios as last time, but
follow this guide for frequency calc.*

GUIDELINES FOR ESTIMATING THE AMOUNT OF MATERIAL BECOMING AIRBORNE FOLLOWING A RELEASE

This section of the CEI guide provides a description of the method to calculate the airborne quantity. The airborne quantity, as used in this guide, refers to the total quantity of material entering the atmosphere over time, directly as vapor or due to liquid flashing or pool evaporation.

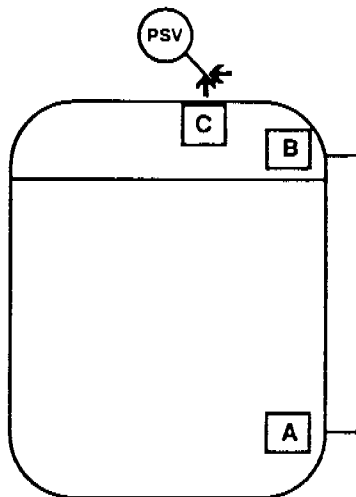

CEI scenarios consider materials to be released as liquid or vapor. For example, the contents of a vessel can escape as a liquid through nozzle A, a vapor through nozzle B or "as calculated" through the relief device attached to nozzle C. Complex calculations that consider two-phase flow from ruptures are not included.

Airborne quantity for vapor releases from nozzle (B) or a pressure relief device (C) is the highest total flow rate calculated given the conditions of the vessel when the release occurs.

Liquid releases require a more complex treatment. As a liquid exits a vessel or pipe as a result of a failure, it can simply run out on the ground forming a pool (see Figure A), partially vaporize forming both a pool and a vapor cloud (see Figure B) or flash to such an extent that all the residual liquid exists as small droplets that are carried away with the vapor (see Figure C).

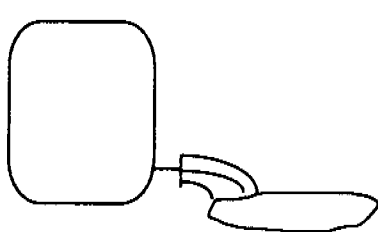


Figure A

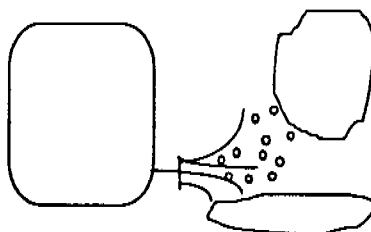


Figure B

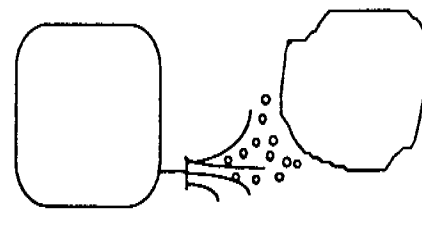


Figure C

A simple treatment of these events uses the operating conditions of the process to estimate the behavior of the material after the release.

Liquids reaching the ground form a pool that spreads according to the terrain. If the vessel is surrounded by a dike, the liquid usually flows to the walls of the dike and the pool assumes the area within the dike. In all other cases, the pool is assumed to have an area that is predicted by the amount of liquid that enters the pool. Once a pool is formed, the liquid begins to evaporate from the surface. The vapor from the pool will combine with the vapor from the original flash and be dispersed downwind. This incident is treated by taking a "picture" of the release at a moment in time and then assuming it does not change. (See Figure D)

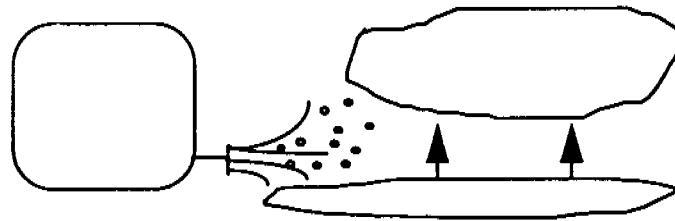



Figure D

The airborne quantity for a liquid spill is determined by what happens to the liquid as it leaves the tank. If the liquid flashes to a high degree, then the airborne quantity is the discharge rate from the vessel. But if the liquid flash is low enough to allow pool formation, the airborne quantity is the gas flow resulting from the flash plus the airborne quantity that evaporates from the pool surface. Finally, as the tendency of the liquid to flash becomes small, the airborne quantity becomes the rate of evaporation from the pool surface.

Figure 2 (page 10) provides a simplified flowchart for calculating airborne quantity. The equations are presented in both SI and US/British units.

FIGURE 2

FLOWCHART FOR CALCULATING AIRBORNE QUANTITY

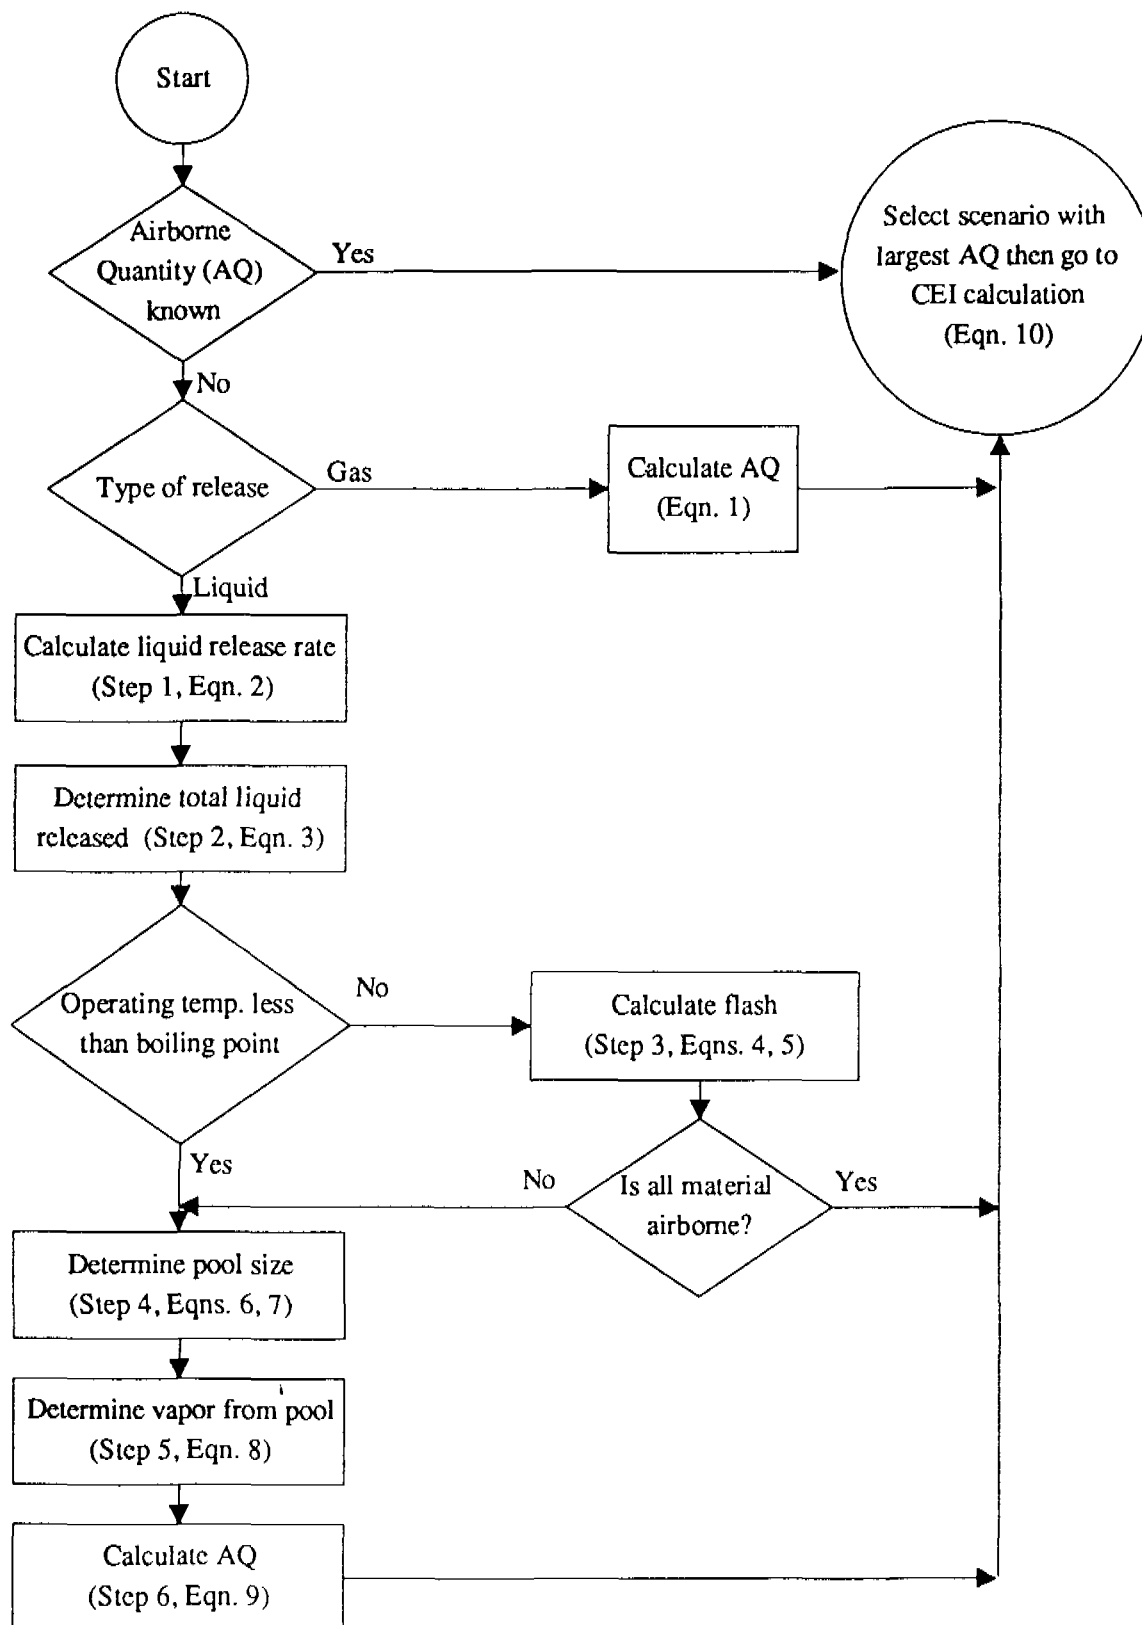

ESTIMATING THE AIRBORNE QUANTITY FOR GAS RELEASES

The following equations, based on the sonic gas flow rate equation, are used to estimate the airborne quantity for a gas release.

SI Units

$$\text{Airborne Quantity (AQ)} = 4.751 \times 10^{-6} D^2 P_a \sqrt{\frac{MW}{T + 273}} \quad \{\text{kg/sec}\} \quad (\text{Equation 1A})$$

where

P_a = absolute pressure = (P_g + 101.35)

P_g = gauge pressure (kPa gauge)

MW = molecular weight of the material

T = temperature (°C)

D = diameter of the hole (millimeters)

US/Brü Units

$$\text{Airborne Quantity (AQ)} = 3.751 D^2 P_a \sqrt{\frac{MW}{T + 459}} \quad \{\text{lb/min}\} \quad (\text{Equation 1B})$$

where

P_a = absolute pressure = (P_g + 14.7)

P_g = gauge pressure (psig)

MW = molecular weight of the material

T = temperature (°F)

D = diameter of the hole (inches)

DO A 046850
CONFIDENTIAL

ESTIMATING THE AIRBORNE QUANTITY FOR LIQUID RELEASES

The following steps describe a simplified procedure for estimating the airborne quantity for liquid releases.

Step 1: Determine the liquid flow rate being released.

The liquid release rate (L) is given by the following equations:

These equations assume that release from all scenarios will continue for at least five minutes before releases can be stopped. If a five minute release would exceed the total inventory, the release rate is calculated by dividing the total inventory by five minutes.

SI Units

$$L = 9.44 \times 10^{-7} D^2 \rho_l \sqrt{\frac{1000 P_g}{\rho_l} + 9.8 \Delta h} \quad \text{[kg/sec]} \quad \text{(Equation 2A)}$$

where

P_g = gauge pressure (kPa gauge)
(Note: for a tank open to the atmosphere $P_g = 0$)

ρ_l = density of the liquid at operating temperature (kg/m³)

Δh = height of the liquid above the release point (meters)

D = diameter of the hole (millimeters)

US/Brit Units

$$L = 2.234 D^2 \rho_l \sqrt{\frac{144 P_g}{\rho_l} + \Delta h} \quad \text{[lb/min]} \quad \text{(Equation 2B)}$$

where

P_g = gauge pressure (psig)
(Note: for a tank open to the atmosphere $P_g = 0$)

ρ_l = density of the liquid at operating temperature (lb/ft³)

Δh = height of the liquid above the release point (feet)

D = diameter of the hole (inches)

DO A 046851
CONFIDENTIAL

Step 2: Determine the total liquid released.

The total amount of material contributing to the pool formation must be estimated in order to determine the pool size. If a release is large enough to empty a vessel in less than 15 minutes (including very large releases that occur in less than 5 minutes), the mass of liquid entering the pool is the total inventory of the vessel. For a longer duration continuous release (one lasting more than 15 minutes) the pool is assumed to reach a final size after 15 minutes. In this case, the mass determining the pool size is the release rate times 15 minutes (900 seconds).

The total liquid release (W_T) is the tank inventory (the tank is emptied in less than 15 minutes) or given by:

SI Units

$$W_T = 900 L \quad \text{\{kg\}} \quad \text{(Equation 3A)}$$

where

L = liquid flow rate (kg/sec)

US/Brit Units

$$W_T = 15 L \quad \text{\{lb\}} \quad \text{(Equation 3B)}$$

where

L = liquid flow rate (lb/min)

Compare the calculated W_T to the inventory of the system involved in the release. The total liquid assumed to be involved in the release is taken as the smaller of these two values.

$$W_T = \text{smaller of calculated } W_T \text{ or system inventory}$$

Step 3: Calculate the fraction flashed.

Compare the operating temperature of the liquid to its normal boiling point. If the temperature is less than the normal boiling point, the flash fraction is zero. Go to Step 4, Equation 6. If the temperature is greater than the normal boiling point, calculate the fraction flashed (F_v).

The fraction of the liquid that will flash (F_v) when released is given by:

$$F_v = \frac{C_p}{H_v} (T_s - T_b) \quad \text{(Equation 4)}$$

where

	SI	US/Brit
T_b = normal boiling point of the liquid	$^{\circ}\text{C}$	$^{\circ}\text{F}$
T_s = operating temperature of the liquid	$^{\circ}\text{C}$	$^{\circ}\text{F}$
C_p = average heat capacity of the liquid	J/kg/ $^{\circ}\text{C}$	BTU/lb/ $^{\circ}\text{F}$
H_v = heat of vaporization of the liquid	J/kg	BTU/lb

The CEI data table contains the ratio of heat capacities to latent heats of vaporization (C_p/H_v) for many chemicals. If a chemical is not listed and the needed information cannot be found, then a value of 0.0044 (SI) or 0.0024 (US/Brit) may be used for the ratio C_p/H_v .

As flashing occurs, some liquid will be entrained as droplets. Some of the droplets are quite small and travel with the vapor while the larger droplets fall to the ground and collect in a pool. As an approximation, the amount of material staying in the vapor is five times the quantity flashed. Therefore, if 20% of the material flashes, the entire stream becomes airborne and there is no pool formed.

The airborne quantity produced by the flash (AQ_f) is given by:

$$AQ_f = 5 (F_v) (L) \quad \{\text{kg/sec or lb/min}\} \quad (\text{Equation 5})$$

where

L = liquid flow rate (kg/sec or lb/min)

If $F_v \geq 0.2$ then $AQ_f = L$ and no pool is formed. Proceed to Step 6.

Step 4: Determine the pool size.

The total mass of liquid entering the pool (W_p) is given by:

$$W_p = W_T (1 - 5F_v) \quad \{\text{kg or lb}\} \quad (\text{Equation 6})$$

where

W_T = total liquid released (kg or lb)

F_v = fraction flashed

Please note that if none of the material flashes,

$$W_p = W_T \quad (\text{kg or lb})$$

The size of the pool is approximated by assuming a pool depth of one centimeter. If the spill is in a diked area and of sufficient size, then the pool size is equal to the diked area.

The pool area (A_p) is given by:

SI Units

$$\text{Pool Area } (A_p) = 100 \frac{W_p}{\rho_l} \quad \{\text{m}^2\} \quad (\text{Equation 7A})$$

where

W_p = total mass entering the pool (kg)

ρ_l = density (kg/m³)

US/Brit Units

$$\text{Pool Area } (A_p) = 30.5 \frac{W_p}{\rho_l} \quad \{\text{ft}^2\} \quad (\text{Equation 7B})$$

W_p = total mass entering the pool (lb)

ρ_l = density (lb/ft³)

DO A 046853
CONFIDENTIAL

If the liquid falls into a diked containment area, then the pool size may be equal to the diked area minus the area taken up by the tank. But, if the spill does not fill the diked area or occurs outside the diked area, use A_p .

Step 5: Determine the airborne quantity evaporated from the pool surface.

Airborne Quantity evaporated from the pool surface (AQ_p) is given by:

SI Units

$$AQ_p = 9.0 \times 10^{-4} (A_p^{0.95}) \frac{(MW)P_v}{T + 273} \quad \text{(kg/sec)} \quad \text{(Equation 8A)}$$

where

A_p = pool area (m^2)

MW = molecular weight

P_v = vapor pressure of the liquid at the characteristic pool temperature (kPa)

T = characteristic pool temperature ($^{\circ}C$) (see Conditions 1 and 2)

US/Brit Units

$$AQ_p = 0.154 (A_p^{0.95}) \frac{(MW)P_v}{T + 459} \quad \text{(lb/min)} \quad \text{(Equation 8B)}$$

where

A_p = pool area (ft^2)

MW = molecular weight

P_v = vapor pressure of the liquid at the characteristic pool temperature (psi)

T = characteristic pool temperature ($^{\circ}F$) (see Conditions 1 and 2)

Condition 1

If the liquid is at or above ambient temperature but below its normal boiling point, the characteristic pool temperature is equal to the operating temperature.

Condition 2

If the liquid is at or above its normal boiling point, the characteristic pool temperature is the normal boiling point of the liquid. The normal boiling point is the boiling point of the liquid at atmospheric pressure.

Step 6: Calculate the total airborne quantity.

The total airborne quantity (AQ) is calculated by:

$$AQ = AQ_f + AQ_p \quad \text{(kg/sec or lb/min)} \quad \text{(Equation 9)}$$

where

AQ_f = airborne quantity resulting from the flash (kg/sec or lb/min)

AQ_p = airborne quantity evaporating from the pool surface (kg/sec or lb/min)

If the total Airborne Quantity (AQ) is greater than the liquid flow rate (L), set $AQ = L$.

CEI AND HAZARD DISTANCE CALCULATION

Chemical Exposure Index

All CEI calculations assume a windspeed of 5 m/sec (11.2 miles/hour) and neutral weather conditions.

The Chemical Exposure Index (CEI) is given by:

SI Units

$$CEI = 655.1 \sqrt{\frac{AQ}{ERPG-2}} \quad (\text{Equation 10A})$$

where

AQ = airborne quantity (kg/sec)
ERPG-2 = value (mg/m³)

US/Brit Units

$$CEI = 281.8 \sqrt{\frac{AQ}{ERPG-2(MW)}} \quad (\text{Equation 10B})$$

where

AQ = airborne quantity (lb/min)
ERPG-2 = value (PPM)
MW = molecular weight

If the CEI calculated value is greater than 1000, set CEI = 1000.

Hazard Distance

The Hazard Distance (HD) is the distance to the ERPG-1, -2 or -3 concentration and is derived from the following equation:

SI Units

$$HD = 6551 \sqrt{\frac{AQ}{ERPG}} \quad \text{(meters)} \quad \text{(Equation 11A)}$$

where

AQ = airborne quantity (kg/sec)

ERPG = ERPG-1, ERPG-2 or ERPG-3 (mg/m³)

US/Brits Units

$$HD = 9243 \sqrt{\frac{AQ}{ERPG(MW)}} \quad \text{(feet)} \quad \text{(Equation 11B)}$$

where

AQ = airborne quantity (lb/min)

ERPG = ERPG-1, ERPG-2 or ERPG-3 (PPM)


MW = molecular weight

If HD is greater than 10,000 meters (32,800 feet), set HD = 10,000 meters (32,800 feet).

DO A 046856
CONFIDENTIAL

FIGURE 3A


CEI VS. AIRBORNE QUANTITY - SI Units

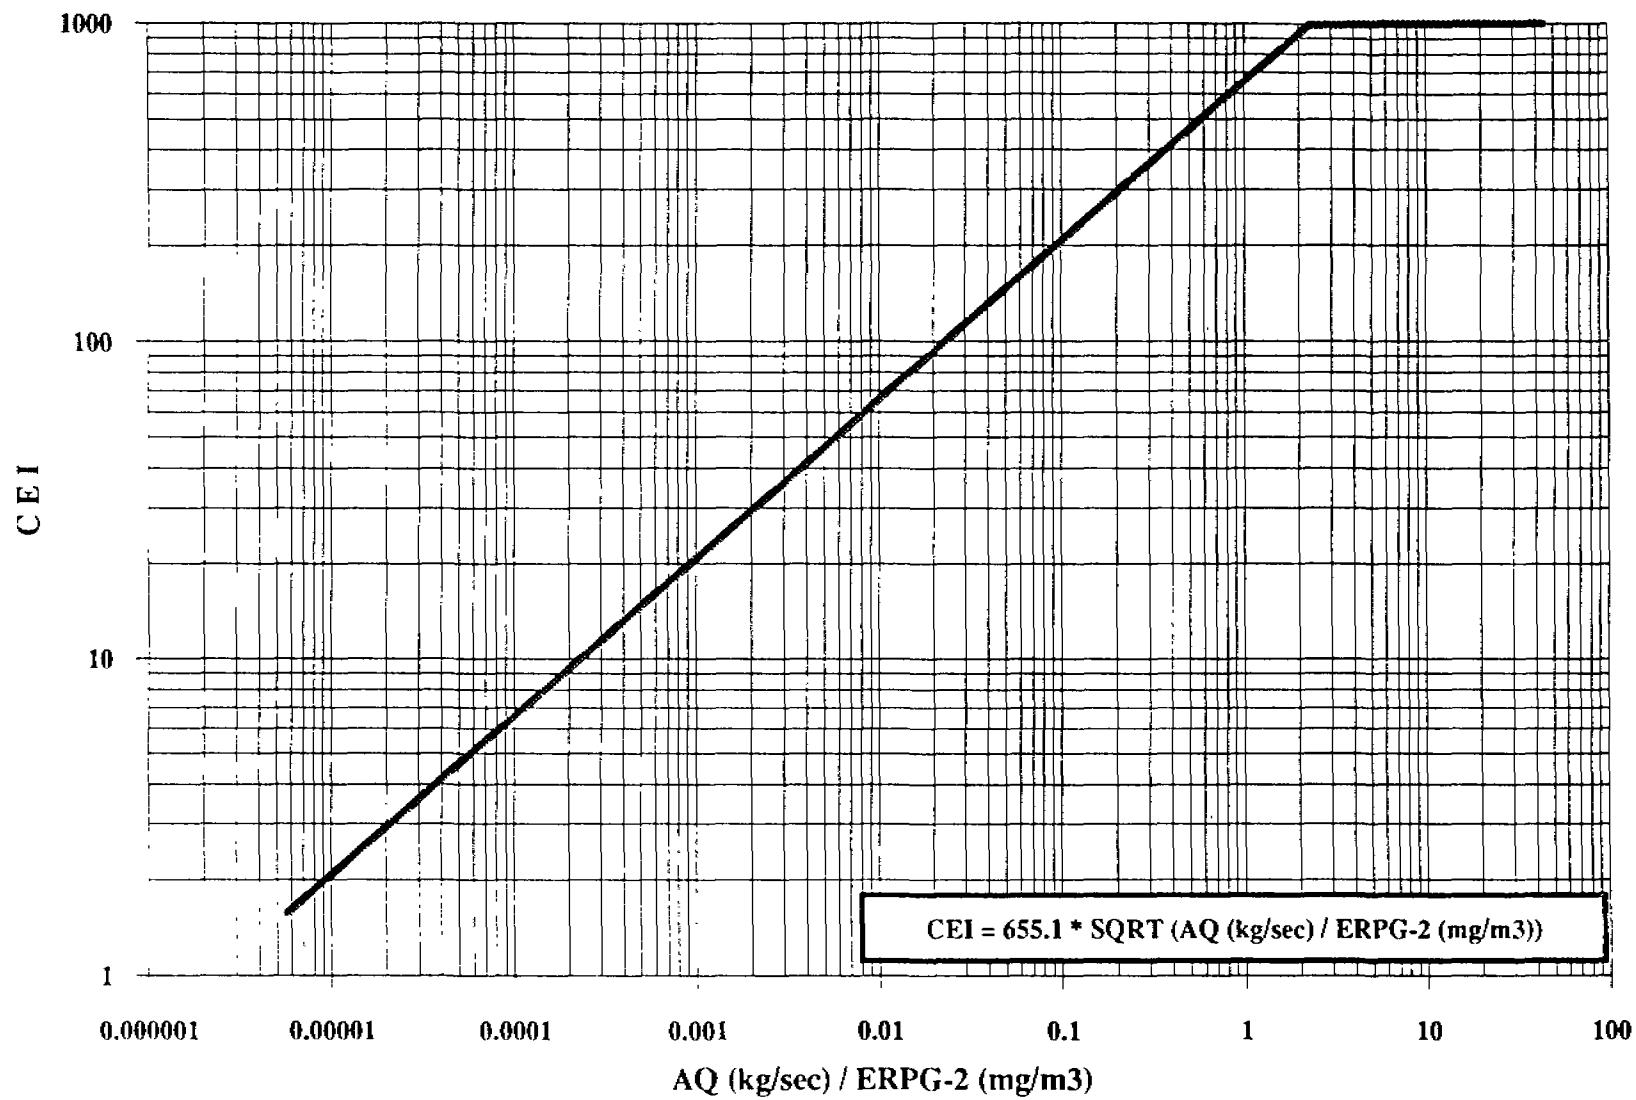

DO A 046857
CONFIDENTIAL

FIGURE 3B

CEI VS. AIRBORNE QUANTITY - US/BRIT Units

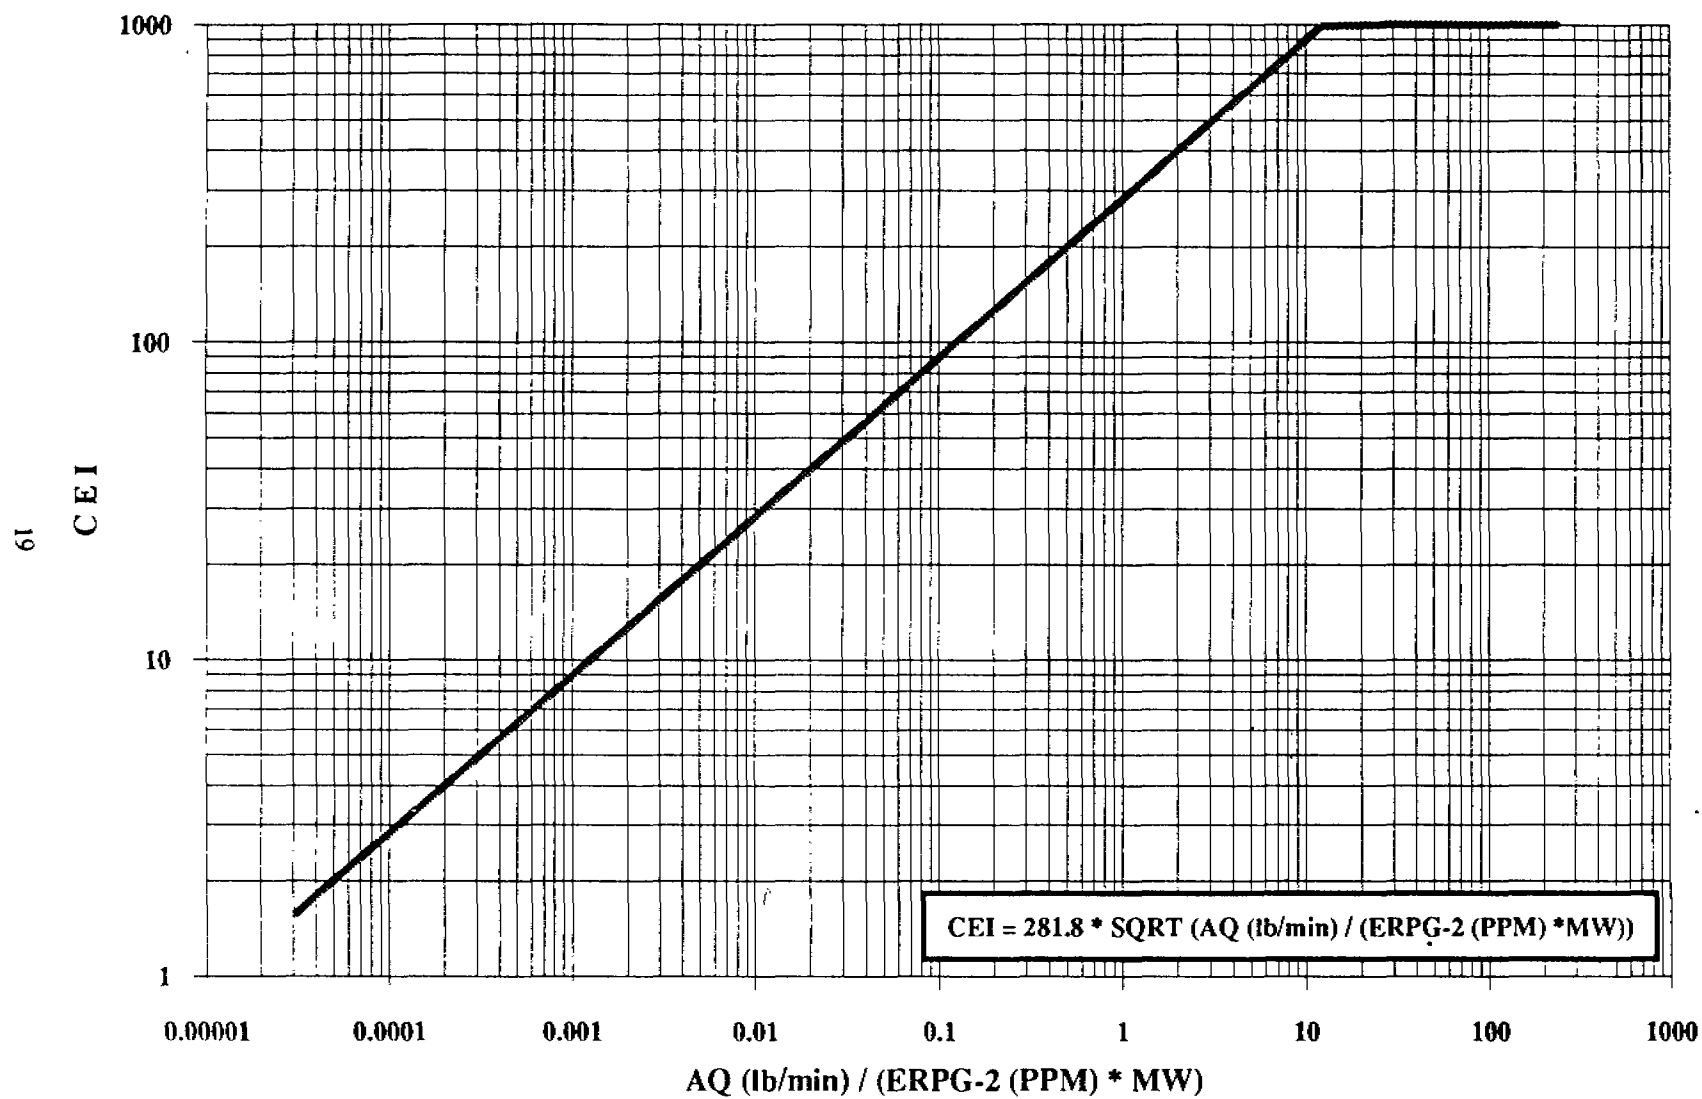

DO A 046858
CONFIDENTIAL

CHEMICAL EXPOSURE INDEX SUMMARY

Plant _____ Location _____

Chemical _____ Total Quantity In Plant _____

Largest Single Containment _____

Pressure Of Containment _____ Temperature Of Containment _____

1. Scenario Being Evaluated _____

2. Airborne Release Rate from Scenario _____ kg/sec
 _____ lb/min

3. Chemical Exposure Index _____

4.	Concentration		Hazard Distance	
	mg/m ³	PPM	meters	feet
ERPG-1/EEPG-1	_____	_____	_____	_____
ERPG-2/EEPG-2	_____	_____	_____	_____
ERPG-3/EEPG-3	_____	_____	_____	_____

5. Distances to:

	meters	feet
Public (generally considered Dow property line)	_____	_____
Other in-company facility	_____	_____
Non-company plant or business	_____	_____

6. The CEI and the Hazard Distance establish the level of review needed as determined in the Dow *Process Risk Management Guidelines for Facilities and Distribution*.

7. If further review is required, complete Containment and Mitigation Checklist (*Chemical Exposure Index Guide*, 2nd Edition – Appendix 2, page 26) and prepare Review Package.

8. List any sights, odors or sounds that might come from your facility and cause public concern or inquiries (e.g., smoke, large relief valves, odors below hazardous levels such as mercaptans or amines, etc.)

Prepared by: _____

Reviewed by: _____

Date

Plant Superintendent or Manager _____

Site Review Representative _____

Additional Management Review
 (if required) _____

TABLE 2A

PHYSICAL PROPERTY TABLE FOR CEI (SI UNITS)

Chemical	Molecular Weight	Boiling Point °C	Vapor Pressure kPa	Liquid Density @ 25 °C kg/m ³	Liquid Density @ BP kg/m ³	Gas Density @ 25 °C kg/m ³	Ratio of Cp/Hv 1/°C
Acrolein	56.06	52.5	35.866	834.4			
Acrylic acid	72.06	141.4	0.539	1046.0			
Acrylonitrile	53.06	77.2	13.900	801.0			
Allyl chloride	76.53	44.8	48.480	931.4			
Ammonia	17.03	-33.4	1002.800	602.3	684.0	7.79	4.01E-03
Benzene	78.11	80.1	12.690	869.8			
Bromine	159.81	58.7	28.375	3105.0			
Butadiene	54.09	-4.4	281.090	614.9	651.0	6.69	5.92E-03
Carbon disulfide	76.14	46.3	48.120	1256.0			
Carbon monoxide	29.01	-191.5	2807.000				
Carbon tetrachloride	153.82	76.8	15.162	1585.0			
Chlorine	70.91	-34.0	778.340	1399.0	1562.0	25.07	3.87E-03
Chloroacetyl chloride	112.94	106.0	3.330	1412.0			
Chloroform	119.38	61.7	26.175	1480.0			
Chloropicrin	164.38	112.0	3.356	1648.0			
Chlorotrifluoroethylene	116.47	-28.2	641.260	1290.0	1472.0	35.13	7.98E-03
Crotonaldehyde	70.09	102.4	4.787	848.9			
Dimethylamine	45.08	6.9	205.460	649.7	671.0	3.96	4.89E-03
Epichlorohydrin	92.52	116.4	2.279	1175.0			
Ethyl chloride	64.51	12.3	159.950	892.1	910.0	4.40	4.31E-03
Ethylene dichloride	98.96	83.5	10.590	1246.0			
Ethylene oxide	44.05	10.5	174.010	866.8	887.0	3.25	3.65E-03
Hydrogen bromide	80.91	-66.7	2358.800	1762.0	2199.0	95.46	5.66E-03
Hydrogen chloride	36.46	-85.0	4773.100	805.2	1188.0	113.0	9.81E-03
Hydrogen cyanide	27.03	25.7	98.780	679.6	679.0	1.14	2.83E-03
Hydrogen fluoride	20.01	19.6	122.740	981.5	991.0	1.15	4.24E-03
Hydrogen sulfide	34.08	-60.3	2020.800	767.3	929.0	34.30	5.26E-03
Methacrylonitrile	67.09	90.3	9.477	794.9			
Methanol	32.04	64.5	16.950	786.0			
Methylamine	31.06	-6.3	348.440	655.2	694.0	4.66	3.92E-03
Methyl chloride	50.49	-24.1	576.540	915.7	1014.0	13.12	4.19E-03
Methyl mercaptan	48.11	6.0	201.820	858.6	884.0	4.12	3.87E-03
Phenol	94.11	181.9	0.055	1070.0			
Phosgene	98.92	7.5	189.900	1360.0	1403.0	7.96	4.32E-03
Propylene oxide	58.08	34.2	71.670	823.2			
Styrene	104.15	145.2	0.841	901.6			
Sulfuryl fluoride	102.06	-55.2	1747.100	1318.0	1702.0	97.38	9.57E-03
Sulfur dioxide	64.06	-10.0	392.850	1353.0	1444.0	10.86	3.91E-03
Sulfur trioxide	80.06	44.4	35.688	1904.0			
Toluene diisocyanate	174.16	252.9	0.002	1211.0			
Trimethylamine	59.11	2.9	221.160	624.8	653.0	5.68	6.15E-03
Vinyl acetate	86.09	72.8	15.280	924.7			
Vinyl chloride	62.50	-13.8	395.140	902.1	972.0	10.90	3.88E-03
Vinylidene chloride	96.94	31.7	79.517	1203.0			

TABLE 2B

PHYSICAL PROPERTY TABLE FOR CEI (US/BRIT UNITS)

Chemical	Molecular Weight	Boiling Point °F	Vapor Pressure psia	Liquid Density @ 77 °F lb/ft ³	Liquid Density @ BP lb/ft ³	Gas Density @ 77 °F lb/ft ³	Ratio of C _p /H _v 1/°F
Acrolein	56.06	126.5	5.201	52.1			
Acrylic acid	72.06	286.5	0.078	65.3			
Acrylonitrile	53.06	171.0	2.016	50.0			
Allyl chloride	76.53	112.6	7.030	58.1			
Ammonia	17.03	-28.0	145.408	37.6	42.7	0.49	2.23E-03
Benzene	78.11	176.2	1.840	54.3			
Bromine	159.81	137.7	4.114	193.8			
Butadiene	54.09	24.0	40.759	38.4	40.6	0.42	3.29E-03
Carbon disulfide	76.14	115.3	6.978	78.4			
Carbon monoxide	29.01	-312.7	407.022				
Carbon tetrachloride	153.82	170.2	2.199	99.0			
Chlorine	70.91	-29.2	112.861	87.3	97.5	1.57	2.15E-03
Chloroacetyl chloride	112.94	222.8	0.483	88.2			
Chloroform	119.38	143.1	3.795	92.4			
Chloropicrin	164.38	233.5	0.487	102.9			
Chlorotrifluoroethylene	116.47	-18.8	92.984	80.5	91.9	2.19	4.43E-03
Crotonaldehyde	70.09	216.3	0.694	53.0			
Dimethylamine	45.08	44.4	29.792	40.6	41.9	0.25	2.72E-03
Epichlorohydrin	92.52	241.5	0.330	73.4			
Ethyl chloride	64.51	54.1	23.193	55.7	56.8	0.27	2.40E-03
Ethylene dichloride	98.96	182.3	1.536	77.8			
Ethylene oxide	44.05	50.9	25.232	54.1	55.4	0.20	2.03E-03
Hydrogen bromide	80.91	-88.1	342.032	110.0	137.3	5.96	3.14E-03
Hydrogen chloride	36.46	-121.1	692.111	50.3	74.2	7.05	5.45E-03
Hydrogen cyanide	27.03	78.3	14.323	42.4	42.4	0.07	1.57E-03
Hydrogen fluoride	20.01	67.3	17.798	61.3	61.9	0.07	2.36E-03
Hydrogen sulfide	34.08	-76.5	293.021	47.9	58.0	2.14	2.92E-03
Methacrylonitrile	67.09	194.6	1.374	49.6			
Methanol	32.04	148.1	2.458	49.1			
Methylamine	31.06	20.6	50.525	40.9	43.3	0.29	2.18E-03
Methyl chloride	50.49	-11.4	83.600	57.2	63.3	0.82	2.33E-03
Methyl mercaptan	48.11	42.7	29.264	53.6	55.2	0.26	2.15E-03
Phenol	94.11	359.4	0.008	66.8			
Phosgene	98.92	45.5	27.536	84.9	87.6	0.50	2.40E-03
Propylene oxide	58.08	93.6	10.392	51.4			
Styrene	104.15	293.4	0.122	56.3			
Sulfuryl fluoride	102.06	-67.4	253.334	82.3	106.3	6.08	5.32E-03
Sulfur dioxide	64.06	14.0	56.964	84.5	90.1	0.68	2.17E-03
Sulfur trioxide	80.06	111.9	5.175	118.9			
Toluene diisocyanate	174.16	487.2	0.000	75.6			
Trimethylamine	59.11	37.2	32.069	39.0	40.8	0.35	3.41E-03
Vinyl acetate	86.09	163.0	2.216	57.7			
Vinyl chloride	62.50	7.1	57.296	56.3	60.7	0.68	2.16E-03
Vinylidene chloride	96.94	89.1	11.530	75.1			

DO A 046861
CONFIDENTIAL

APPENDIX 1

CHEMICAL EXPOSURE INDEX REVIEW PROCESS

The following is a recommended procedure for the CEI review process.

When a plant or facility requires a further review, they should notify the site Loss Prevention contact and agree to an appropriate review schedule.

The review process should have three elements:

1. A Pre-Review Working Session
2. The Chemical Exposure Index Review Package
3. The Formal Review

Pre-Review Working Session

A one to two hour working session at least two weeks prior to the formal review is strongly recommended.

Purpose: This preliminary working session would let the actual review focus on what can and will be done to eliminate, reduce and/or mitigate potential releases.

This working session should have the following suggested agenda:

1. Review each chemical scenario, lines of defense, mitigation measures and plans for improvement with review team.
2. Discuss any past releases of acutely toxic material.
3. Interview an operator in the plant.
This interview should focus on the operator's awareness of the Chemical Exposure Index scenarios, use of emergency procedures and specific personal concerns related to the potential release of toxic chemicals.
4. Conduct a drill of a hypothetical CEI release scenario. This drill should be conducted by plant personnel with CEI review team members present and should be designed to evaluate the response to an emergency situation involving a major release of one of the chemicals with the largest CEI.
5. Inspect equipment and piping related to each scenario with the largest CEI.
This inspection will consider the condition of pipe and equipment, location of valves and mitigating devices, etc.
6. Review documentation pertaining to each CEI scenario.
The following documents are suggested as a minimum:
 - Past hypothetical exercise reports
 - Area monitoring system records
 - Maintenance checklists
 - Operating Discipline including: loading/unloading procedures, shutdown for releases, mitigation procedures, spill reporting procedure, etc.Completeness and quality will be used as a criterion for evaluating the documentation.

- Written reports of the interview, drill, site inspection and documentation review should be prepared.

DO A 046862
CONFIDENTIAL

Chemical Exposure Review Package

At least one week before the review, the following information should be sent to each member of the review team:

1. Chemical Exposure Index Summary sheets for all chemicals and scenarios calculated.
2. A simplified process flowsheet for areas with chemicals having the largest CEIs.
Include: a) all vessels including description, designation, (i.e., storage tank VT-100) size and normal contents.
b) associated piping including size, approximate length between equipment and any automated block valves.
3. A description of the scenario for each chemical that results in the largest CEIs.
Include: a) description of any major changes made to this system since the last audit.
b) description of the lines of defense or actions to be taken if each scenario occurs.
c) description of any mitigation methods, including size of spill areas or dike areas.
4. An area map showing three circles that represent the hazard distance for ERPG-1, -2 and -3 concentrations.
5. A plot plan showing the location of gas monitors, spill detectors or other devices used to detect releases. Also include the type of device used to detect the release and the detection level for each type of device.
6. A completed containment and compliance checklist.
7. A list of the recommendations made in the previous review and the status of each recommendation.
- × 8. A written report for the hypothetical exercise based on one of the Chemical Exposure Index scenarios. Include a description of the hypothetical release, a chronological list of actions taken and any recommendations for improvement. Include time it took to isolate the release.
Note: If the hypothetical exercise is to be done during the review, please include the written description of the exercise scenario in the package.
- ✓ 9. Written results of the employee interview.
10. A written report of the in-plant inspection of each Chemical Exposure Index scenario source site.

If a pre-review working session was not held, these last two items must be provided during the formal review.

Formal Review

The following four activities should be done prior to formal presentation if a pre-review working session was not held:

1. Hypothetical exercise
2. Employee interview
3. Site inspection of each scenario site
4. Documentation review

Suggested Review Agenda

1. Summarize the status of the recommendations made in the previous review.
2. Discuss incidents that have occurred involving chemicals being reviewed.
Include Spill History – incident reports and plant follow-up reports.
3. Summarize the results of CEI calculations. Include hazard distances for ERPG-1, -2, -3.

DO A 046863
CONFIDENTIAL

4. Review the release scenarios for the largest CEIs. Include plot plan showing hazard distances. Address the following items for each scenario:
 - a. Have there been any major changes or additions to this system since the last audit/assessment?
 - b. Discuss your lines of defense that would prevent this scenario release from occurring.
 - c. Discuss the mitigation procedures for each scenario.
5. Discuss results of hypothetical exercise held prior to audit.
6. Discuss results of employee interview held prior to audit.
7. Review results of site inspection of each CEI scenario sources site.
8. Discuss results of documentation review.
9. Discuss your plant's CEI related concerns generated from the audit/assessment preparation.
10. Discuss your plans for improving your operations from a CEI standpoint.
11. Are there any other specific concerns which should be addressed but were not identified in the CEI review?

A written response including action to be taken, person assigned, anticipated completion date should be reported to the Line Management and the Review Chairman within 45 days and maintained with your Chemical Exposure Index calculations.

DO A 046864
CONFIDENTIAL

APPENDIX 2

CONTAINMENT AND MITIGATION CHECKLIST

This checklist is a Process Hazard Analysis tool for evaluating a facility's mitigation features to prevent, detect or control potential releases of acute toxic substances.

The management of any plant or facility requiring review should complete this checklist as part of the preparation for a Chemical Exposure Index review. Please check those that are complete, operational or in compliance with known company rules, guidelines or requirements. Any item that cannot be checked should be marked with the percentage of completion. Be prepared to discuss plans for any item not completed.

Complete (✓)	Risk Reducing Factors
_____	1. All pressure vessel and relief device systems properly registered and inspection up to date and documentation complete. (No expansion joints or glass devices.)
_____	2. All hoses inspected and tested regularly.
_____	3. All operational controls and systems designed and routinely tested to "fail-safe."
_____	4. Critical Instrument Program up to date (e.g., redundant high level and temperature alarms, shutdowns, etc.)
_____	5. Operating Discipline complete and up to date.
_____	6. Vapor Detectors properly placed and tested regularly.
_____	7. Appropriate engineering specifications properly applied (e.g., lethal service, welded fittings, etc.)
_____	8. Are relief vents on toxic containers designed to minimize atmospheric emissions? (per <i>Environmental Protection Guidelines for Operations</i>) How? (circle) Scrubber, Flare or _____
_____	9. Failure analysis and nondestructive testing carried out where needed (e.g., X-ray, vibration analysis or monitoring, acoustical emission, piping flexibility – hot and cold).
_____	10. Physical barriers in place (for traffic, cranes, etc.)
_____	11. Designed for excess pressure, if needed (e.g., pipelines in certain areas, tank cars, trucks, etc.).
_____	12. All personnel properly trained to understand hazards and emergency responses.
_____	13. Emergency Procedures (relating to this exposure potential) in place and annual drill held.
_____	14. Safety Rules and Safety Standards regularly reviewed and enforced.
_____	15. Loss Prevention Principles and Minimum Requirements appropriately applied.
_____	16. Technology Center Guidelines appropriately incorporated.
_____	17. Reactive Chemical Review complete and up to date.
_____	18. Loss Prevention Audit complete and up to date.
_____	19. Technology Center Audit complete and up to date.
_____	20. All new operations and modifications underwent safety pre-startup audit.
_____	21. Management of Change procedures written and utilized.

DO A 046865
CONFIDENTIAL

Completed by: _____

Date: _____

Reviewed by: _____

APPENDIX 3

EXAMPLE CEI CALCULATIONS

CHLORINE VAPOR RELEASE

The 3/4 inch vapor connection on a 1 ton chlorine cylinder stored at ambient temperature (30 °C or 86 °F) has broken.

Needed information:

	SI	US/Brit
Pressure inside the cylinder, P_g	788.1 kPa gauge	114.3 psig
Absolute Pressure, Pa	889.5 kPa	129.0 psia
Molecular Weight, MW	70.91	70.91
Storage Temperature, T	30 °C	86 °F
Diameter of Hole, D	19 mm	0.75 in

Determine Airborne Quantity.

SI Units (Equation 1A)

$$AQ = 4.751 \times 10^{-6} D^2 Pa \sqrt{\frac{MW}{(T+273)}}$$

$$AQ = 4.751 \times 10^{-6} (19)^2 (889.5) \sqrt{\frac{70.91}{(30+273)}}$$

$$AQ = 0.74 \text{ kg / sec}$$

US/Brit Units (Equation 1B)

$$AQ = 3.751 D^2 Pa \sqrt{\frac{MW}{(T+459)}}$$

$$AQ = 3.751 (.75)^2 (129.0) \sqrt{\frac{70.91}{(86+459)}}$$

$$AQ = 98.2 \text{ lb / min}$$

Calculate the CEI.

SI Units (Equation 10A)

where ERPG-2 = 9 mg/m³

$$CEI = 655.1 \sqrt{\frac{AQ}{ERPG-2}}$$

$$CEI = 655.1 \sqrt{\frac{0.74}{9.0}}$$

$$CEI = 188$$

US/Brit Units (Equation 10B)

where ERPG-2 = 3 PPM

$$CEI = 281.8 \sqrt{\frac{AQ}{(ERPG-2)(MW)}}$$

$$CEI = 281.8 \sqrt{\frac{98.2}{(3.0)(70.91)}}$$

$$CEI = 191$$

Differences in CEI values result from rounding the ERPG values when converting between PPM and mg/m³.

Calculate Hazard Distances.

SI Units (Equation 11A)

For ERPG-2 = 9 mg/m³

$$HD = 6551 \sqrt{\frac{AQ}{ERPG}}$$

$$HD = 6551 \sqrt{\frac{0.74}{9}}$$

$$HD = 1,878 \text{ meters}$$

For ERPG-1 = 3 mg/m³

$$HD = 6551 \sqrt{\frac{0.74}{3}}$$

$$HD = 3,254 \text{ meters}$$

For ERPG-3 = 58 mg/m³

$$HD = 6551 \sqrt{\frac{0.74}{58}}$$

$$HD = 740 \text{ meters}$$

US/Brit Units (Equation 11B)

For ERPG-2 = 3 PPM

$$HD = 9243 \sqrt{\frac{AQ}{ERPG(MW)}}$$

$$HD = 9243 \sqrt{\frac{98.2}{3(70.91)}}$$

$$HD = 6,280 \text{ feet}$$

For ERPG-1 = 1 PPM

$$HD = 9243 \sqrt{\frac{98.2}{1(70.91)}}$$

$$HD = 10,878 \text{ feet}$$

For ERPG-3 = 20 PPM

$$HD = 9243 \sqrt{\frac{98.2}{20(70.91)}}$$

$$HD = 2,432 \text{ feet}$$

Differences in HD values result from rounding the ERPG values when converting between PPM and mg/m³.

DO A 046867
CONFIDENTIAL

AMMONIA LIQUID RELEASE

Ammonia is stored in a 12 ft diameter by 72 ft long horizontal vessel under its own vapor pressure at ambient temperature (30 °C or 86 °F). The largest liquid line out of the vessel is 2 inch diameter (50.8 mm).

Needed information:

	SI	US/Brit
Pressure inside vessel, P_g	1064 kPa gauge	154.5 psig
Temperature inside vessel, T	30 °C	86 °F
Normal boiling point	-33.4 °C	-28 °F
Liquid density in vessel, ρ_l	594.5 kg/m ³	37.1 lb/ft ³
Ratio C_p/H_v	4.01 E-03	2.23 E-03
Height of liquid in tank, Δh	3.66 m	12 ft
Diameter of hole, D	50.8 mm	2.0 in
Molecular weight, MW	17.03	17.03

Estimate liquid released.

SI Units (Equation 2A)

$$L = 9.44 \times 10^{-7} D^2 \rho_l \sqrt{\frac{1000 P_g}{\rho_l} + 9.8 \Delta h}$$

$$L = 9.44 \times 10^{-7} (50.8)^2 (594.5) \sqrt{\frac{1000(1064)}{594.5} + 9.8(3.66)}$$

$$L = 61.9 \text{ kg / sec}$$

US/Brit Units (Equation 2B)

$$L = 2.234 D^2 \rho_l \sqrt{\frac{144 P_g}{\rho_l} + \Delta h}$$

$$L = 2.234 (2.0)^2 (37.1) \sqrt{\frac{144(154.5)}{37.1} + 12.0}$$

$$L = 8,200 \text{ lb / min}$$

Estimate flash fraction.

SI Units (Equation 4A)

$$F_v = \frac{C_p}{H_v} (T_s - T_b)$$

$$F_v = 0.00401(30 - (-33.4))$$

$$F_v = 0.254$$

$$\text{Since } F_v > 0.2 \quad A Q = L$$

$$A Q = 61.9 \text{ kg/sec}$$

US/Brit Units (Equation 4B)

$$F_v = \frac{C_p}{H_v} (T_s - T_b)$$

$$F_v = 0.00223(86 - (-28))$$

$$F_v = 0.254$$

$$\text{Since } F_v > 0.2 \quad A Q = L$$

$$A Q = 8,200 \text{ lb/min}$$

DO A 046868
CONFIDENTIAL

Calculate CEI.

SI Units (Equation 10A)

where ERPG-2 = 139 mg/m³

$$CEI = 655.1 \sqrt{\frac{AQ}{ERPG-2}}$$

$$CEI = 655.1 \sqrt{\frac{61.9}{139}}$$

$$CEI = 437$$

US/Brit Units (Equation 10B)

where ERPG-2 = 200 PPM

$$CEI = 281.8 \sqrt{\frac{AQ}{(ERPG-2)(MW)}}$$

$$CEI = 281.8 \sqrt{\frac{8200}{200(17.03)}}$$

$$CEI = 437$$

Calculate the Hazard Distances.

SI Units (Equation 11A)

For ERPG-2 = 139 mg/m³

$$HD = 6551 \sqrt{\frac{AQ}{ERPG}}$$

$$HD = 6551 \sqrt{\frac{61.9}{139}}$$

$$HD = 4,372 \text{ meters}$$

For ERPG-1 = 17 mg/m³

$$HD = 6551 \sqrt{\frac{61.9}{17}}$$

$$HD = 12,500 \text{ meters}$$

For ERPG-3 = 696 mg/m³

$$HD = 6551 \sqrt{\frac{61.9}{696}}$$

$$HD = 1,953 \text{ meters}$$

US/Brit Units (Equation 11B)

For ERPG-2 = 200 PPM

$$HD = 9243 \sqrt{\frac{AQ}{ERPG(MW)}}$$

$$HD = 9243 \sqrt{\frac{8200}{200(17.03)}}$$

$$HD = 14,342 \text{ feet}$$

For ERPG-1 = 25 PPM

$$HD = 9243 \sqrt{\frac{8200}{25(17.03)}}$$

$$HD = 40,564 \text{ feet}$$

For ERPG-3 = 1000 PPM

$$HD = 9243 \sqrt{\frac{8200}{1000(17.03)}}$$

$$HD = 6,414 \text{ feet}$$

DO A 046869
CONFIDENTIAL

STYRENE LIQUID RELEASE

Styrene is stored in a 40 ft x 40 ft API tank at ambient temperature (25 °C or 77 °F). The tank has a closed vent system but is essentially at ambient pressure. The outlet is a 6-inch Schedule 40 nozzle.

Needed information:

	SI	US/Brit
Pressure inside the tank, P_g	0.0 kPa	0.0 psig
Temperature inside the tank, T	25 °C	77 °F
Normal boiling point	145.2 °C	293.4 °F
Vapor pressure, ambient temperature	0.841 kPa	0.122 psi
Liquid density, ρ_l	901.6 kg/m ³	56.3 lb/ft ³
Height of liquid, Δh	12.2 m	40.0 ft
Molecular weight, MW	104.15	104.15

Scenario selection — For greater than 4-inch diameter, use 20% of the cross sectional area (CSA).

For 6-inch Schedule 40, CSA = 28.89 in²

$$0.20(28.89) = 5.78 \text{ in}^2$$

$$D = \sqrt{\frac{4}{\pi} A} = \sqrt{\frac{4}{\pi} 5.78} = 2.71 \text{ in or } 68.9 \text{ mm}$$

Estimate liquid released.

SI Units (Equation 2A)

$$L = 9.44 \times 10^{-7} D^2 \rho_l \sqrt{\frac{1000 P_g}{\rho_l} + 9.8 \Delta h}$$

$$L = 9.44 \times 10^{-7} (68.9)^2 (901.6) \sqrt{\frac{1000(0)}{901.6} + 9.8 (12.2)}$$

$$L = 44.2 \text{ kg / sec}$$

US/Brit Units (Equation 2B)

$$L = 2.234 D^2 \rho_l \sqrt{\frac{144 P_g}{\rho_l} + \Delta h}$$

$$L = 2.234 (2.71)^2 (56.3) \sqrt{\frac{144(0)}{56.3} + 40.0}$$

$$L = 5,842 \text{ lb / min}$$

Compare operating temperature to normal boiling point:

$$25 \text{ °C} < 145 \text{ °C}$$

$$77 \text{ °F} < 293.4 \text{ °F}$$

Therefore, Flash Fraction = 0

Estimate pool size.

SI Units (Equation 3A)

$$W_T = 900(L)$$

$$W_T = 39,800 \text{ kg} = W_p$$

US/Brit Units (Equation 3B)

$$W_T = 15(L)$$

$$W_T = 87,600 \text{ lb} = W_p$$

SI Units (Equation 7A)

$$A_p = 100 \frac{W_p}{\rho_l}$$

$$A_p = 100 \frac{39800}{901.6}$$

$$A_p = 4,410 \text{ m}^2$$

Assume no dike.

SI Units (Equation 8A)

$$AQ_p = 9.0 \times 10^{-4} (A_p^{0.95}) \frac{(MW)P_v}{T+273}$$

Characteristic pool temperature equals ambient

$$AQ_p = 9.0 \times 10^{-4} (4410^{0.95}) \frac{104.15(0.841)}{25+273}$$

$$AQ_p = 0.767 \text{ kg / sec}$$

SI Units (Equation 9A)

$$AQ = AQ_f + AQ_p$$

$$AQ = 0 + 0.767$$

$$AQ = 0.729 \text{ kg / sec}$$

Calculate CEI.

SI Units (Equation 10A)

where ERPG-2 = 1065 mg/m³

$$CEI = 655.1 \sqrt{\frac{AQ}{ERPG-2}}$$

$$CEI = 655.1 \sqrt{\frac{0.767}{1065}}$$

$$CEI = 18$$

US/Brit Units (Equation 7B)

$$A_p = 30.5 \frac{W_p}{\rho_l}$$

$$A_p = 30.5 \frac{87600}{56.3}$$

$$A_p = 47,460 \text{ ft}^2$$

US/Brit Units (Equation 8B)

$$AQ_p = 0.154 (A_p^{0.95}) \frac{(MW)P_v}{T+459}$$

$$AQ_p = 0.154 (47460^{0.95}) \frac{104.15(0.122)}{77+459}$$

$$AQ_p = 101 \text{ lb / min}$$

US/Brit Units (Equation 9B)

$$AQ = AQ_f + AQ_p$$

$$AQ = 0 + 101$$

$$AQ = 101 \text{ lb / min}$$

US/Brit Units (Equation 10B)

where ERPG-2 = 250 PPM

$$CEI = 281.8 \sqrt{\frac{AQ}{(ERPG-2)(MW)}}$$

$$CEI = 281.8 \sqrt{\frac{101}{250(104.15)}}$$

$$CEI = 18$$

DO A 046871
CONFIDENTIAL

Calculate the Hazard Distances.

SI Units (Equation 11A)

For ERPG-2 = 1065 mg/m³

$$HD = 6551 \sqrt{\frac{AQ}{ERPG}}$$

$$HD = 6551 \sqrt{\frac{0.767}{1065}}$$

$$HD = 176 \text{ meters}$$

For ERPG-1 = 213 mg/m³

$$HD = 6551 \sqrt{\frac{0.767}{213}}$$

$$HD = 393 \text{ meters}$$

For ERPG-3 = 4259 mg/m³

$$HD = 6551 \sqrt{\frac{0.767}{4259}}$$

$$HD = 87.9 \text{ meters}$$

US/Brit Units (Equation 11B)

For ERPG-2 = 250 PPM

$$HD = 9243 \sqrt{\frac{AQ}{ERPG(MW)}}$$

$$HD = 9243 \sqrt{\frac{101}{250(104.15)}}$$

$$HD = 576 \text{ feet}$$

For ERPG-1 = 50 PPM

$$HD = 9243 \sqrt{\frac{101}{50(104.15)}}$$

$$HD = 1,287 \text{ feet}$$

For ERPG-3 = 1000 PPM

$$HD = 9243 \sqrt{\frac{101}{1000(104.15)}}$$

$$HD = 288 \text{ feet}$$

DO A 046872
CONFIDENTIAL

CHLORINE LIQUID RELEASE

Chlorine is stored in a sphere at 5 °C (41 °F). A 2-inch nozzle fails on the bottom of the vessel allowing liquid to escape.

Needed information:

	SI	US/Brits
Pressure inside the cylinder, P_g	332 kPa gauge	48.2 psig
Molecular weight, MW	70.91	70.91
Storage temperature, T	5 °C	41 °F
Liquid density, ρ_l	1458 kg/m ³	91.01 lb/ft ³
Height of liquid in the sphere, Δh	6 m	19.7 ft
Diameter of hole, D	50.8 mm	2 in
Capacity of sphere	1.134 x 10 ⁶ kg	2.5 x 10 ⁶ lb

Estimate liquid released.

SI Units (Equation 2A)

$$L = 9.44 \times 10^{-7} D^2 \rho_l \sqrt{\frac{1000 P_g}{\rho_l} + 9.8 \Delta h}$$

$$L = 9.44 \times 10^{-7} (50.8)^2 (1458) \sqrt{\frac{1000(332)}{1458} + 9.8(6)}$$

$$L = 60.1 \text{ kg / sec}$$

US/Brit Units (Equation 2B)

$$L = 2.234 D^2 \rho_l \sqrt{\frac{144 P_g}{\rho_l} + \Delta h}$$

$$L = 2.234 (2)^2 91.01 \sqrt{\frac{144(48.2)}{91.01} + 19.7}$$

$$L = 7,967 \text{ lb / min}$$

Determine the total liquid released.

For 15 minutes (900 seconds), the total liquid leaving the tank is:

$$W_T = 900(60.1) = 54,090 \text{ kg}$$

$$W_T = 15(7,967) = 119,505 \text{ lb}$$

The capacity of the tank when full is 1.134 x 10⁶ kg. Since $L_T = 54090 \text{ kg}$ is less than the capacity of the tank.

$$W_T = 54,090 \text{ kg}$$

$$W_T = 119,505 \text{ lb}$$

Calculate the flash fraction.

Needed information:

Normal boiling point temperature = -34 °C

Normal boiling point temperature = -29.2 °F

Heat of vaporization = 275,030 J/kg

Heat capacity of liquid (at average temperature) = 943.8 J/kg/°C

DO A 046873
CONFIDENTIAL

A technically correct solution for evaluating the flash fraction requires the heat capacity (C_p) to be evaluated at the average temperature (storage and boiling point) and the heat of vaporization at the boiling point. For example:

$$C_p (@ -15^\circ\text{C or } 5^\circ\text{F}) = 943.8 \text{ J/kg/}^\circ\text{C} = 0.2254 \text{ BTU/lb/}^\circ\text{F}$$

and

$$H_v (\text{BP}) = 285,457 \text{ J/kg} = 122.72 \text{ BTU/lb}$$

SI Units (Equation 4A)

$$F_v = \frac{C_p}{H_v} (T_s - T_b)$$

$$F_v = \frac{943.8}{285,457} (5 - (-34.0))$$

$$F_v = 0.129$$

US/Brit Units (Equation 4B)

$$F_v = \frac{C_p}{H_v} (T_s - T_b)$$

$$F_v = \frac{0.2254}{122.72} (41 - (-29.2))$$

$$F_v = 0.129$$

Calculate vapor source strength from the flash.

$$AQ_f = 5(F_v)(L) = 5(0.129)(60.1) = 38.8 \text{ kg / sec} \quad (\text{SI})$$

$$AQ_f = 5(F_v)(L) = 5(0.129)(7967) = 5,139 \text{ lb / min} \quad (\text{US/Brit})$$

Calculate the total liquid entering the pool.

$$W_p = W_T(1 - 5F_v) = 54,090(1 - (5)(0.129)) = 19,202 \text{ kg} \quad (\text{SI})$$

$$W_p = W_T(1 - 5F_v) = 119,505(1 - (5)(0.129)) = 42,424 \text{ lb} \quad (\text{US/Brits})$$

Liquid density of chlorine at its boiling point = $1,562 \text{ kg/m}^3$

SI Units (Equation 7A)

$$A_p = 100 \frac{W_p}{\rho_l}$$

$$A_p = 100 \frac{19202}{1562}$$

$$A_p = 1,229 \text{ m}^2$$

US/Brit Units (Equation 7B)

$$A_p = 30.5 \frac{W_p}{\rho_l}$$

$$A_p = 30.5 \frac{42424}{97.5}$$

$$A_p = 13,271 \text{ ft}^2$$

DO A 046874
CONFIDENTIAL

Calculate the vapor flow rate from the pool.

Since chlorine is boiling in the pool, $P_v = 101.3 \text{ kPa} = 14.70 \text{ psi}$
Molecular weight of chlorine = 70.91

SI Units (Equation 8A)

$$AQ_p = 9.0 \times 10^{-4} (A_p^{0.95}) \frac{(MW)P_v}{T+273}$$

$$AQ_p = 9.0 \times 10^{-4} (1229^{0.95}) \frac{70.91(101.3)}{(-34.0)+273}$$

$$AQ_p = 23.3 \text{ kg / sec}$$

US/Brit Units (Equation 8B)

$$AQ_p = 0.154 (A_p^{0.95}) \frac{(MW)P_v}{T+459}$$

$$AQ_p = 0.154 (13271^{0.95}) \frac{70.91(14.70)}{(-29.2)+459}$$

$$AQ_p = 3,083 \text{ lb / min}$$

Calculate source strength of release.

SI Units (Equation 9A)

$$AQ = AQ_f + AQ_p$$

$$AQ = 38.8 + 23.3$$

$$AQ = 62.1 \text{ kg / sec}$$

US/Brit Units (Equation 9B)

$$AQ = AQ_f + AQ_p$$

$$AQ = 5139 + 3083$$

$$AQ = 8,222 \text{ lb / min}$$

Compare to the liquid release: 62.1 kg/sec is greater than 60.1 kg/sec and 8,222 lb/min is greater than 7,967 lb/min:

$$AQ = 60.1 \text{ kg / sec}$$

$$AQ = 7,967 \text{ lb / min}$$

Calculate the CEI.

SI Units (Equation 10A)

where ERPG-2 = 9 mg/m³

$$CEI = 655.1 \sqrt{\frac{AQ}{ERPG-2}}$$

$$CEI = 655.1 \sqrt{\frac{60.1}{9}}$$

$$CEI = 1,963$$

This is greater than 1000; thus
CEI = 1,000

US/Brit Units (Equation 10B)

where ERPG-2 = 3 PPM

$$CEI = 281.8 \sqrt{\frac{AQ}{(ERPG-2)(MW)}}$$

$$CEI = 281.8 \sqrt{\frac{7967}{3(70.91)}}$$

$$CEI = 1,725$$

This is greater than 1000; thus
CEI = 1,000

Calculate the Hazard Distances.

SI Units (Equation 11A)

For ERPG-2 = 9 mg/m³

$$HD = 6551 \sqrt{\frac{AQ}{ERPG}}$$

$$HD = 6551 \sqrt{\frac{60.1}{9}}$$

$$HD = 16,929 \text{ meters}$$

HD is greater than 10,000 meters, thus

$$HD = 10,000 \text{ meters}$$

For ERPG-1 = 3 mg/m³

$$HD = 6551 \sqrt{\frac{60.1}{3}}$$

$$HD = 29,321 \text{ meters}$$

HD is greater than 10,000 meters, thus

$$HD = 10,000 \text{ meters}$$

For ERPG-3 = 58 mg/m³

$$HD = 6551 \sqrt{\frac{60.1}{58}}$$

$$HD = 6,668 \text{ meters}$$

US/Brit Units (Equation 11B)

For ERPG-2 = 3 PPM

$$HD = 9243 \sqrt{\frac{AQ}{ERPG(MW)}}$$

$$HD = 9243 \sqrt{\frac{7967}{3(70.91)}}$$

$$HD = 56,525 \text{ feet}$$

HD is greater than 32,800 feet, thus

$$HD = 32,800 \text{ feet}$$

For ERPG-1 = 1 PPM

$$HD = 9243 \sqrt{\frac{7967}{1(70.91)}}$$

$$HD = 97,973 \text{ feet}$$

HD is greater than 32,800 feet, thus


$$HD = 32,800 \text{ feet}$$

For ERPG-3 = 20 PPM

$$HD = 9243 \sqrt{\frac{7967}{20(70.91)}}$$

$$HD = 21,907 \text{ feet}$$

CHEMICAL EXPOSURE INDEX FOR SELECTED CHEMICALS FOR RELEASES FROM A 2-INCH DIAMETER HOLE

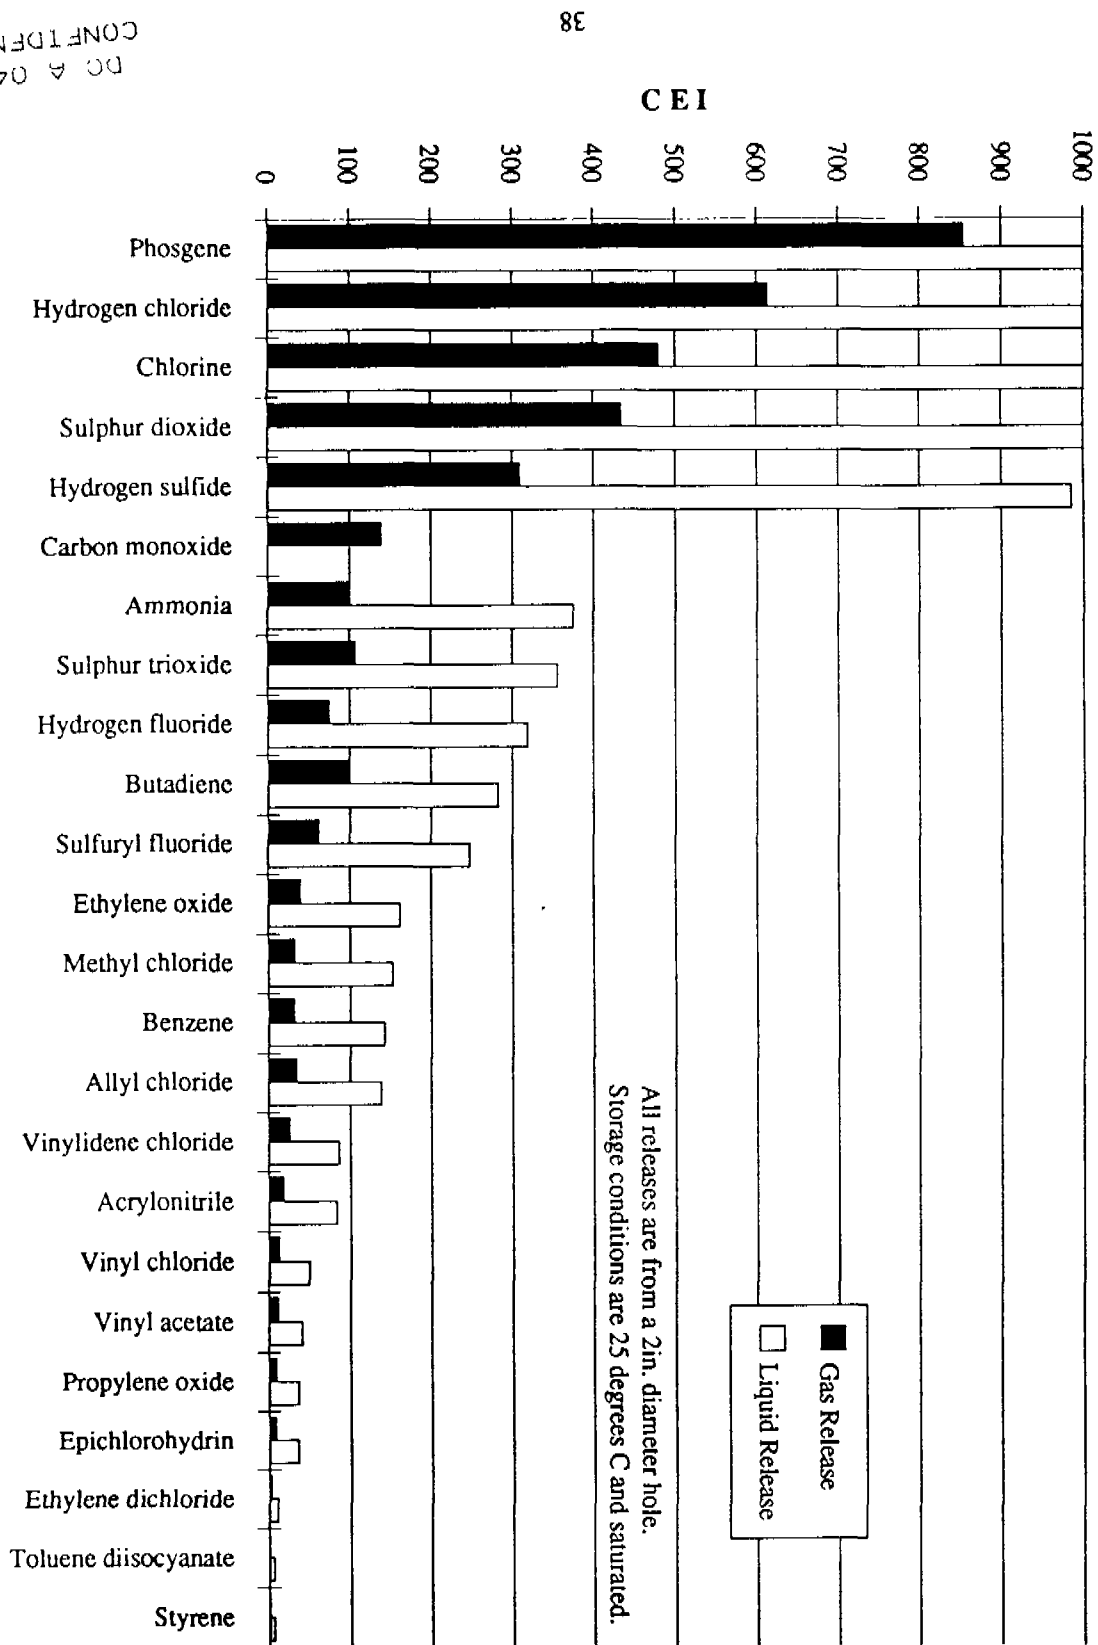

CORPORATE SAFETY, LOSS PREVENTION, AND SECURITY PUBLICATIONS

Minimum Requirements

Minimum Requirements for S/LP/S

June 1989

Guidelines

Guidelines for A Contractor Safety, Loss Prev., & Security Program, 2nd Edition	January 1992
Guidelines for Safety, Loss Prevention and Security Audits, 3rd Edition	November 1989
Guidelines for Office Safety, Loss Prevention and Security, 2nd Edition	April 1988
Guidelines for Emergency Planning	September 1985
Guidelines for A Motor Vehicle Accident Prevention Program, 3rd Edition	May 1992
Guidelines for Safety on Non-Dow Premises (Reprinted Oct. 1988)	December 1980
Guidelines for S/LP/S Reporting, 5th Edition	June 1990
Guidelines for Root Cause Incident Investigation	February 1993
Fire and Explosion Index Hazard Classification Guide, 6th Edition	May 1987
Guidelines for Public Warehouse Rating & Risk Analysis	January 1990
Distribution Emergency Response Process ²	1991
Air Travel - Policy and Guidelines (Reprinted Jan. 1989)	April 1980
Guidelines for Safe Sample Shipping, 3rd Edition	June 1992
Guidelines for A Reactive Chemicals Program, 2nd Edition	January 1987
Guidelines for Handling Dow Proprietary Information, 2nd Edition	March 1991
Guidelines for Personal Safety & Security at Hotels/Motels and Other Off-Premises Facilities (Reprinted Nov. 1988)	July 1981
Guidelines for Determining Dust Hazard Potential	October 1989
Guidelines For Assessing Potential Acquisitions, 2nd Edition	July 1992
Program Requirements For Hearing Conservation ¹	July 1992
Basic Requirements for an Industrial Hygiene Program ³	August 1987
Chemical Exposure Index Guide, 2nd Edition	September 1993
Computer Security Policies, Guidelines and Standards ⁶	June 1993
Chemical Hazard Engineering Guidelines	1993
Environmental Protection Guidelines for Operations	1990
Loss Prevention Self-Inspection Guideline	February 1991
Program Requirements for Respiratory Equipment ¹	October 1990
Program Requirements and Guidelines for Research and Development Facilities or Support Laboratories ³	May 1991
Guidelines for Burner Management Systems for Boilers and Process Furnaces	June 1993
Global Hazardous Materials Distribution Guidelines ⁴	March 1991
Guidelines for Management of Change	February 1992
Program Requirements for Personal Protective Equipment ¹	March 1992
Program Guidelines for Ergonomics and Ergonomic Program Guideline Resource Document ¹	September 1992
Guidelines for Chemical Labeling (for the U.S. Area) ⁵	May 1992
Guidelines for Confined Space Entry	June 1993

Practices

Loss Prevention Principles	Biannually
Loss Prevention Principles - Abstracts	Biannually
Operations Practices	April 1990

Others

Dow Safety Improvement System (DSIS)	October 1991
Dow Safety Improvement System User's Guide	April 1992
Fundamentals of Fire and Explosion - By Daniel R. Stull	
Topical Index of S&LP Standards & Specifications	October 1986
S&LP Audio/Visual Listing	September 1990
The Office Safety Handbook	1977
Security...In The Office & Data Handling Areas	1983

Publications Available from:

Corporate Safety, Loss Prevention, and Security
2030 Dow Center - Midland, MI (517) 636-3358 or -6821

¹Occupational Health Guide

²US Area Distribution Guide

³Industrial Hygiene Guide

⁴Corp. Product Dept. Guide

⁵Health and Environmental Sciences - CHEC

⁶Global Computer Security Resource Center-Freeport

DO A 046878
CONFIDENTIAL