

GL031594


Pigment 44.5%
 1. 84.5%
 Latex (Emulsion) 7.8%
 Bore and Solvent 7.7%



THE AMERICAN PAINT WORKS
 DIVISION
 THE GLIDDEN COMPANY
 * NEW ORLEANS, LOUISIANA *

EXTERIOR-INTERIOR
FLORENAMEL
 QUICK-DRYING
 861 DECK GRAY

Climate

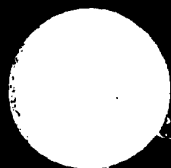

PAINTS - VARN

TIME

Permeated by a new inner
 in kitchen and bathroom
 in desired.
 Set the amount well before
 thoroughly before painting
 FOR USE ON INSIDE
 coat 10% with turpentine
 weather, then apply second
 FOR CEMENT SURFAC
 wash with a solution of turpentine
 turpentine to the gallon
 from the can.
 FORCE FLOORS AND S
 necessary and after comp
 leveling overnight dryin
 first coat of Permeamel.
 two or three days for the
 Covers from 500 to 600 sq

TIME TESTED

PAINTS • VARNISHES • LACQUERS • ENAMELS

FLORENAMEL

Florenamel is a new innovation in the line of floor coatings for interior or exterior use. While made especially for interior or porch floors, it is also an ideal finish for dados in kitchens and bathrooms. Florenamel is also adapted for finishing concrete floors, worn linoleum, woodwork, and furniture where a durable high gloss, washable surface is desired.

DIRECTIONS

Stir this enamel well before using.

Be sure surface is clean and dry. Remove all polishes, wax or grease by washing thoroughly with turpentine. When washing cement with zinc sulphate, allow to dry thoroughly before painting.

FOR USE ON INSIDE FLOORS, LINOLEUM AND FURNITURE—Reduce the first coat 10% with turpentine. Allow to dry overnight or 16 to 24 hours in cold damp weather, then apply second coat as it comes from the can.

FOR CEMENT SURFACES—First clean off all grease and dirt. If cement is new, wash with a solution of two pounds of zinc sulphate to a gallon of water—this will neutralize the alkali in the cement. Reduce the first coat of enamel with one quart of turpentine to the gallon of Florenamel. The second coat is to be applied as it comes from the can.

PORCH FLOORS AND STEPS—On surfaces previously painted a thorough cleaning is necessary and after complete drying, apply one or two coats if desirable of Florenamel allowing overnight drying at least between coats. On new or unpainted surfaces use Lastic-Seal as first or priming coat, follow with one or two coats of Florenamel. The first coat of Florenamel, if two are used, can be thinned 10% with Turpentine. Allow two or three days for Lastic-Seal to dry and overnight between coats of Florenamel. Covers from 500 to 600 square feet to the gallon depending on the surface.

53

GLD31595

