

however, is done automatically instead of by hand. The automatic cleaning and recoating of these filters is based on the principle that the viscous fluid itself will perform the cleaning function, thereby eliminating a separate washing agent. The dust collected by the filter thus is deposited finally in the bottom of the viscous fluid reservoir from where it may be removed by different methods, depending on the design of the filter.

There are three general types of automatic filters. They are differentiated from each other according to the process of self-cleaning and renewing of the viscous coating used by each type, as follows:

1. The filter medium has the form of an endless curtain suspended vertically, with its lower portion submerged in a viscous fluid reservoir. The curtain rotates slowly through this bath, thus performing the cleaning and recoating of the filter medium.
2. The filter screen is arranged in the form of shelves or cylinders, and the viscous fluid is flushed through all parts of the medium in a direction opposite to the air flow.
3. The filter medium is arranged vertically and is stationary. The viscous fluid is flushed from above over the medium, while the air flow is stopped.

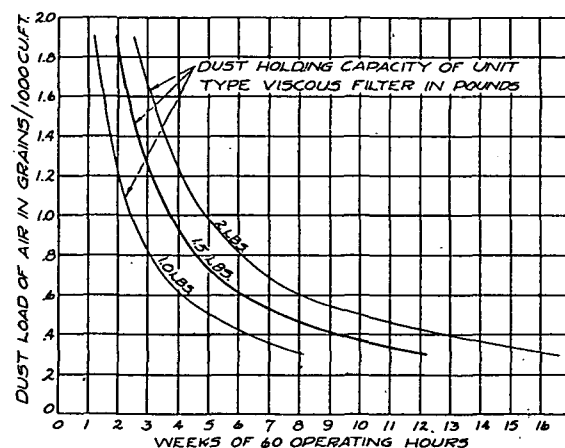


FIG. 4. MAINTENANCE CHART FOR UNIT TYPE VISCIOUS FILTERS

The washing and renewing process in automatic filters usually is intermittent. It is accomplished by an electric motor or by other motive power and is controlled by manual or by automatic timing devices. The operating cycle is of a predetermined frequency and should be so timed as to insure a constant static pressure drop across the filter. The customary resistance to air flow is $\frac{3}{8}$ -in. water gage at an air velocity of 500 fpm, measured at the filter entrance. Automatic viscous filters are made up in units which are delivered either fully assembled or in parts to be assembled at the point of installation.

DRY AIR FILTERS

Dry air filters, in which dust is impinged upon or filtered through screens made of felt, cloth, or cellulose, are available in various types. These filters require no adhesive liquid, but depend on the straining or screening action of the filtering medium. Because of the close texture

of the filtering media used in most of the dry filters, the surface velocity, or velocity of the air entering the media, ranges between 10 and 50 fpm, depending on the nature and texture of the fabric. This necessitates a relatively large screen surface, and the filter media are usually arranged in the form of pockets to bring the frontal area within customary space requirements.

As in viscous unit filters, an average constant resistance and air volume may be obtained by periodic reconditioning or renewal of the filter screens. Since some materials suitable for dry filtering media are affected considerably by moisture which tends to cause a rapid increase in resistance, they should be treated or processed to minimize the effect of changes in humidity.

Filters using felt and similar materials as filter media depend upon vacuum cleaning for reconditioning. A special nozzle, operated from a portable or stationary vacuum cleaner, is shaped to reach all parts of the filter pockets. Permanent filter media should be capable of withstanding repeated vacuum cleanings without loss in dust removal efficiency. While most dry filters are cleaned by replacing an inexpensive filter sheet, the useful life of these sheets often may be lengthened by vibrating or vacuum cleaning.

AIR FILTER INSTALLATIONS

The published performance data for all air filters are based on *straight through* unrestricted air flow. Filters should be installed so that the face area is at right angles to the air flow whenever possible. Eddy currents and dead air spaces should be avoided and air should be distributed uniformly over the entire filter surface, using baffles or diffusers if necessary.

The most important requirements of a satisfactory and efficiently operating air filter installation are:

1. The filter must be of ample size for the amount of air it is expected to handle. An overload of 10 to 15 per cent is regarded as the maximum allowable. When air volume is subject to increase, a larger filter should be installed.
2. The filter must be suited for the operating conditions, such as degree of air cleanliness required, amount of dust in the entering air, type of duty, allowable pressure drop, operating temperatures, and maintenance facilities.
3. The filter type should be the most economical for the specific application. The first cost of the installation should be balanced against depreciation as well as expense and convenience of maintenance.

The following recommendations apply to filters and washers installed with central fan systems:

1. Duct connections to and from the filter should change size or shape gradually to insure even air distribution over the entire filter area.
2. Sufficient space should be provided in front as well as behind the filter to make it accessible for inspection and service. A distance of two feet may be regarded as the minimum.
3. Access doors of convenient size should be provided in the sheet metal connections leading to and from the filters.
4. All doors on the clean air side should be lined with felt to prevent infiltration of unclean air. All connections and seams of the sheet metal ducts on the clean air side should be as air-tight as possible.