

APPLICATION
BASIC INSULATION
PIPE AND FITTINGS

URETHANE:

- G. 6. Field bent tube turns:
- 6.1 F.B.T.T. shall not be preformed.
 - 6.2 The line covering adjacent to the lower end of a vertical bend or to the near end, of one installed horizontally, shall be applied prior to the miters on the bend. See figure 38 A.
 - 6.3 The line covering shall be stopped at the starting point of the arc of the bend and the end shall be cut square to the pipe. See figure 38 A.
 - 6.4 The miters shall then be applied. The last one shall be stopped at the end of the arc and it shall be cut square to the straight pipe. See figure 38 B.
 - 6.5 Figures 38 A, B & C show the proper sequence of application of a F.B.T.T.

FIG. 38 A

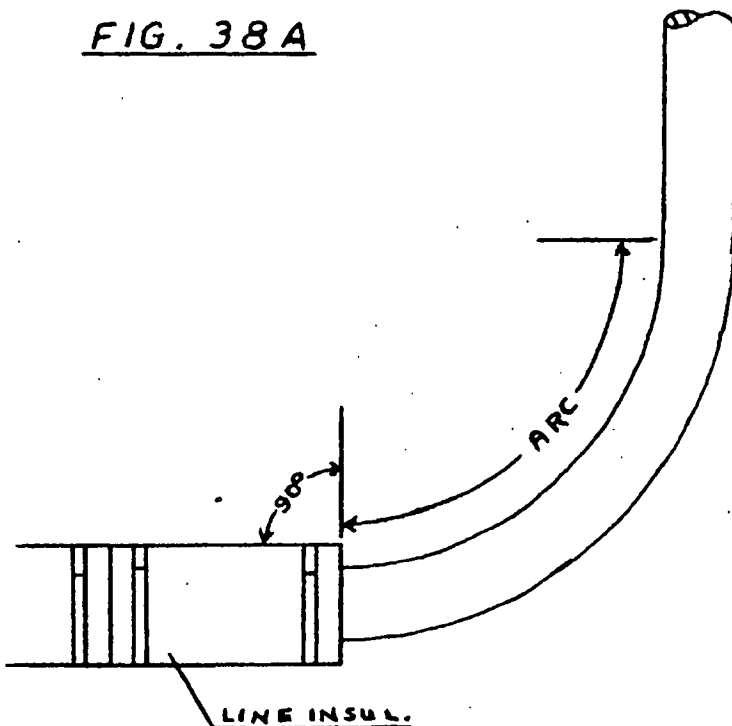


FIG. 38 B

