

STABILIZER BAR-190


3-5857

FRONT END STABILIZER BAR

FORD GALAXIE - - - - - 63-64

MERCURY - - - - - 63-64


A permanent bar that will maintain a steady steering at speeds between 60 & 70 mph.

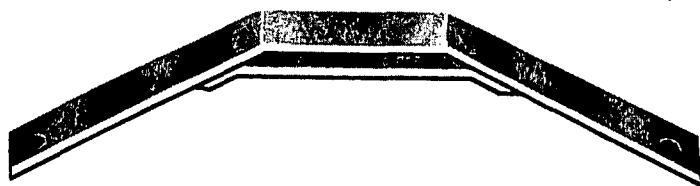

REDUCES ACTION ENOUGH TO ELIMINATE STEERING PROBLEMS WITH SEVERE BRAKING, QUICK STARTING AND STOPPING, DRIVING ON UNEVEN-TYPE ROADS, CHOPPY ROADS OR ROADS WITH SEVERE PAVEMENT SEAMS.

STEERING STABILIZER-190

- A MONEY SAVER NECESSITY FOR ALL CARS -

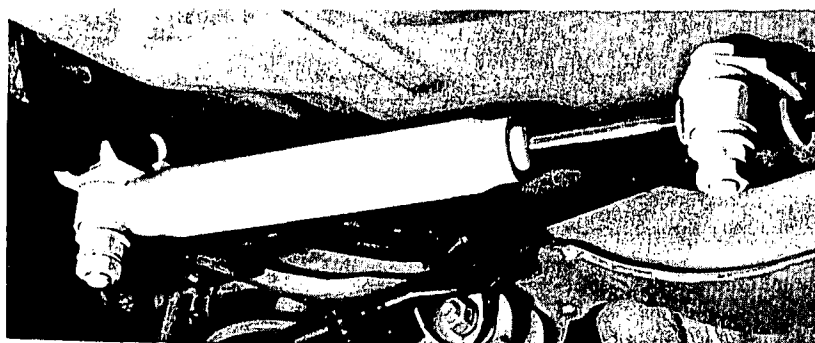

- Hydraulic cylinder and installation kit gives steering assist in most systems.
- Reduce wear and tear and maintenance costs on tires to a minimum.
- Eliminate road weave, shimmys, vibrations.
- Give steering control and comfort.
- Simple installation - can be readily installed or removed.

PASSENGER CARS

Car	Years	Models	Hydraulic Cylinder	Installation Kit
BUICK SPECIAL	64-67	All	3-5991	3-5947
CHECKER	60-64	All Cabs & Limosines	3-5992	3-5951
CHEVROLET (See Corvair, Corvette)				
	65-67	All (Ex. Chevy II, Chevelle)	3-5991	3-5957
	64-67	Chevelle & El Camino	3-5991	3-5947
	62-67	Chevy II	3-5991	3-5948
	58-64	All w/Power Steering (Ex. Chevy II, Chevelle)	3-5992	3-5952
	58-64	All w/o Power Steering (Ex. Chevy II, Chevelle)	3-5991	3-5947
	55-57	All	3-5992	3-5952
COMET	62-67	All (Ex. Power Steering)	3-5991	3-5952
CORVAIR	60-67	All	3-5991	3-5947
CORVETTE	63-67	All	3-5992	3-5963
DODGE	1967	Coronet	3-5991	3-5955
	65-67	Polara	3-5992	3-5959
	62-66	All & Dart (Ex. '65-'66 Polara & Coronet)	3-5991	3-5955
	60-61	Dart	3-5991	3-5955
	57-61	All w/6 Cyl.	3-5992	3-5954
F85	64-67	All	3-5991	3-5947

Replacement Parts