

APPLICATION
BASIC INSULATION
PIPE AND FITTINGS

URETHANE:

- F. 7.5 If possible, the line insulation shall be applied with no butt joint over the saddle as shown in figures 28 A & B.

FIG. 28 A — ISOMETRIC


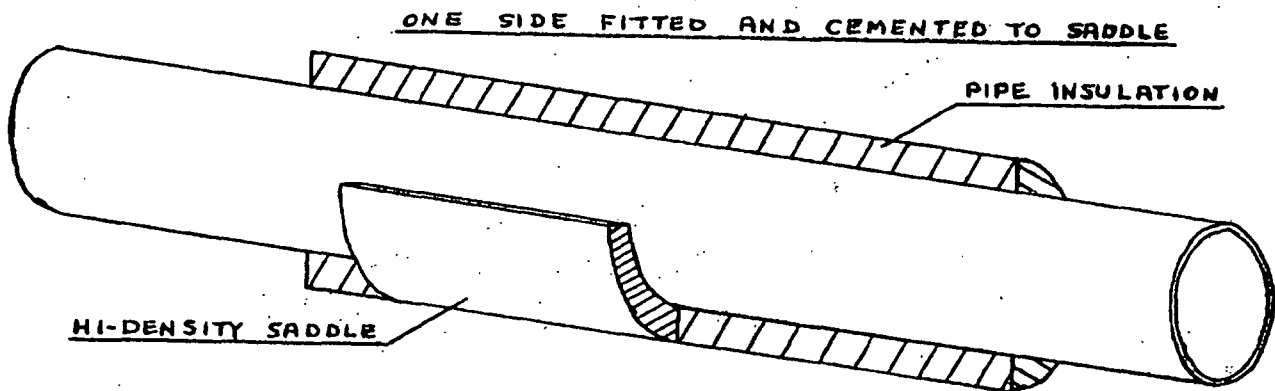


FIG. 28 B — ISOMETRIC

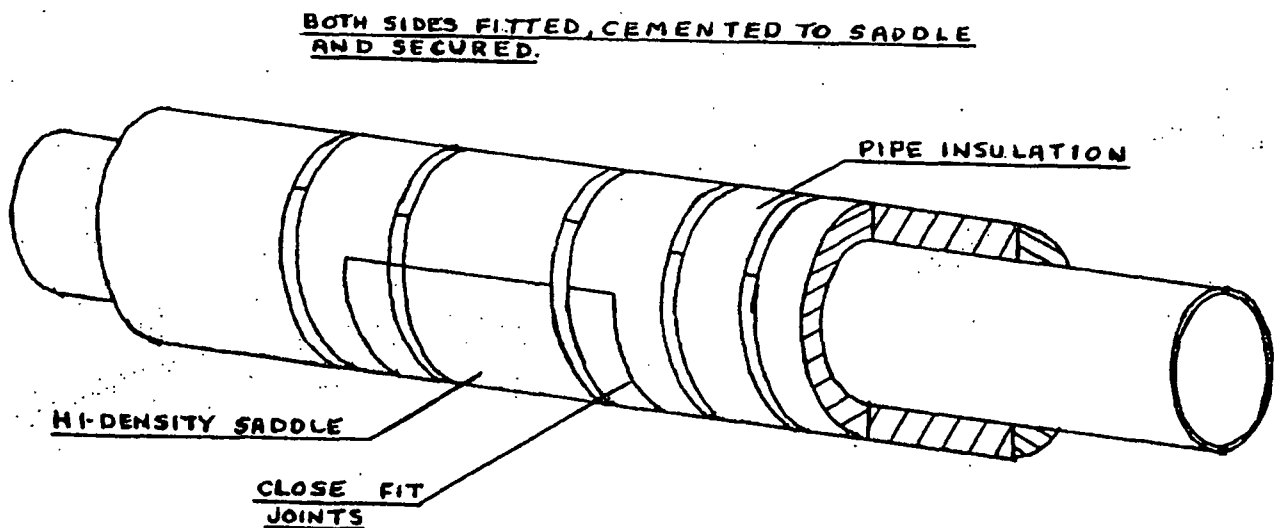

- 7.6 The line insulation shall be fitted closely to and cemented to the saddle. It is imperative that the joint surfaces make full contact.