

D.L. APPLICATION

- 3.1c This sequence is typical of all fitted and preformed ell covers.

FIG. 34 B — 90° S.R. ELL COVER

STEP 2

Ell cover is applied and made secure and the lace wires "W" are put on.

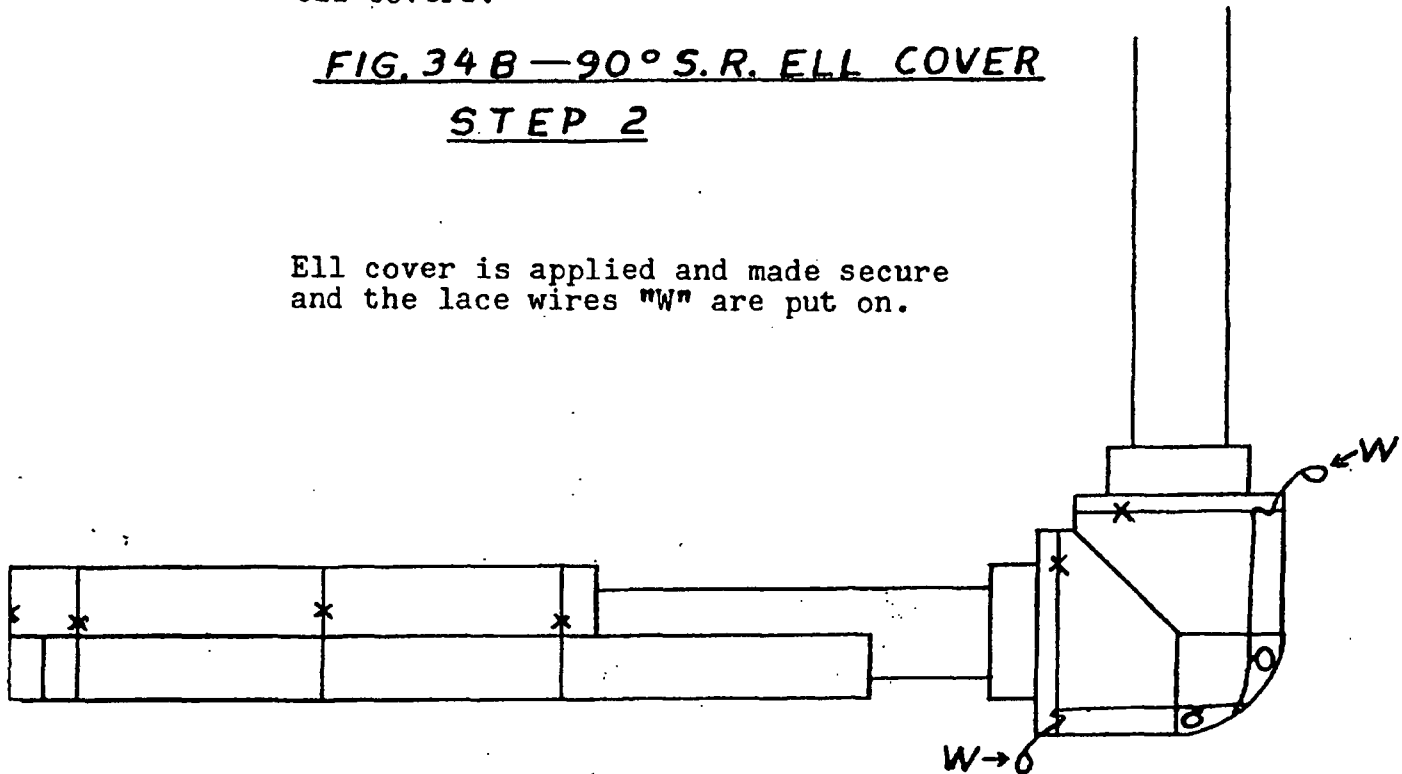


FIG. 34 C — 90° S.R. ELL COVER

STEP 3

1st layer line covering is run up to the near side of the ell cover.

