

VALVE PACKING (Cont.)-068

APPLICATION OF VALVE PACKING FOR PASSENGER CARS (CONT.)


Car & Years	Models	Part No.	Car & Years	Models	Part No.
PACKARD			STUDEBAKER		
57-58	All	3-4926	61-64	8 & 6 Cyl.	3-4926
55-56	All V-8	3-4922	53-60	All Champion	3-4921
27-54	All	3-4926	51-60	8 Cyl. (Ex. 56J)	3-4926
PLYMOUTH			1956	8 Cyl. 56J	3-4927
33-59	All 6 Cyl.	3-4922	29-50	All (Ex. Champ.)	3-4926
PONTIAC			WILLYS		
61-65	Tempest	3-4926	51-56	685, Ace and Comet	3-4927
55-65	All 8 Cyl.	3-4926	51-55	6-73, 6-74	3-4926
33-54	All	3-4921	33-55	All 4 Cyl.	3-4927
RAMBLER					
50-65	6 Cyl.	3-4922			

HOW TO SELECT THE PROPER VALVE PACKING

The proper Valve Packing for all cars and motors can quickly be ascertained by referring to the illustration and tables illustrated below. It is only necessary to check the valve stem diameter (2), and the depth of the valve throat chamber (1). When checking all intake throat chambers, it is important that the depths be the same.

After the packing has been installed and the valves have been inserted — double check to be sure valves close properly without any extra pressure. Installation instructions in each box.

OBTAIN DEPTH OF THROAT (1) AND DIAMETER OF VALVE STEM (2)
THEN SELECT VALVE PACKING FROM THIS TABLE.

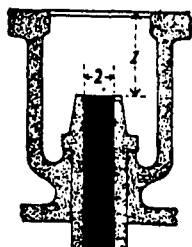

Depth of Throat Dimension (1)	VALVE STEM DIAMETER		
	$\frac{5}{16}$	$1\frac{1}{32}$	$\frac{3}{8}$
1" to $1\frac{1}{4}$ "	3-4921	3-4922	3-4924
$1\frac{5}{16}$ " to $1\frac{7}{8}$ "		3-4926	3-4927

NOTE: WHEN NECESSARY TO OBTAIN CLEARANCE FOR PACKING ON SOME SPECIAL MOTORS, CUT TOP VALVE GUIDE DOWN ABOUT $\frac{1}{16}$ " UNTIL VALVE CLOSSES PROPERLY.

VALVE OIL SEALS-068

REFER TO BALKAMP RUBBER PRODUCTS CATALOG