


180-SHOCK ABSORBER ANCHOR PLATE REPAIR KIT



**No. 3-4518
REPAIR KIT**

Contains: Self-threading Sleeve Nut
Steel Washer
2 Rubber Grommets

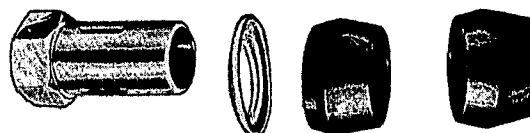

An Inexpensive Way to Make a Fast, Reliable
Repair to Any Shock Absorber Anchor Plate
with 5/8" Dia. Stud.

Repairs
Them
Like
This →

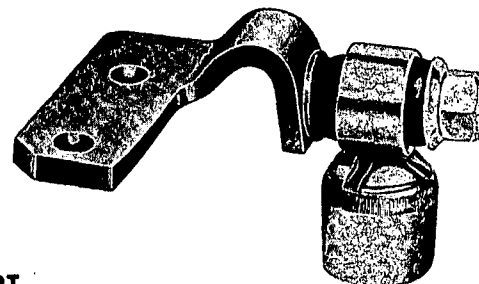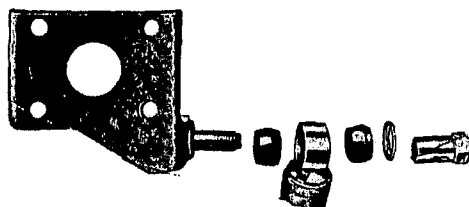

APPLICATION CHART

Car & Years	Models	Part No.	Car & Years	Models	Part No.
BUICK	54-57 All	3-4518	DESOTO	50-61 All	3-4516
	1952 50	3-4518			
	1951 50-70	3-4518	DODGE	50-67 All	3-4516
	1950 All	3-4518			
CHEVROLET PASS.	1964 Chevelle	3-4518	IMPERIAL	50-61 All	3-4516
	58-64 Corvette	3-4518			
	49-57 All	3-4518	LINCOLN	64-65 All	3-4516
CHEVROLET TRUCK	54-64 1, 1-1/2 Ton	3-4518			
	55-56 3/4 Ton	3-4518	PLYMOUTH	50-67 All	3-4516
	55-56 1/2 Ton (2nd Series)	3-4518			
	50-54 1/2 Ton	3-4516	RAMBLER	52-67 All	3-4518
CHRYSLER	50-67 All	3-4516	VALIANT	60-67 All	3-4516

180-SHOCK ABSORBER GROMMETS

REFER TO BALKAMP RUBBER PRODUCTS CATALOG

180-SHOCK ABSORBER BUSHING KITS

REFER TO BALKAMP RUBBER PRODUCTS CATALOG

190-MOTOR MOUNTINGS AND BOLT KITS

REFER TO BALKAMP RUBBER PRODUCTS CATALOG

190-STABILIZER LINK BUSHINGS

REFER TO BALKAMP RUBBER PRODUCTS CATALOG

190-ENGINE STEADY REST PAD

REFER TO BALKAMP RUBBER PRODUCTS CATALOG

Replacement Parts