



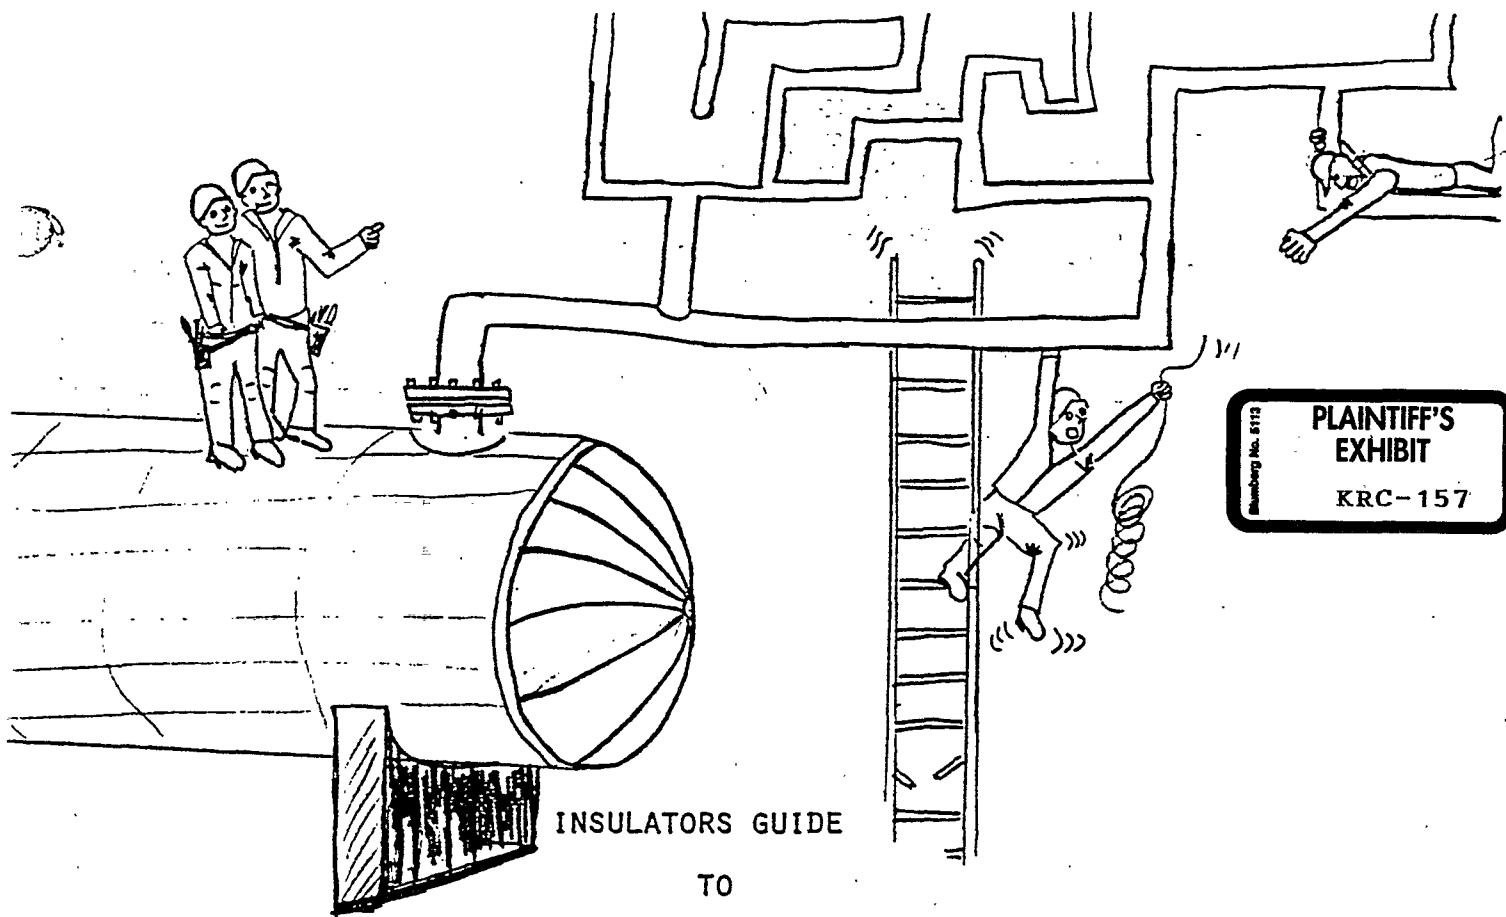

Shawburg No. 8112
**PLAINTIFF'S
EXHIBIT**
KRC-157

INSULATORS GUIDE
TO
BASIC FITTINGS

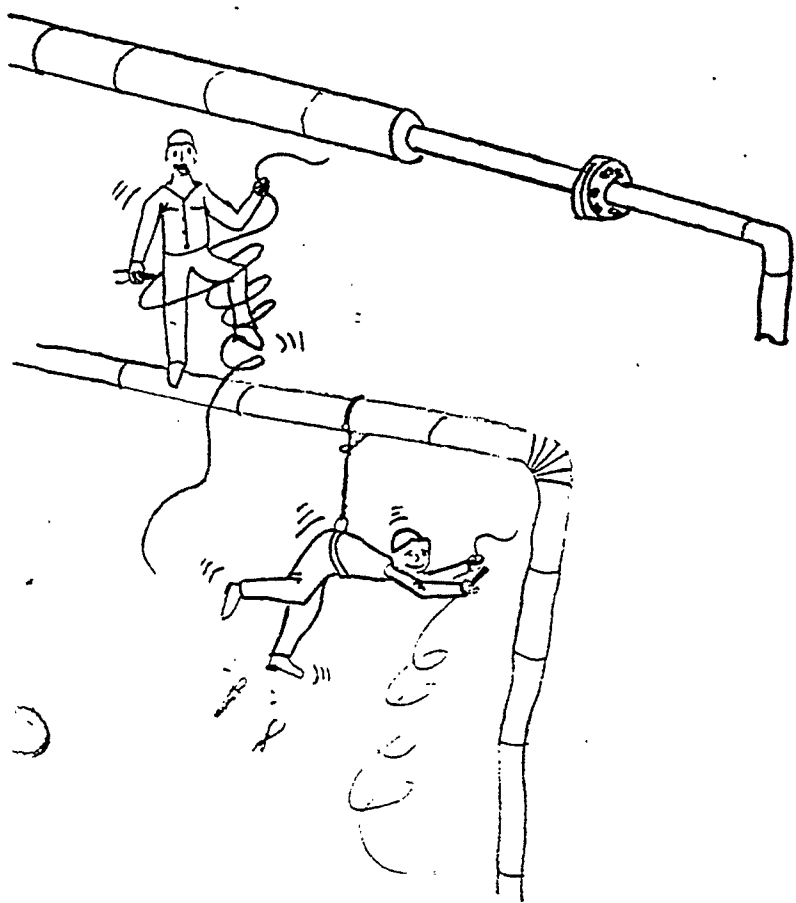



DARCY HYDRICK
MARGARET WAYLAND
SPRING 1991

TABLE OF CONTENTS

CAPS.....	1-2 PGS.
BEVEL.....	3-5 PGS.
TEE.....	6-9 PGS.
SADDLE.....	10-12 PGS.
PIPE COVER 90°.....	13-14 PGS.
METAL GORES.....	15-16 PGS.
FUNNEL.....	17-18 PGS.
GRAY'S.....	19 PG.
GRAY 90°.....	20-21 PGS.
NOTES	

NOT RESPONSIBLE FOR ERRORS. DAH




Lap

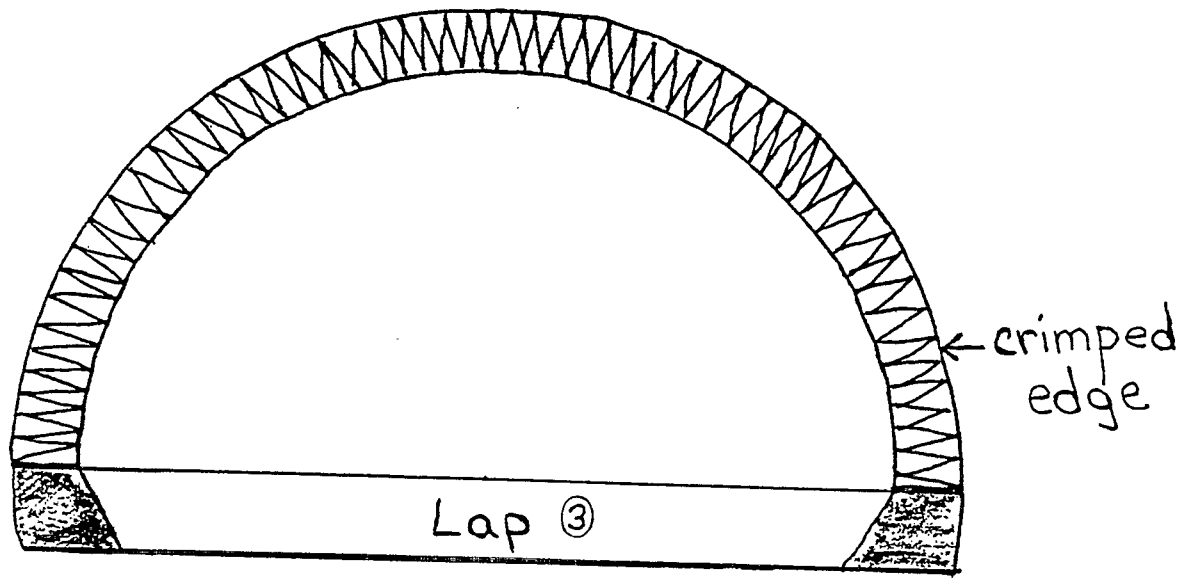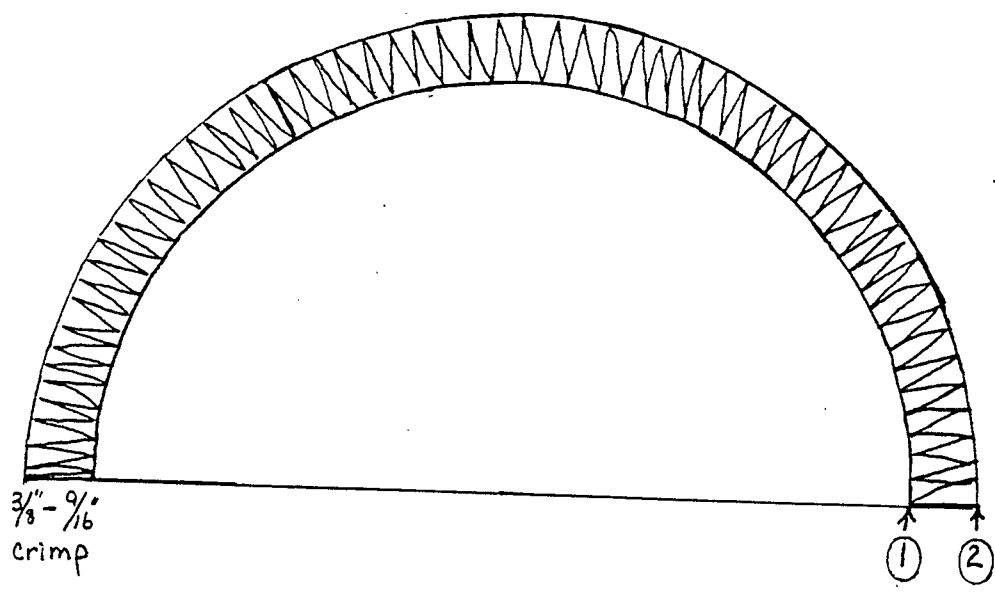


shaded area
cut away
on
Lap

Bevel


①

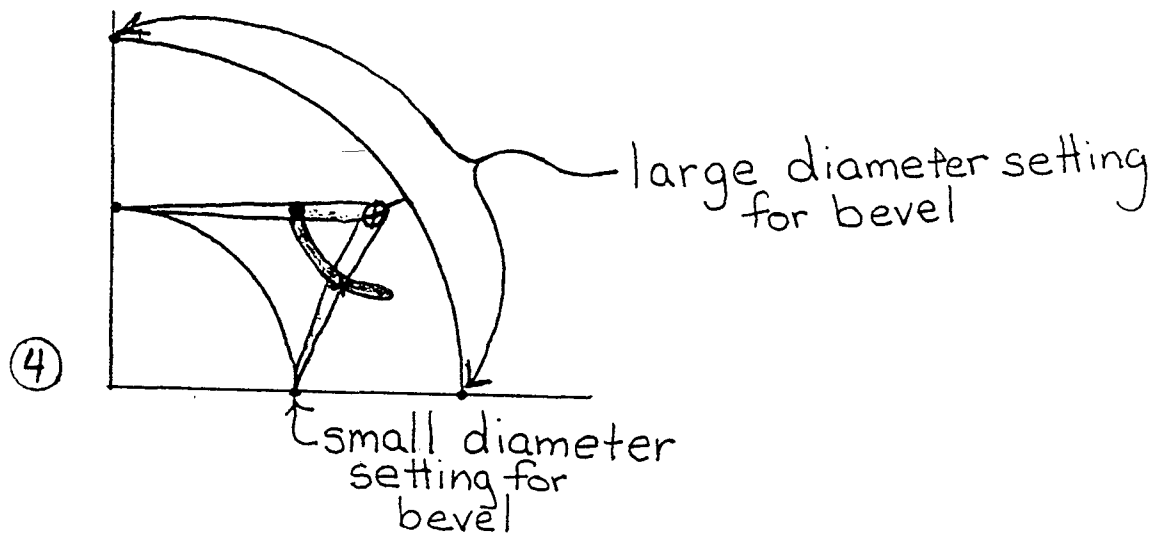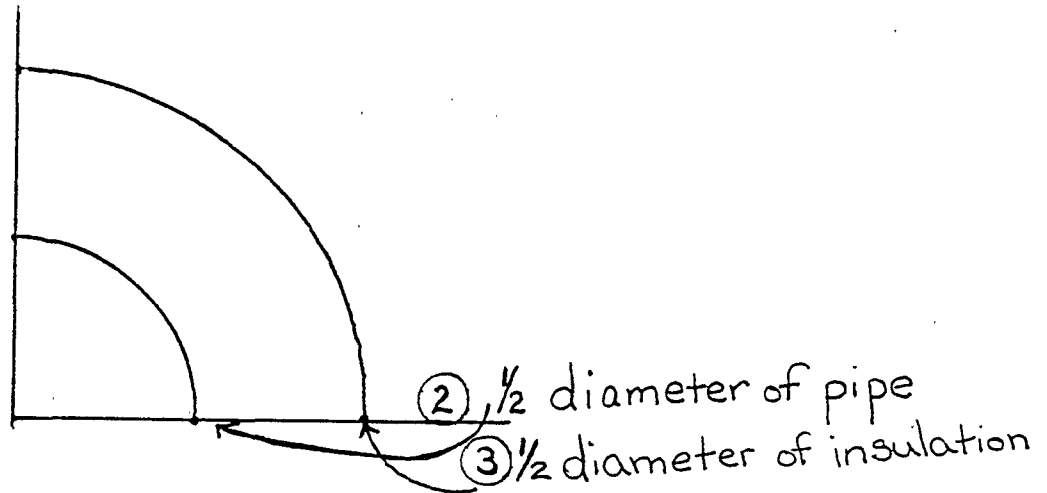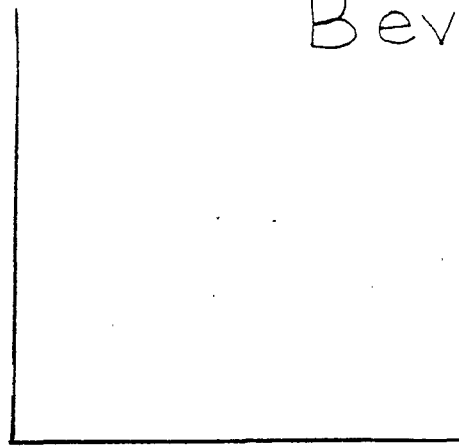

Tee

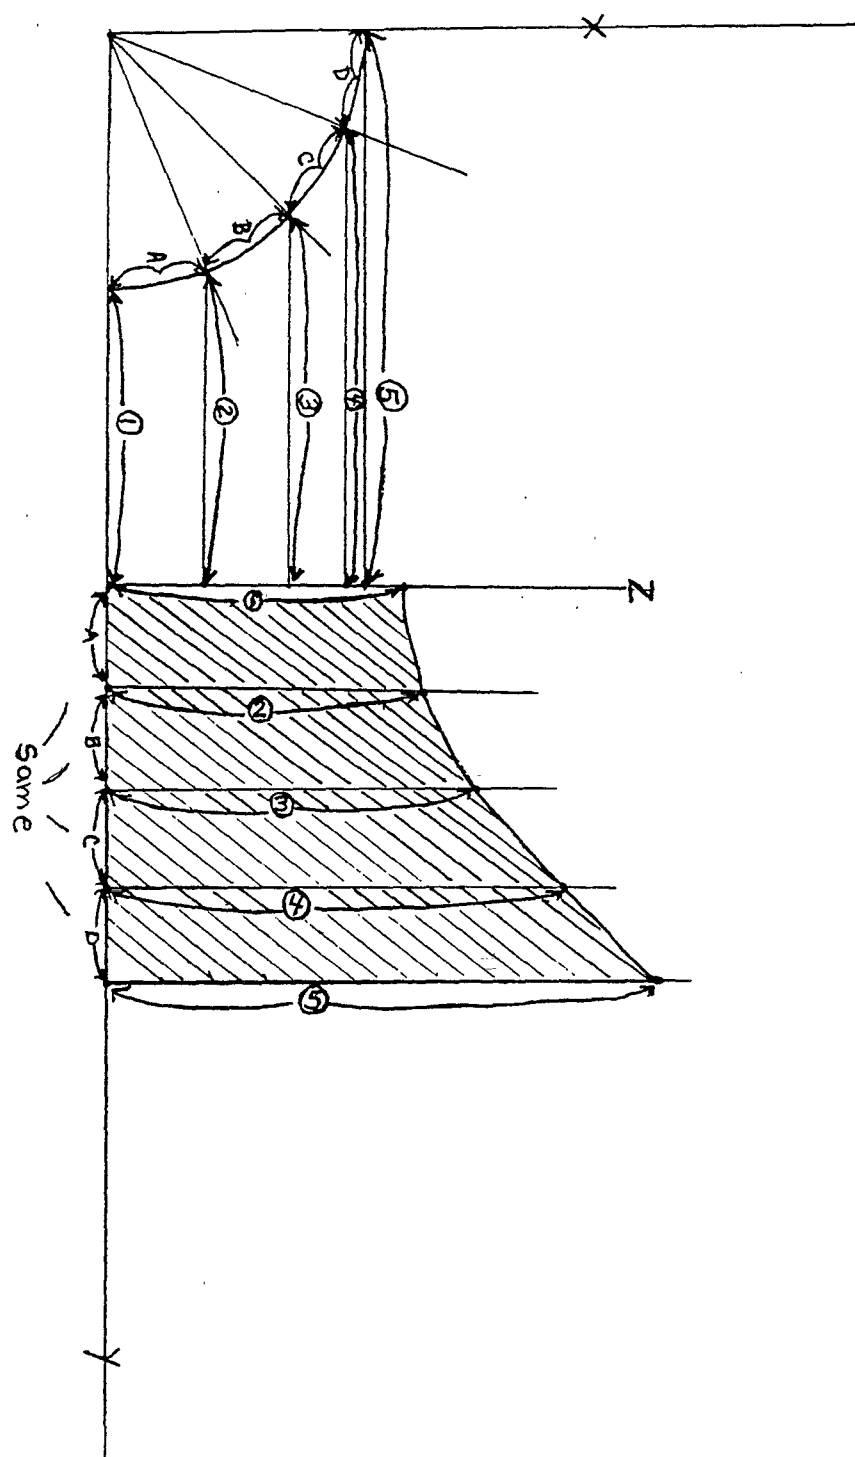


Tee Bonnet

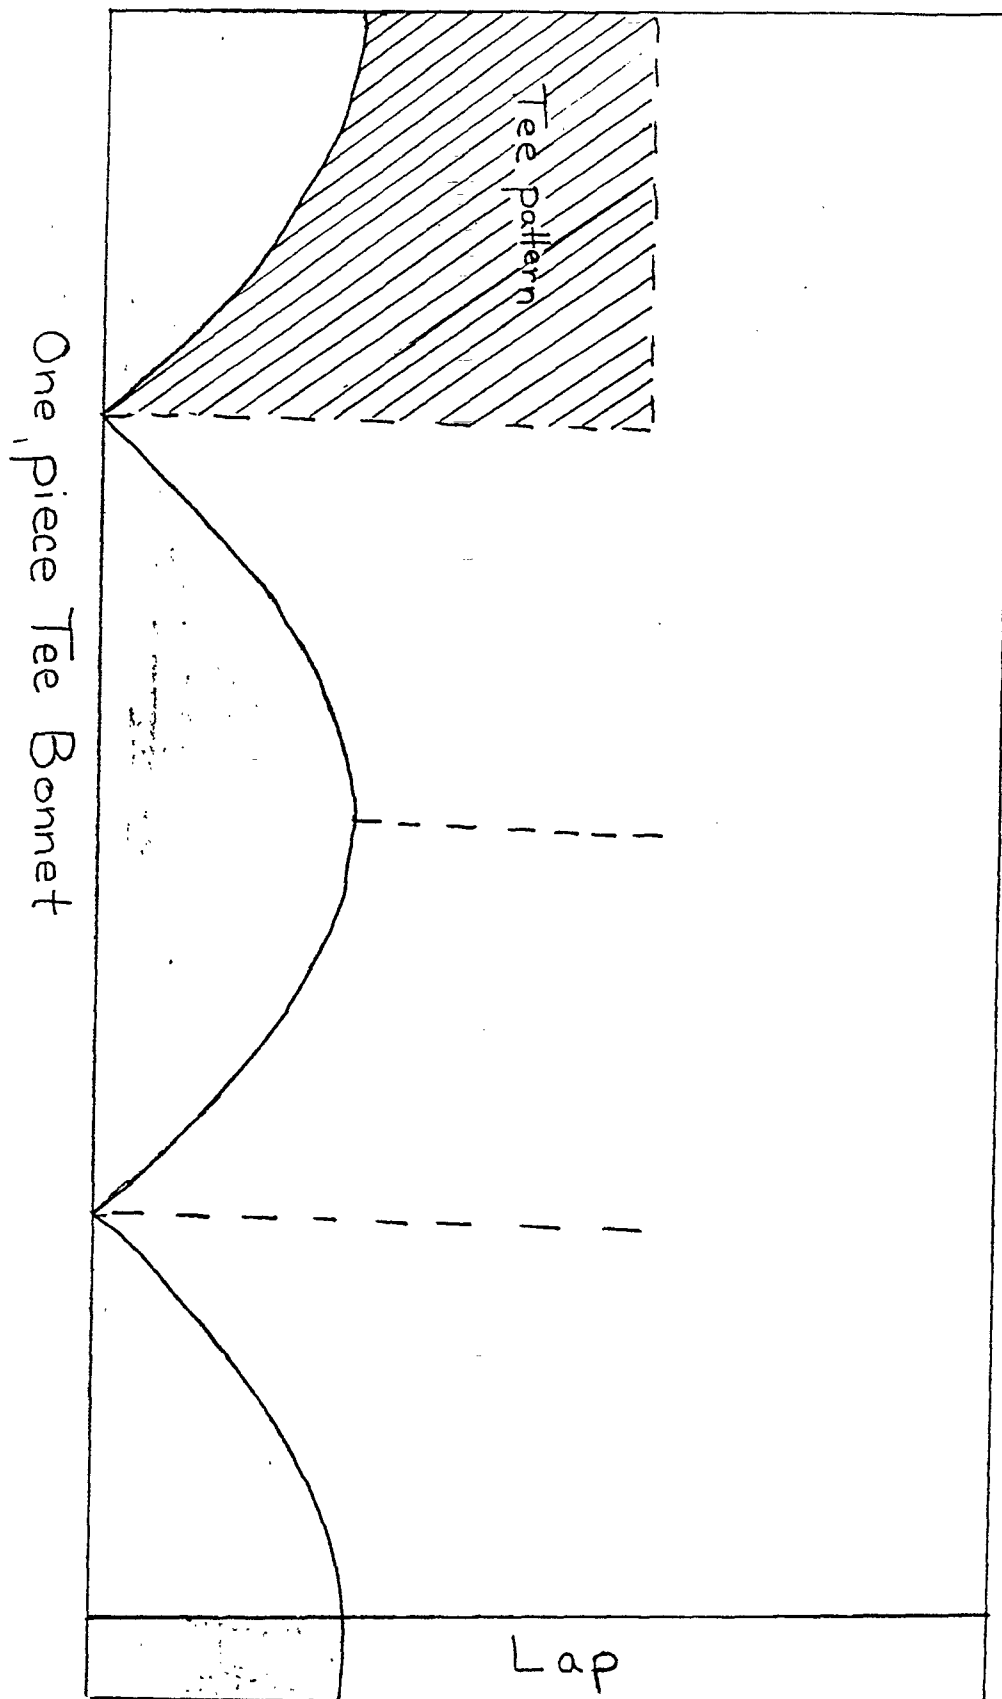


K 014879

saddle

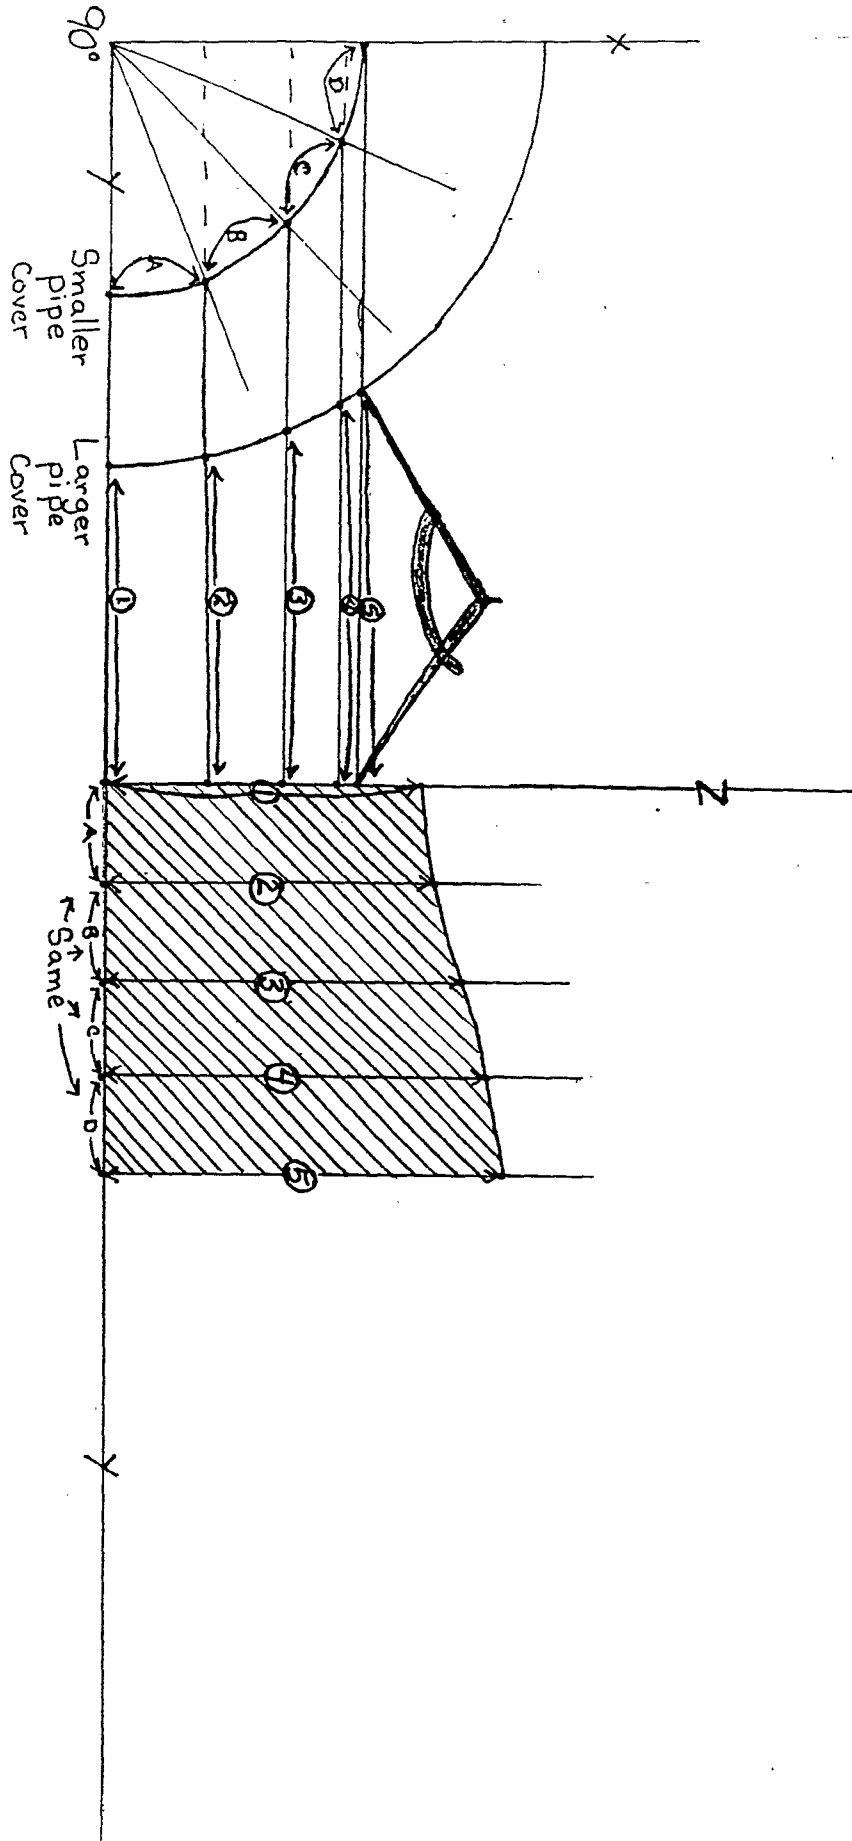


Pipe Cover 90°

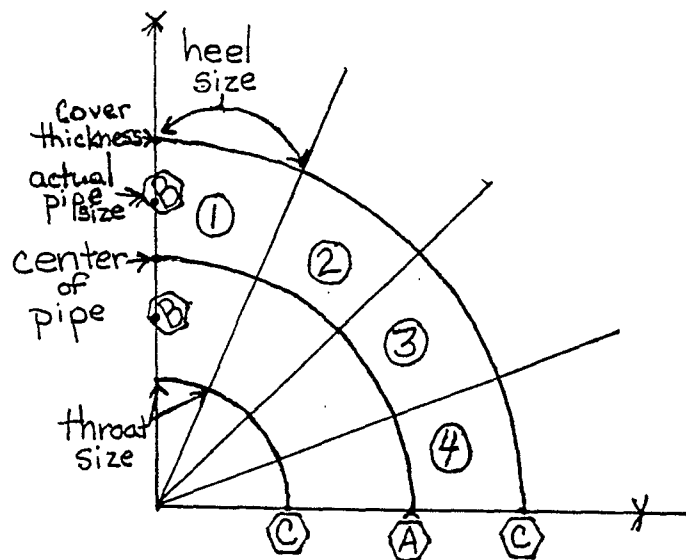

Long radius 90° - 1 1/2 times pipe size.

Short radius 90° - 1 times pipe size.

Metal Gore

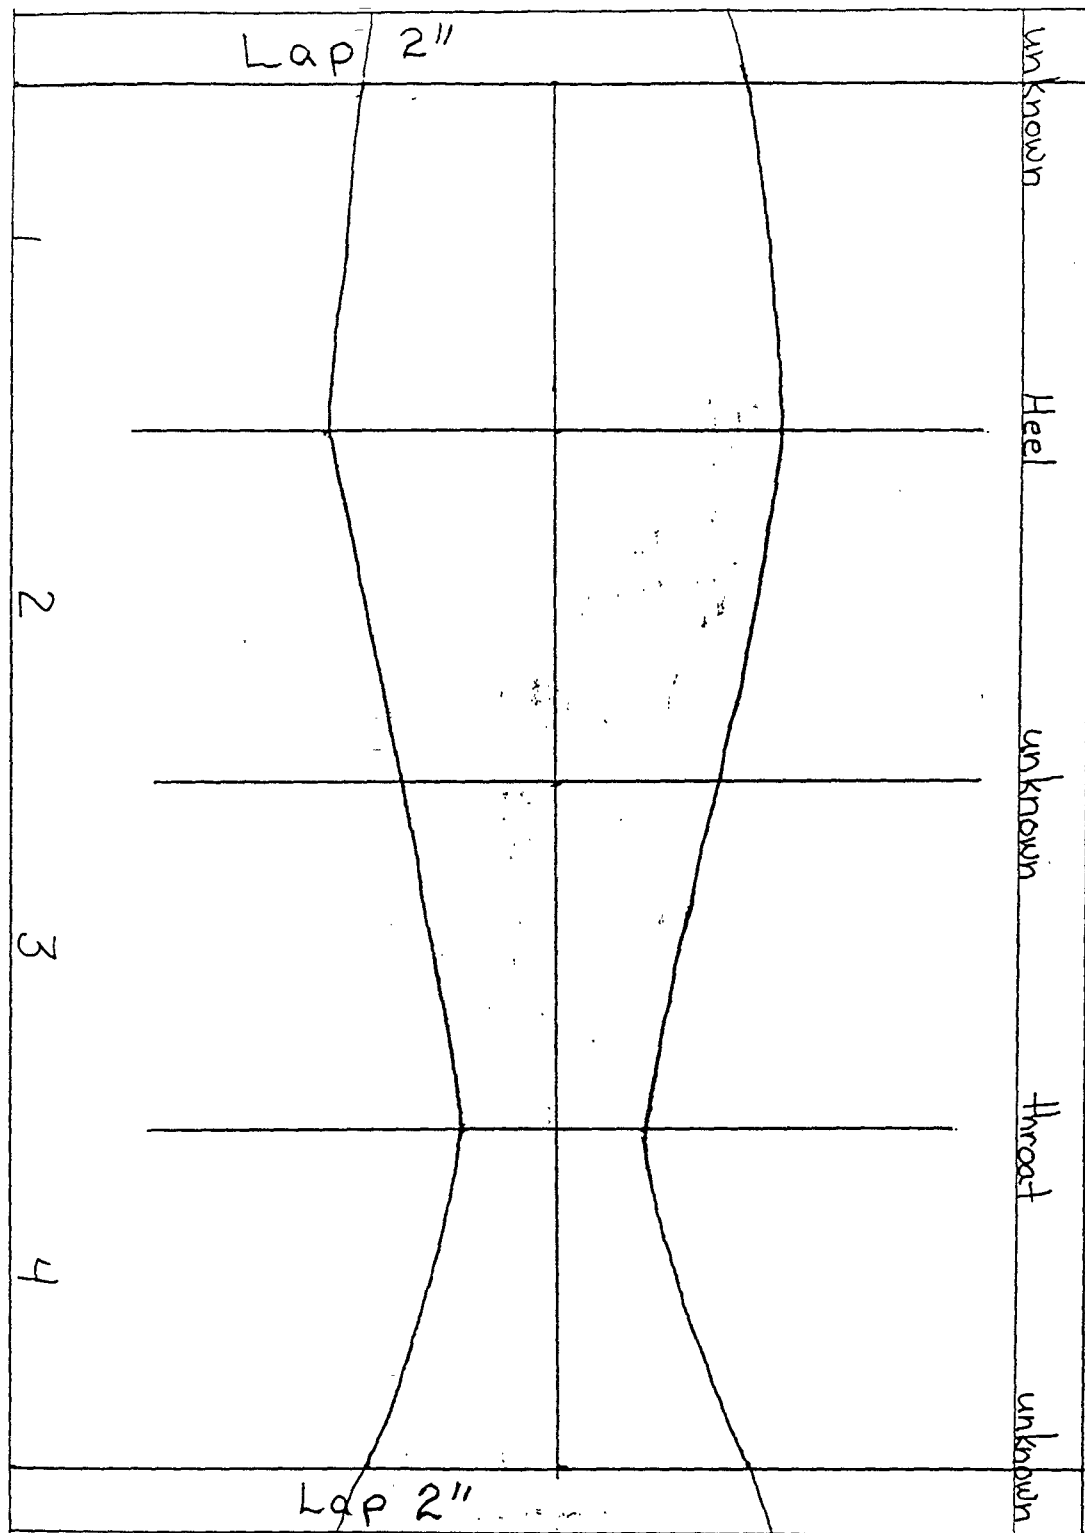


cut for
gore

Funnel



cut out
to make
funnel

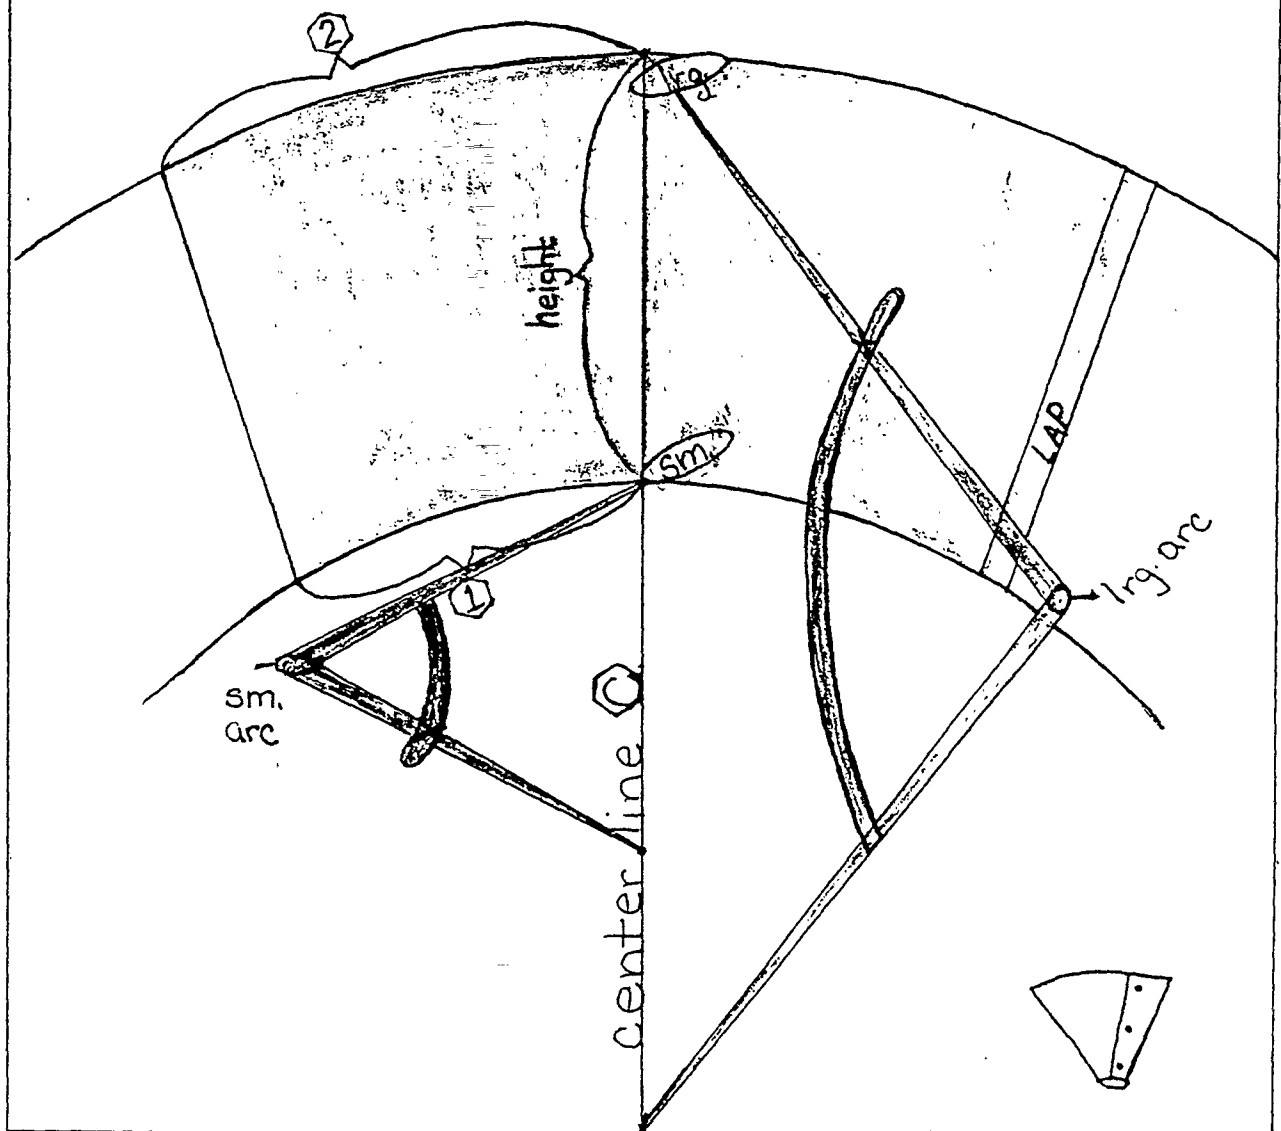

GRAY'S


MEASURE THE HEIGHT AND CIRCUMFERENCE OF OBJECT TO BE COVERED,
YOU WILL HAVE TO ADD 6 INCHES (4" ON SMALL COVER) TO CIRCUMFERENCE,
WITH THESE MEASUREMENTS YOU CAN NOW CUT THE TEMP MAT.

ADD 2" ALL THE WAY AROUND THE TEMP MAT WHEN YOU GO TO CUT THE
GRAY AND WIRE.


MARK ANY OTHER CUTS AND YOUR READY TO PUT YOUR COVER TOGETHER.

NOTE: IF MAKING COVERS THICKER THAN 1" YOU MAY NEED TO GO WITH
CIRCUMFERENCES ON CHART, DO NOT ADD ANYTHING IF YOU USE
THESE DIMENSIONS.


Gray 70 Pattern

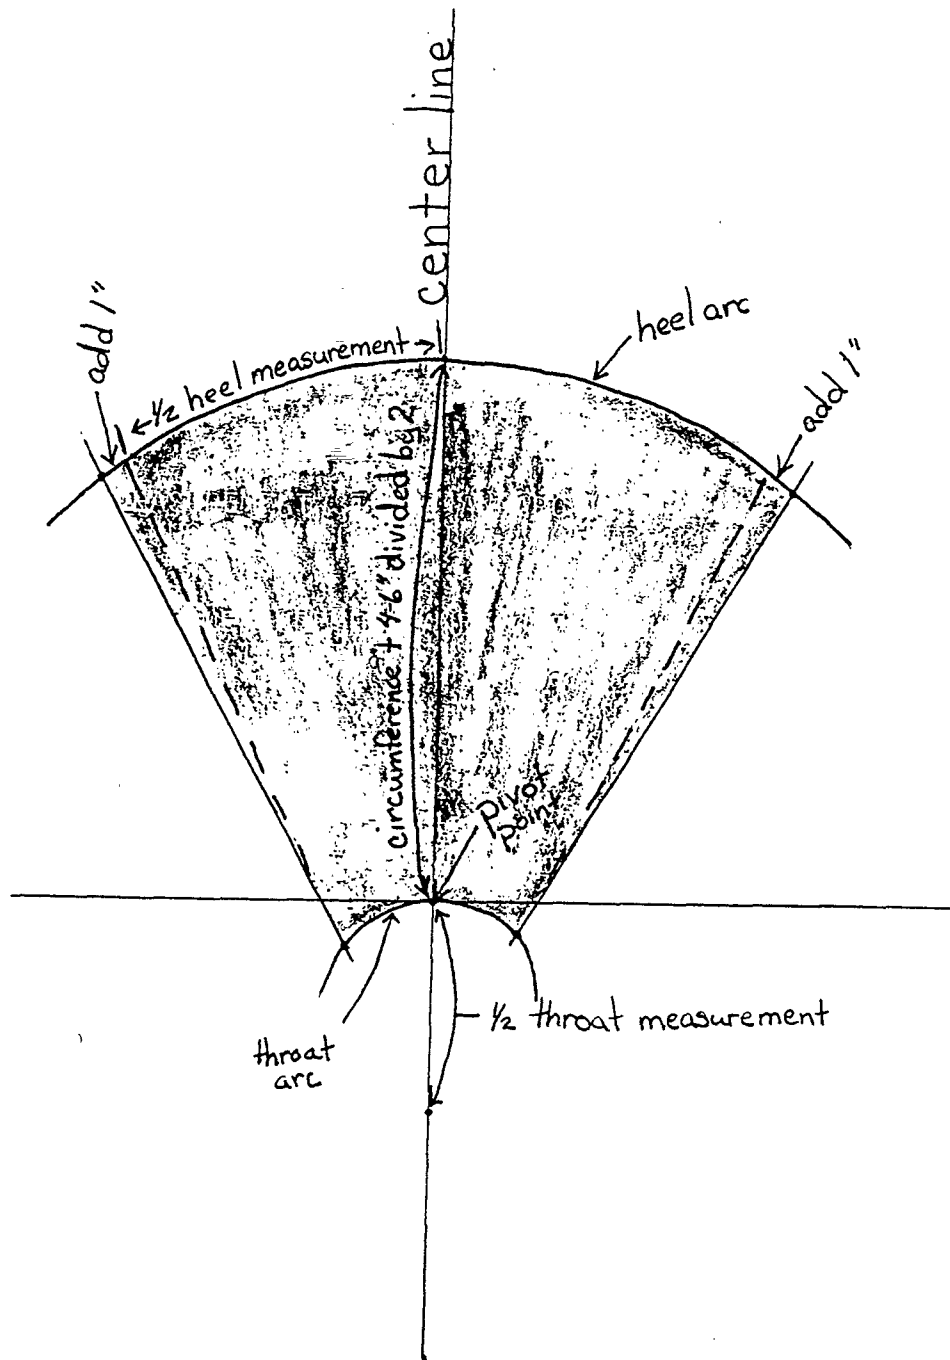


K 014891

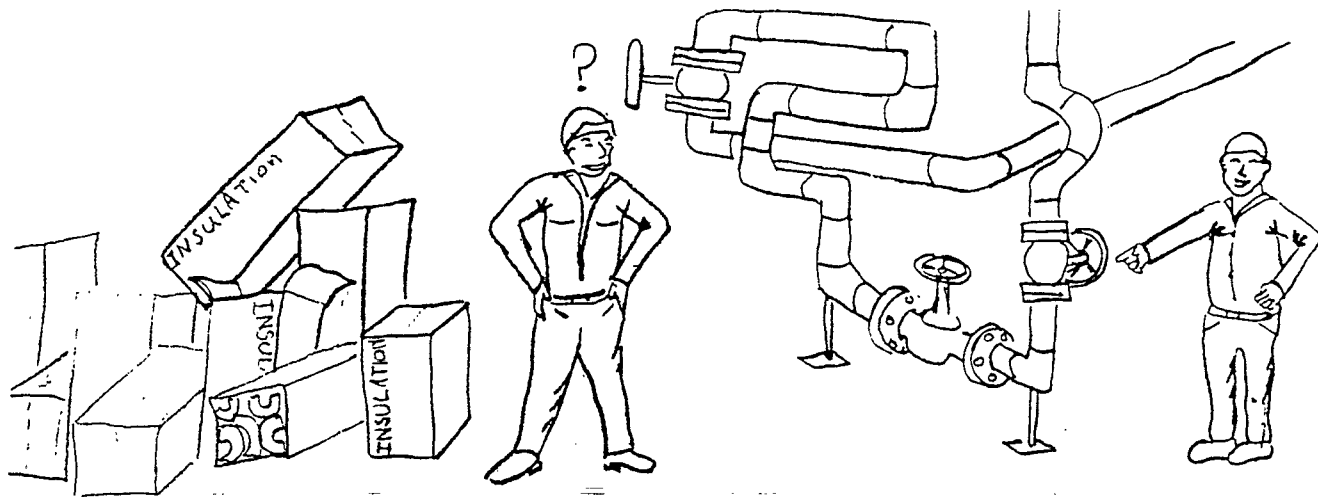


THE END

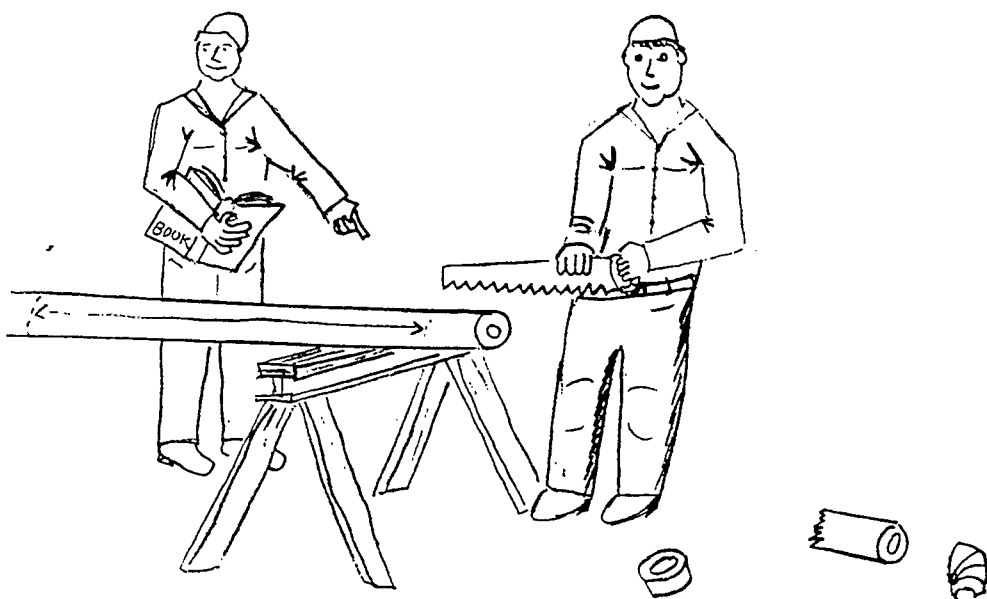

K 014892

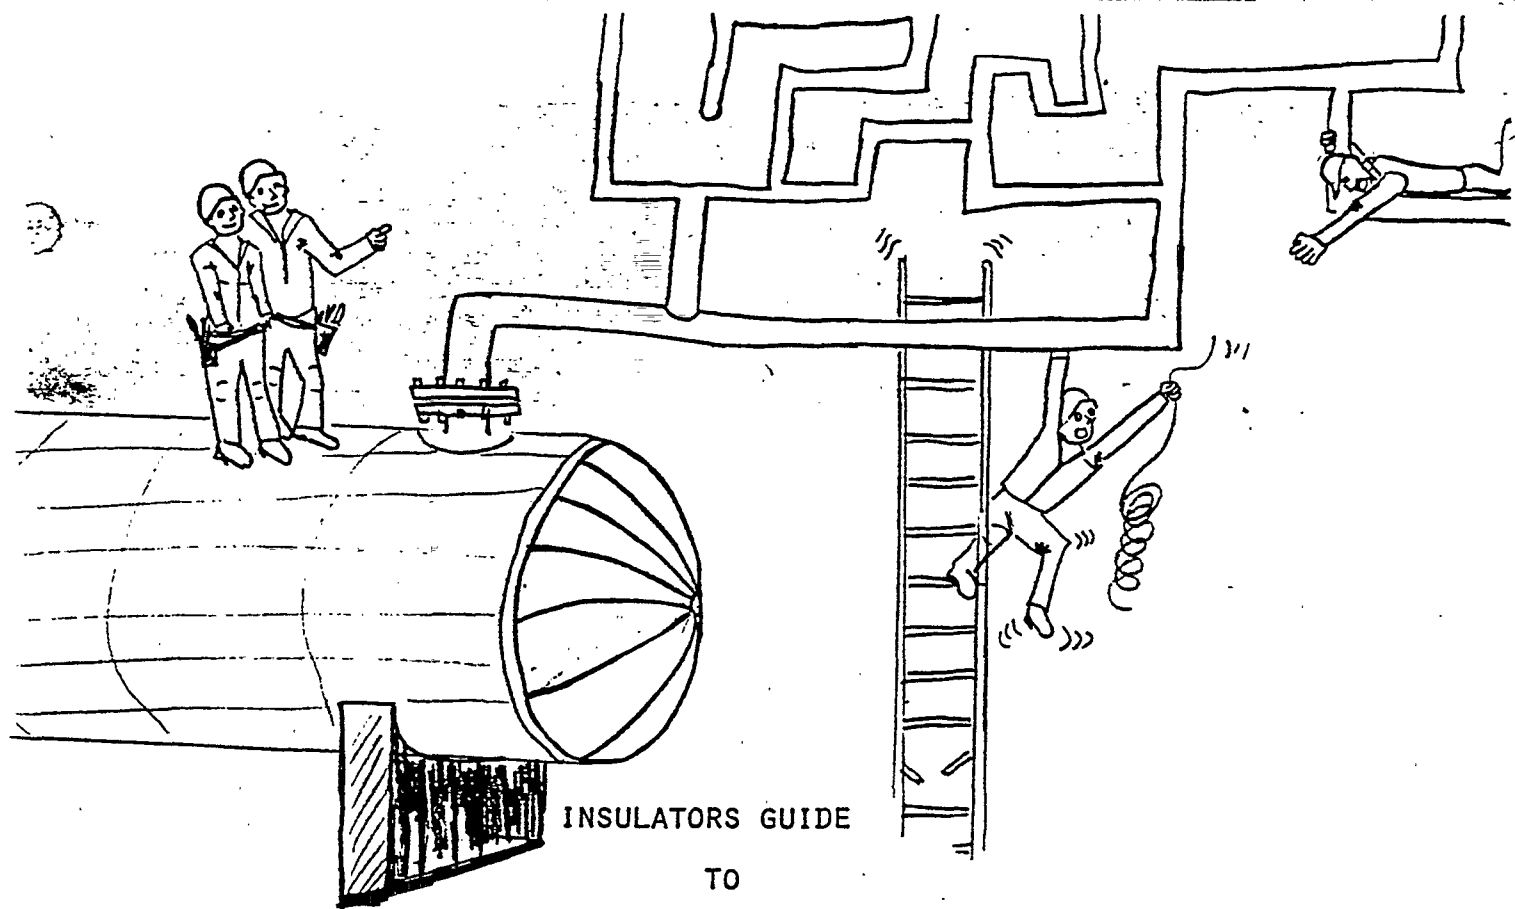

INSULATORS GUIDE
TO
BASIC FITTINGS

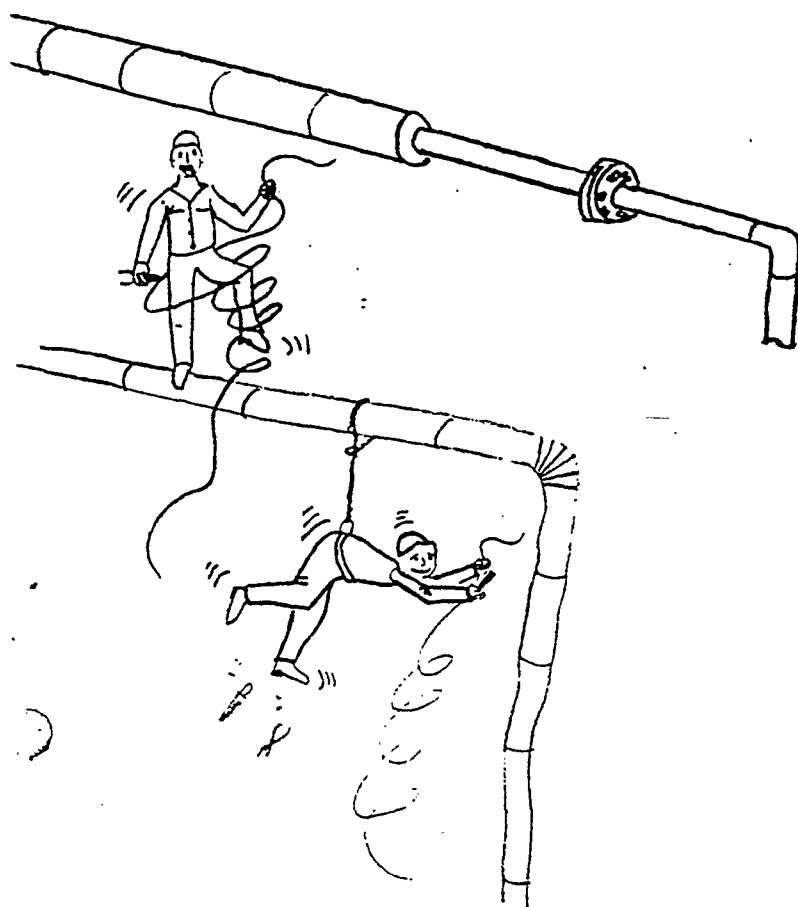

DARCY HYDRICK
MARGARET WAYLAND
SPRING 1991



K 014893

TABLE OF CONTENTS

CAPS.....	1-2 PGS.
BEVEL.....	3-5 PGS.
TEE.....	6-9 PGS.
SADDLE.....	10-12 PGS.
PIPE COVER 90°.....	13-14 PGS.
METAL GORES.....	15-16 PGS.
FUNNEL.....	17-18 PGS.
GRAY'S.....	19 PG.
GRAY 90°.....	20-21 PGS.
NOTES	

NOT RESPONSIBLE FOR ERRORS. DAH




Lap

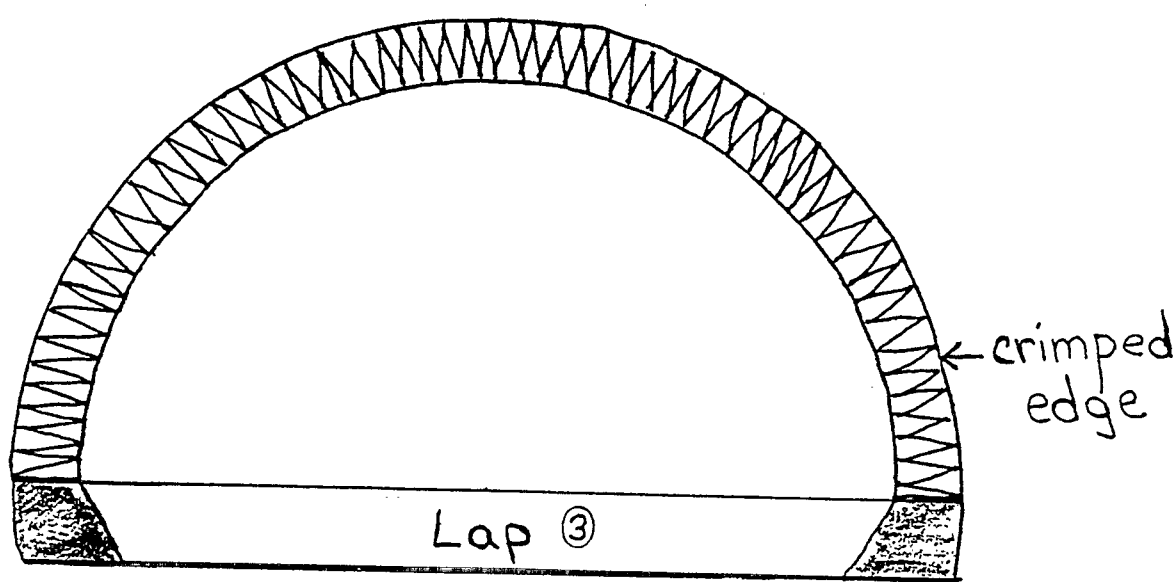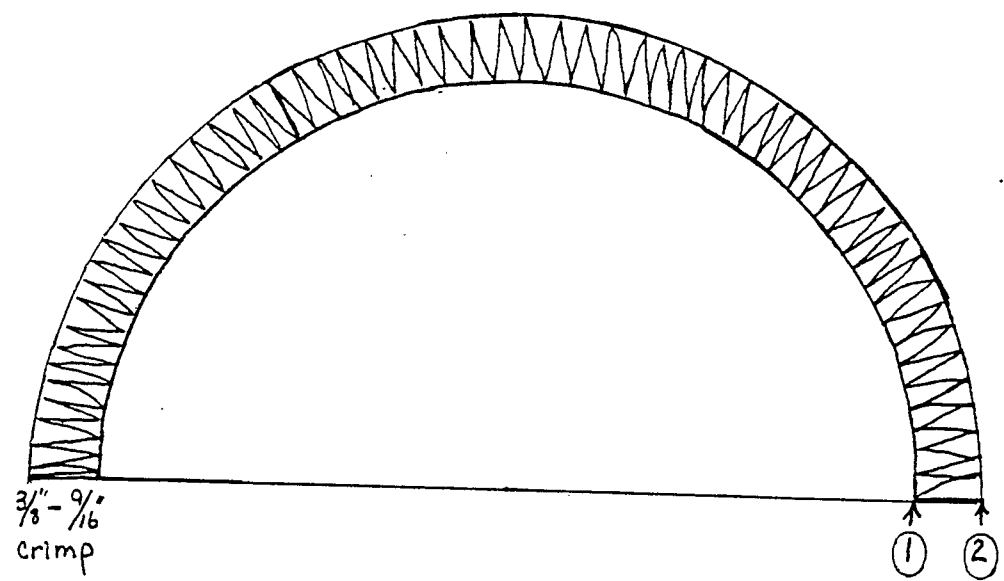


shaded area
cut away
on
Lap

Bevel


①

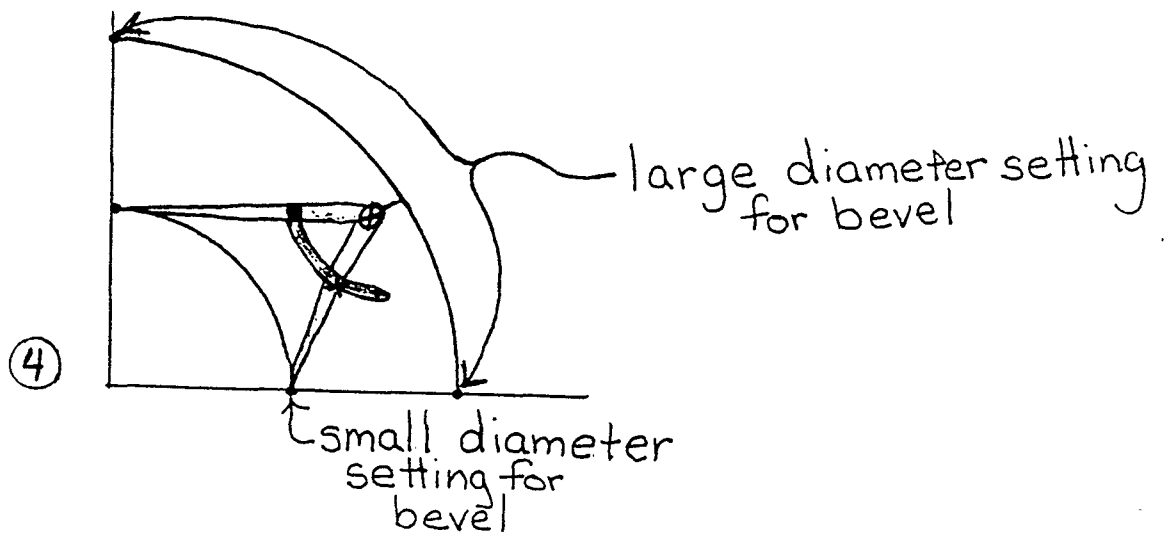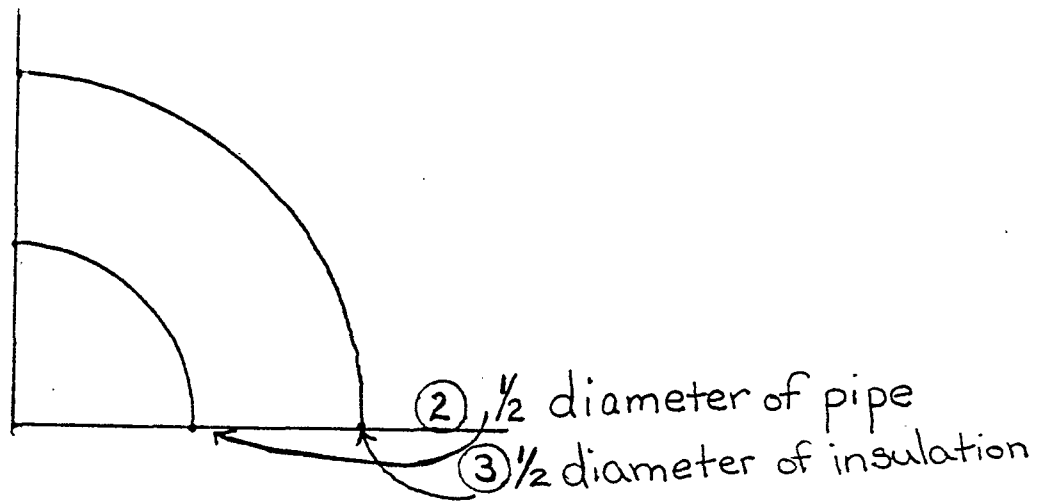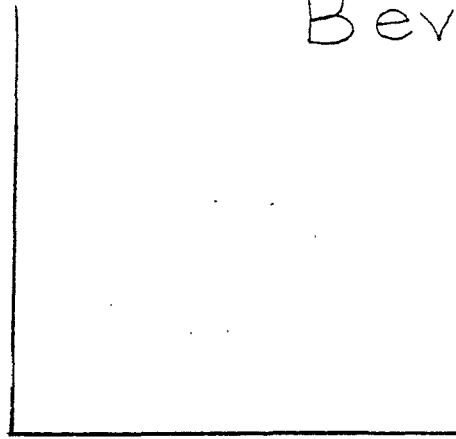


Tee

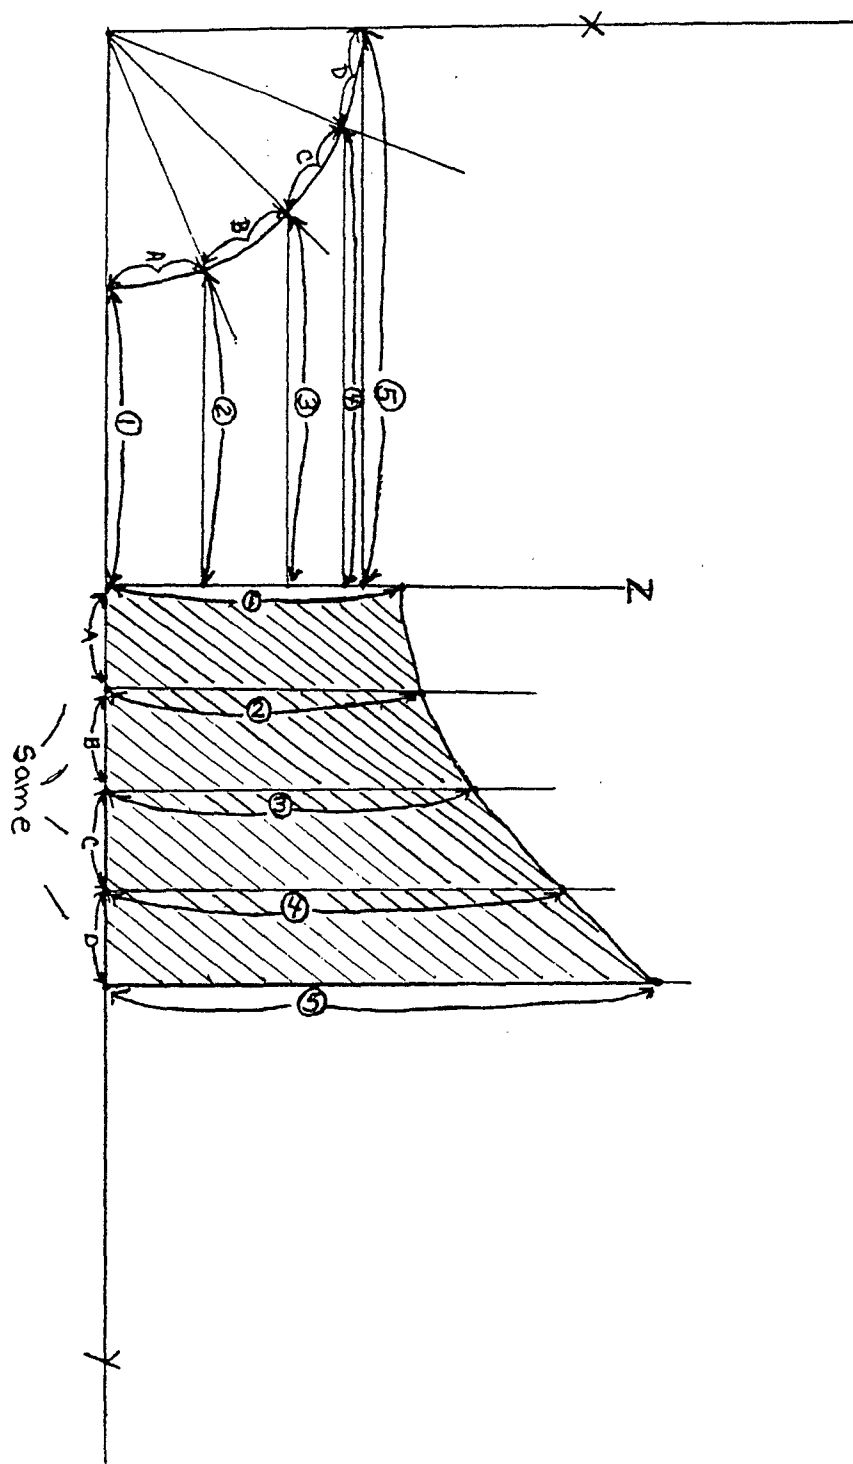

Tee Bonnet

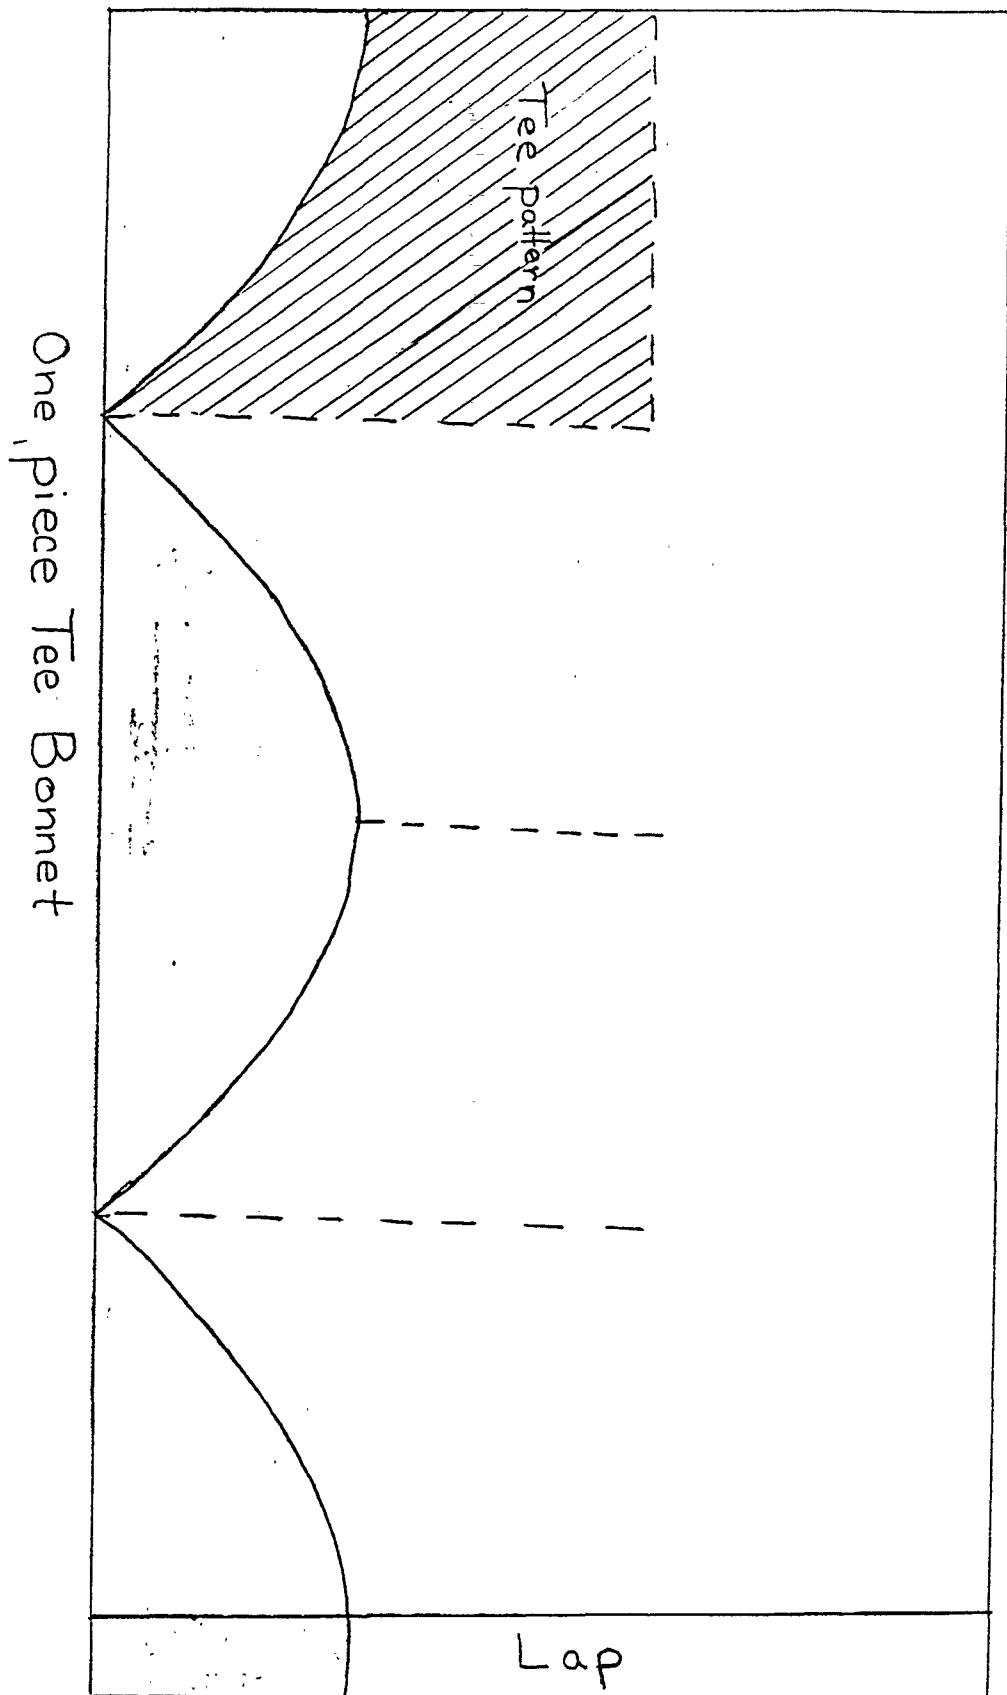


Saddle

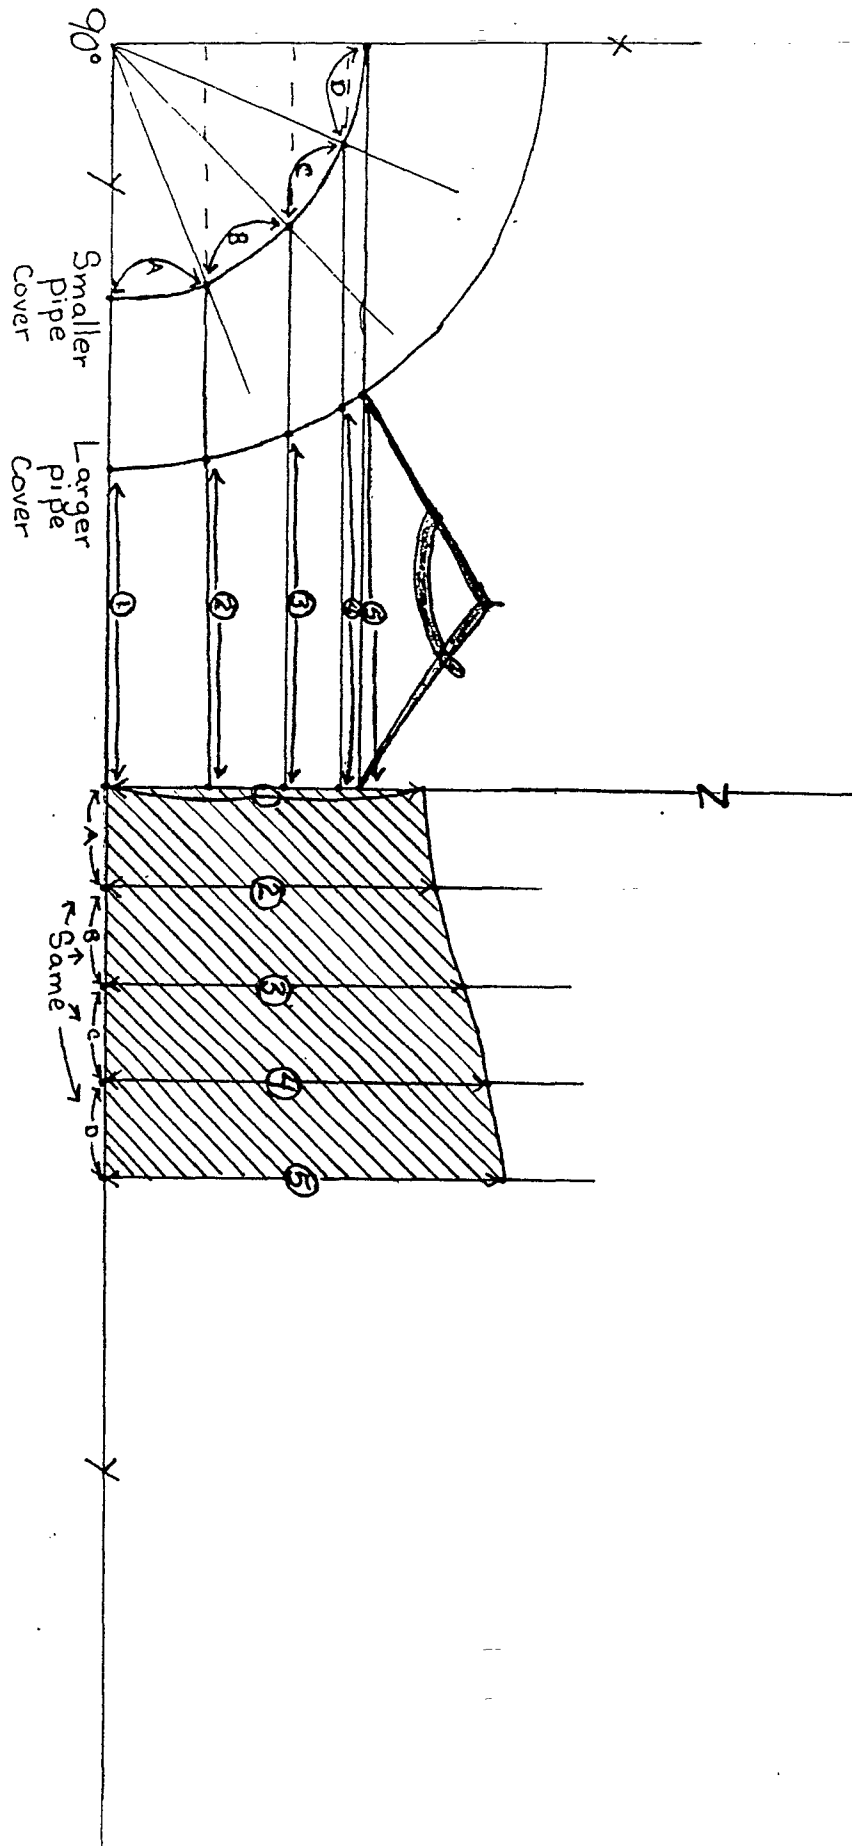

K 014905


Pipe Cover 90°

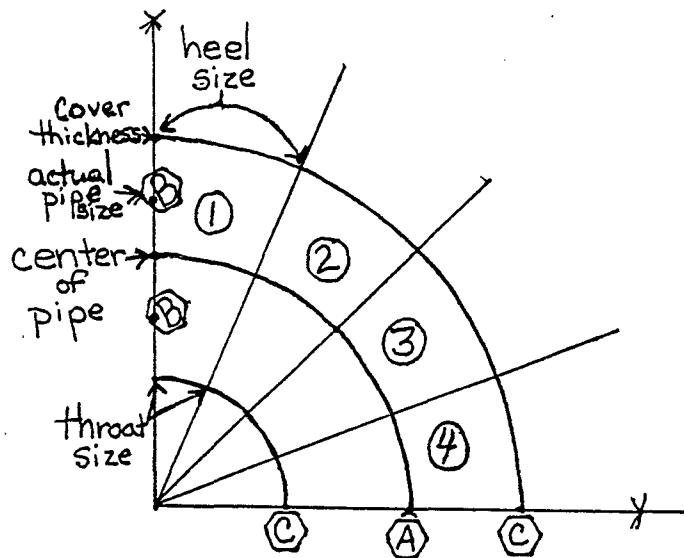

Long radius 90° - 1 1/2 times pipe size.

Short radius 90° - 1 times pipe size.


Metal Gore

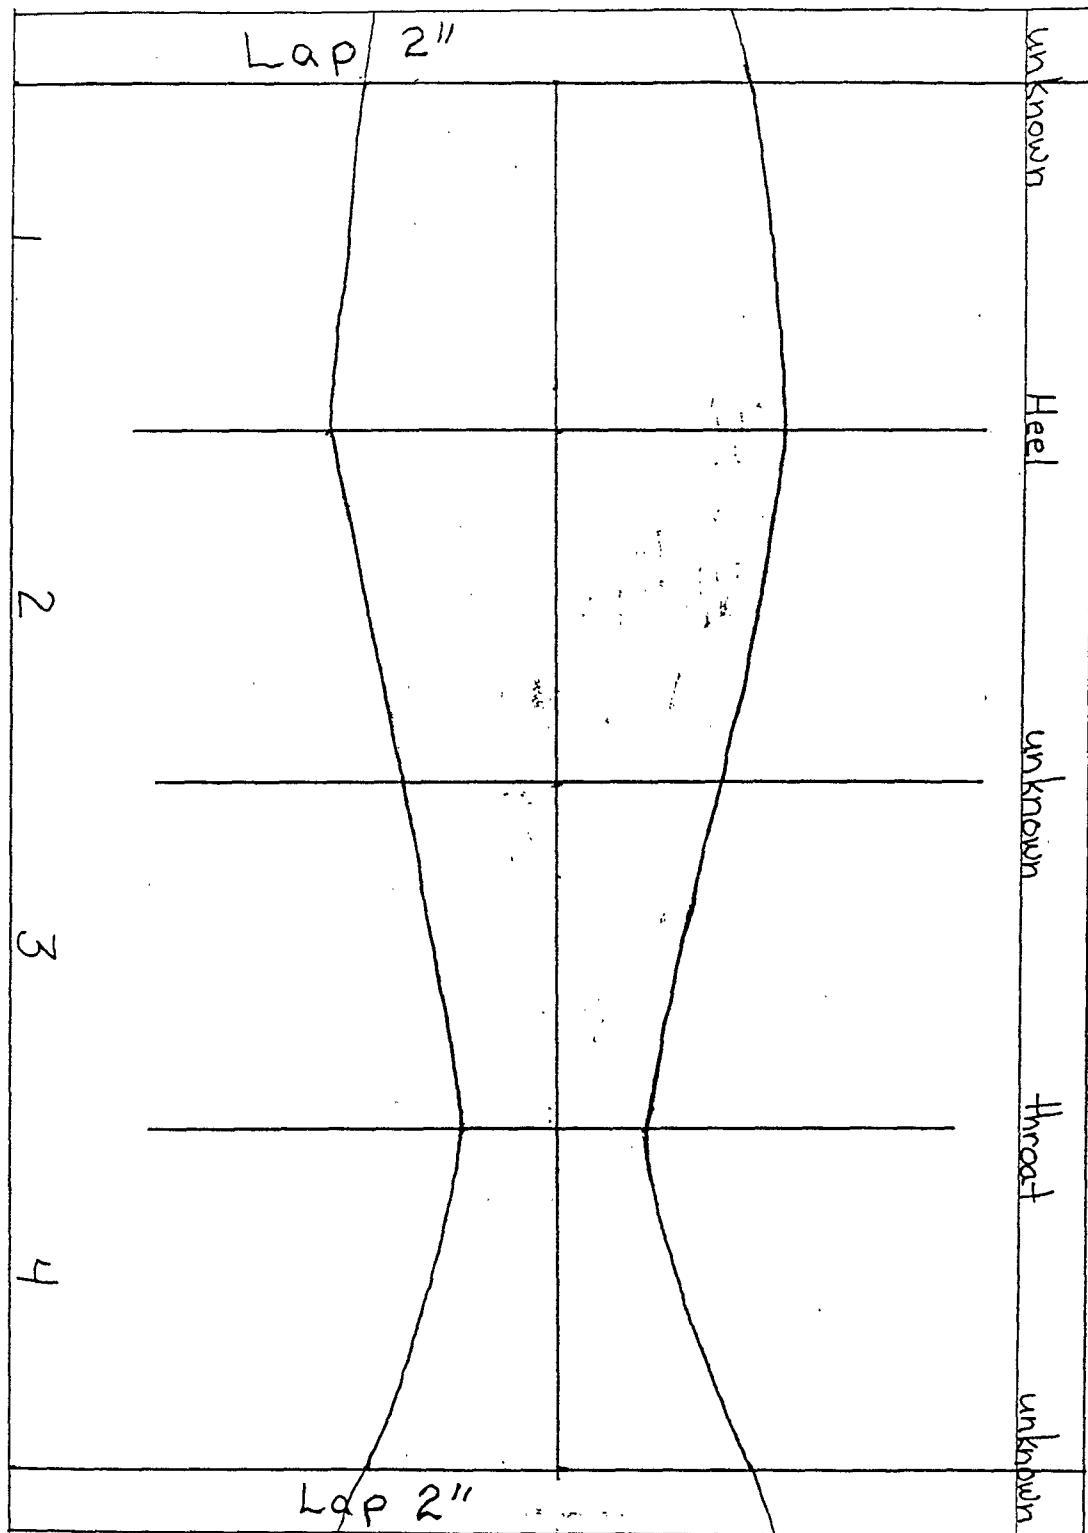

cut for
gore

Funnel

 cut out
to make
funnel

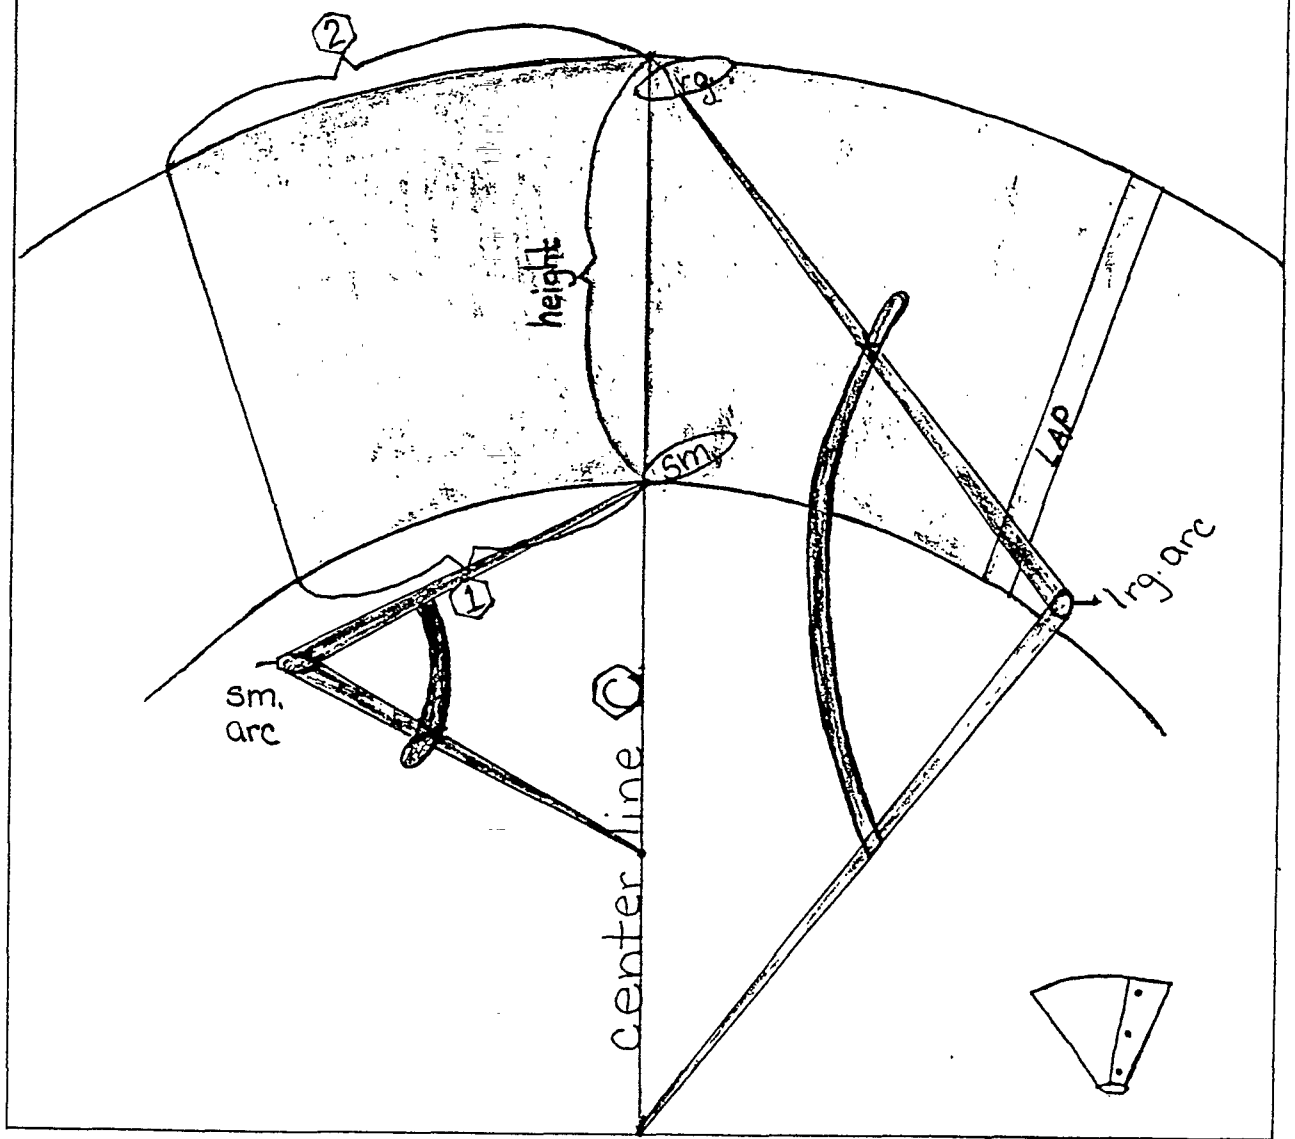

GRAY'S


MEASURE THE HEIGHT AND CIRCUMFERENCE OF OBJECT TO BE COVERED.
YOU WILL HAVE TO ADD 6 INCHES (4" ON SMALL COVER) TO CIRCUMFERENCE.
WITH THESE MEASUREMENTS YOU CAN NOW CUT THE TEMP MAT.

ADD 2" ALL THE WAY AROUND THE TEMP MAT WHEN YOU GO TO CUT THE
GRAY AND WIRE.

MARK ANY OTHER CUTS AND YOUR READY TO PUT YOUR COVER TOGETHER.

NOTE: IF MAKING COVERS THICKER THAN 1" YOU MAY NEED TO GO WITH
CIRCUMFERENCES ON CHART, DO NOT ADD ANYTHING IF YOU USE
THESE DIMENSIONS.

Gray 7U Pattern

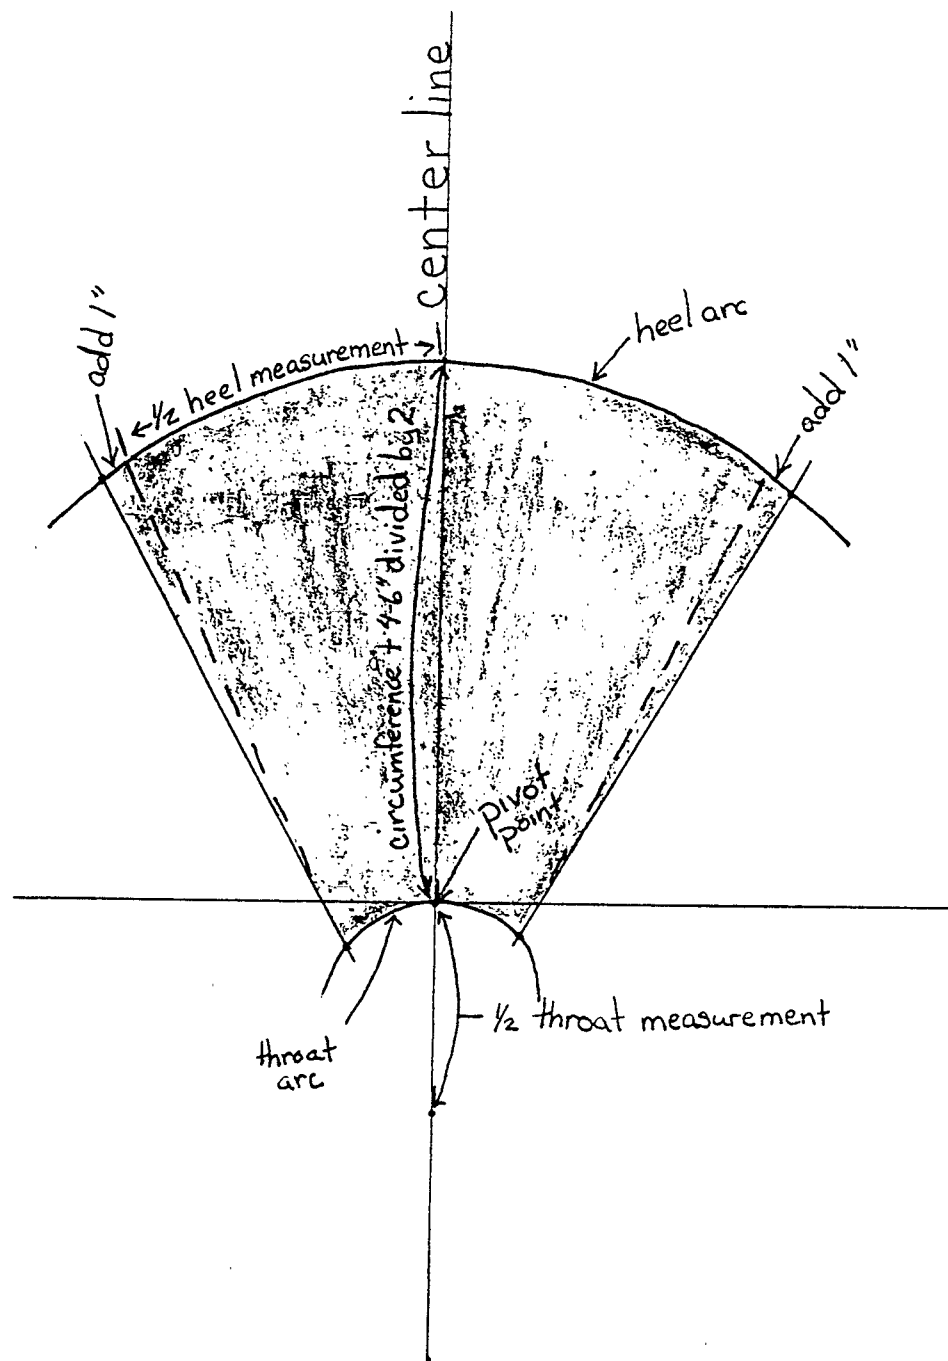

K 014915