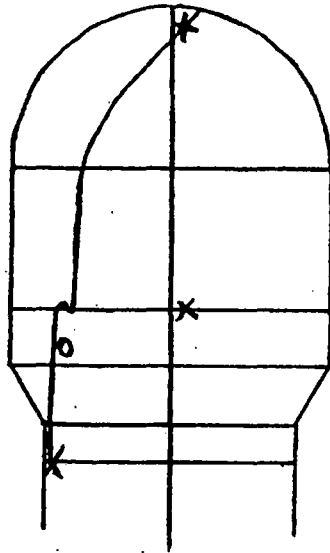
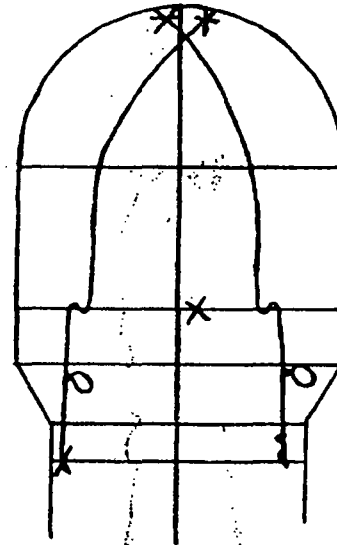


D.L. APPLICATION

- E.2.5 Figure 33A and B shows the proper positioning of lace wires on a fitted ell cover.

FIG. 33A — ONE LACE WIREFIG. 33 B — TWO LACE WIRES

- E.2.6 Lace wires, on fitted ell covers shall be applied and positioned as shown on instruction sheet 2 - Section VII - B - 2.
- E.3. APPLICATION - S.W. ell covers and S.R. ell covers (less than 6" O.D.)
- 3.1 Fitted ell covers shall be applied prior to the line covering adjacent to them.
- 3.1a The line insulation shall be run up to the lower or the near end of the ell until a full section must be cut to complete the line covering to the fitting. See figure 34A.
- 3.1b Figures 34A, B, C & D show the proper sequence of application for a 90° S.R. ell cover (ell less than 6" I.P.S.) and the adjacent line covering.

SEQUENCE OF APPLICATIONFIG. 34A — 90° S.R. ELL.STEP 1

LINE COVERING NOT
RUN UP TO ELL.

