

TABLE 3. PROPERTIES OF MONOFLUOROTRICHLOROMETHANE (F-11)

SAT. TEMP. F	ABS. PRESS. LB PER SQ IN.	VOLUME		ENTHALPY AND ENTROPY TAKEN FROM -40 F							
				Enthalpy		Entropy		25 F Superheat		50 F Superheat	
		Liquid	Vapor	Liquid	Vapor	Liquid	Vapor	Enthalpy	Entropy	Enthalpy	Entropy
0	2.59	0.01020	13.700	7.81	90.4	0.0178	0.1975	93.9	0.2049	97.4	0.2120
5	2.96	0.01024	12.100	8.81	91.2	0.0200	0.1974	94.7	0.2047	97.2	0.2117
10	3.38	0.01028	10.700	9.82	92.0	0.0222	0.1973	95.5	0.2045	99.0	0.2114
15	3.85	0.01032	9.530	10.80	92.8	0.0243	0.1971	96.3	0.2043	99.8	0.2111
20	4.36	0.01036	8.490	11.90	93.7	0.0264	0.1970	97.2	0.2041	100.7	0.2109
25	4.94	0.01040	7.580	12.90	94.5	0.0286	0.1969	98.0	0.2039	101.5	0.2107
30	5.57	0.01045	6.770	13.90	95.3	0.0307	0.1969	98.8	0.2038	102.3	0.2105
35	6.27	0.01049	6.080	14.90	96.1	0.0328	0.1968	99.6	0.2037	103.1	0.2103
40	7.03	0.01053	5.460	16.00	96.8	0.0349	0.1968	100.3	0.2036	103.8	0.2101
45	7.88	0.01057	4.920	17.00	97.6	0.0370	0.1967	101.1	0.2035	104.6	0.2099
50	8.79	0.01062	4.440	18.10	98.4	0.0391	0.1967	101.9	0.2034	105.4	0.2098
55	9.80	0.01066	4.020	19.10	99.2	0.0412	0.1967	102.7	0.2033	106.2	0.2097
60	10.90	0.01071	3.640	20.20	100.0	0.0432	0.1967	103.5	0.2033	107.0	0.2096
65	12.10	0.01076	3.300	21.30	100.8	0.0453	0.1967	104.3	0.2032	107.8	0.2094
70	13.40	0.01081	3.000	22.40	101.5	0.0473	0.1967	105.0	0.2032	108.5	0.2093
75	14.80	0.01086	2.740	23.50	102.2	0.0493	0.1967	105.7	0.2031	109.2	0.2092
80	16.30	0.01091	2.500	24.50	102.9	0.0513	0.1966	106.4	0.2030	109.9	0.2090
85	17.90	0.01096	2.280	25.60	103.6	0.0533	0.1966	107.1	0.2029	110.6	0.2089
90	19.70	0.01101	2.090	26.70	104.4	0.0553	0.1966	107.9	0.2028	111.4	0.2088
95	21.60	0.01106	1.918	27.80	105.1	0.0573	0.1966	108.6	0.2028	112.1	0.2087
100	23.60	0.01111	1.761	28.90	105.7	0.0593	0.1965	109.2	0.2027	112.7	0.2085
105	25.90	0.01116	1.620	30.10	106.4	0.0613	0.1965	109.9	0.2026	113.4	0.2084

Values of v_s and v_d for use in Equation 4 can be obtained directly or by calculation from the tables of properties of refrigerants.

By a reversal of this same procedure the tabular data can be used to determine the state of a mixture leaving an expansion valve. Consider a valve to which saturated liquid at pressure p_s is admitted, and a mixture of saturated liquid and vapor at pressure p_d is discharged. The quality of the material at discharge is then determined by making use of the fact that the expansion process is completely irreversible, is a throttling process, and hence, occurs without change in enthalpy. Thus, the enthalpy of the mixture, h_m , is equal to the enthalpy of the saturated liquid at the entrance state, h_{ls} , and can therefore be read from the table.

Thus,

$$h_{ls} = h_m = h_{vd} - (1 - x)(h_{vd} - h_{ld}) \quad (5)$$

or,

$$x = (h_m - h_{ld}) / (h_{vd} - h_{ld}) \quad (6)$$

where

h_{ls} = enthalpy of saturated liquid at entrance to expansion valve.

h_m = enthalpy of mixture.

h_{vd} = enthalpy of saturated vapor at discharge.

h_{ld} = enthalpy of liquid at discharge.

x = proportion of liquid in the mixture, decimal.

Vapor Compression Refrigeration Cycle

Simple Cycle. The refrigerant cycle is the series of state changes (which occur in the conditioning processes) needed to restore the refrigerant to a condition in which it will possess the ability to extract heat from the space to be cooled. For all compression-type systems the cycle consists of four processes: heat gain in the evaporator; pressure rise in the compressor;

heat loss in the condenser; pressure loss in the expansion valve. The compression process is accomplished at the expense of energy added to the compressor in the form of shaft work, and the expansion process could be carried out, if the economics of the system would permit, in an expanding engine with consequent release of energy as shaft work. In ordinary systems, however, the additional first cost and maintenance costs of an expanding engine so greatly exceed the advantage resulting from the work realized, that such engines are not used, and the pressure reduction is allowed to occur irreversibly in an expansion valve. Basically, then, a refrigeration cycle consists of two heat transfer processes and two pressure change processes, no work entering into the heat transfer processes and—in the simple cycle—no heat transfer occurring during the pressure-change processes.

The most common and least complicated type of refrigeration cycle is called the simple saturation cycle, and is shown diagrammatically in Fig. 3 and plotted upon pressure-enthalpy coordinates in Fig. 4. For this system,

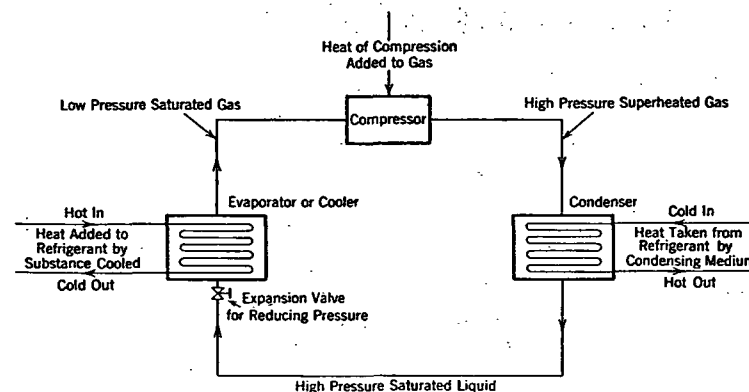


FIG. 3. MECHANICAL REFRIGERATION SYSTEM

saturated vapor flows without gain or loss of heat from the evaporator to the suction of the compressor. During passage through the compressor the energy added as shaft work goes entirely to increase the enthalpy of the refrigerant, and the compression process, which is assumed to occur irreversibly and without external heat transfer, is characterized by constant entropy. Thus, the state of the superheated vapor leaving the compressor can be determined from the tables of thermodynamic properties by noting the discharge pressure and fixing, also, the entropy of the saturated vapor at entrance to the compressor.

Superheated vapor from the compressor flows to the condenser where de-superheating and condensation take place. From the condenser the refrigerant flows to the expansion valve, undergoes a constant-enthalpy pressure reduction, and returns to the evaporator where it again removes a quantity of undesired heat. When the evaporator is arranged to permit direct cooling of room air by the refrigerant, the system is said to be of the *direct expansion* type, while a system in which the evaporating refrigerant cools water or brine, which in turn cools the air, is said to be *indirect*. Although many differences exist between most actual systems and that of the simple saturation cycle, this latter is, nonetheless, of great value in that it provides an extremely simple method of rapidly achieving an approximate