

FRONT AXLE

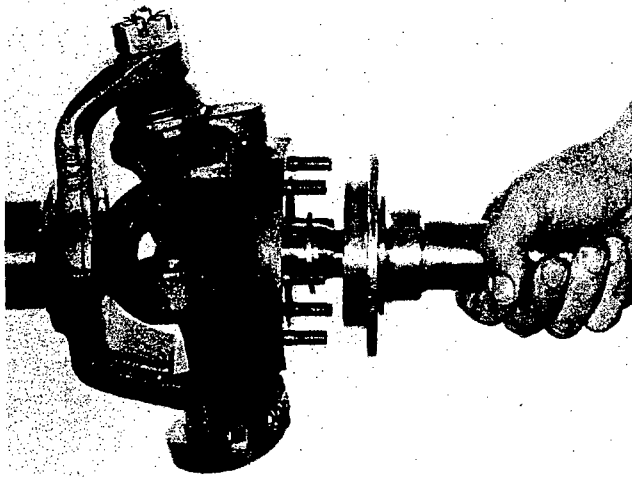


Figure 38

1009-38

Assemble new bronze spacer and spindle.

NOTE

Be sure chamfer end of spacer is directed toward the seal slinger of the axle shaft joint.

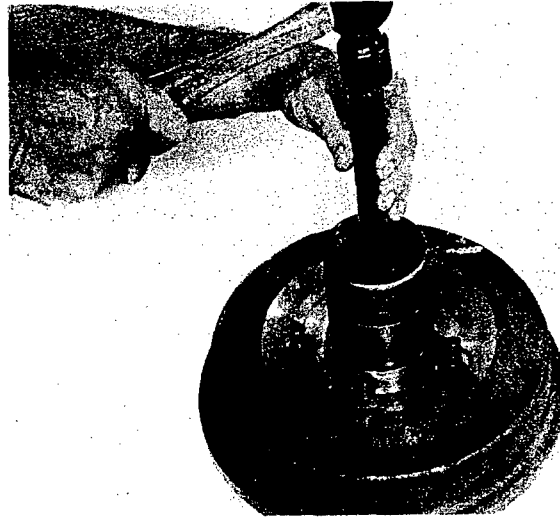


Figure 40

1009-40

Assemble new outer wheel bearing cup.

Tools—#D-140 Installer, #C-4171 Handle.

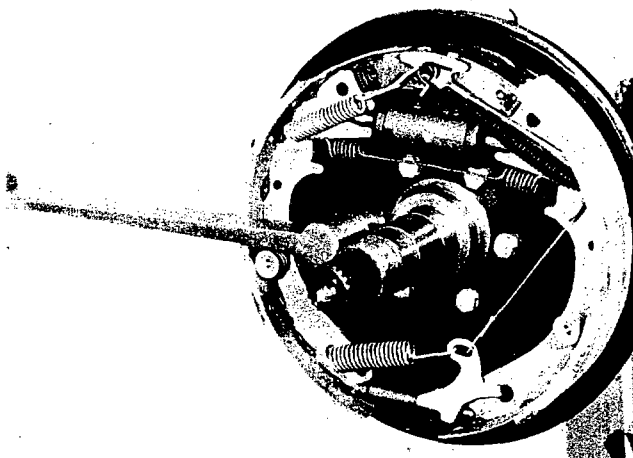


Figure 39

1009-39

Assemble brake backing plate assembly. Assemble new nuts. Torque nuts to 25-30 lbs. ft.

Tool—#C-524-A Torque wrench.

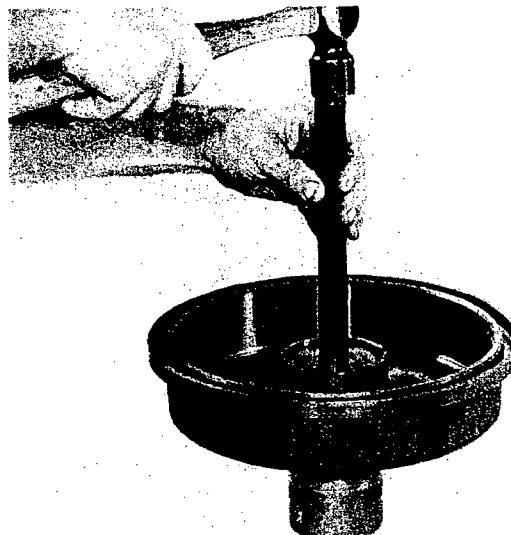


Figure 41

1009-41

Assemble new inner wheel bearing cup.

Tools—#D-153 Installer, #C-4171 Handle.