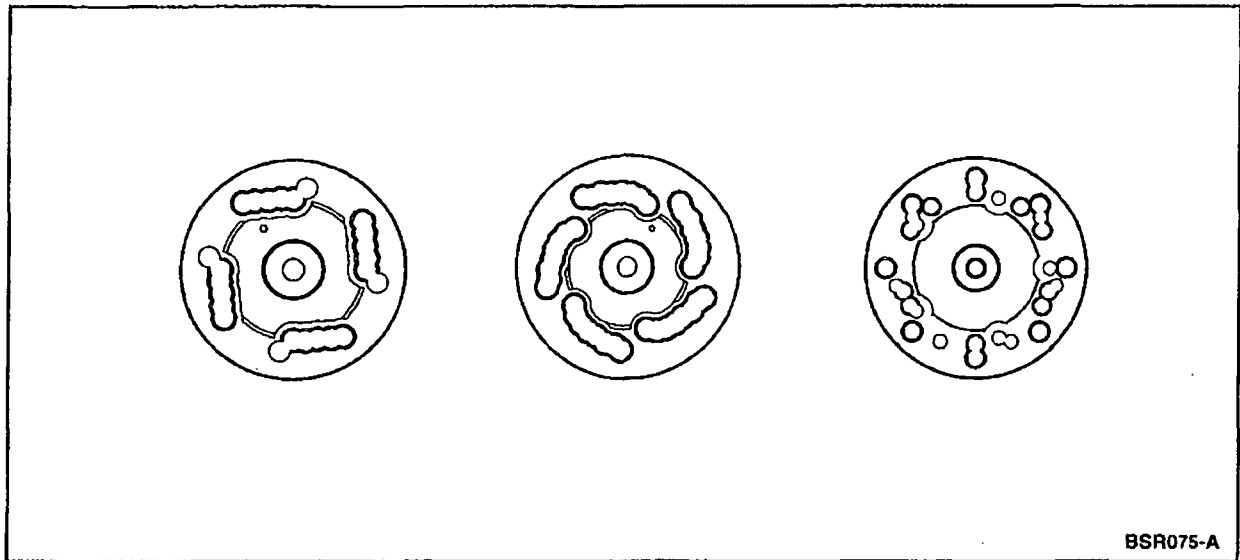


**Brake Lathe Adapters**

2. Choose the appropriate adapter for the vehicle you are working on. Hold the adapter next to the lug pattern and rotate until one of the pre-drilled patterns matches the vehicle.
 - A spacer may be needed.
3. Tighten the Rotunda supplied lug nuts using hand tools to 34-41 Nm (25-30 lb-ft). DO NOT use an impact wrench.
 - Do not use the vehicle's lug nuts to attach the adapter to the vehicle. The adapter may damage the vehicle's lug nuts which in turn may damage the wheel and cause customer dissatisfaction.