



FIG. 4. EQUIVALENT LENGTH OF FITTINGS.

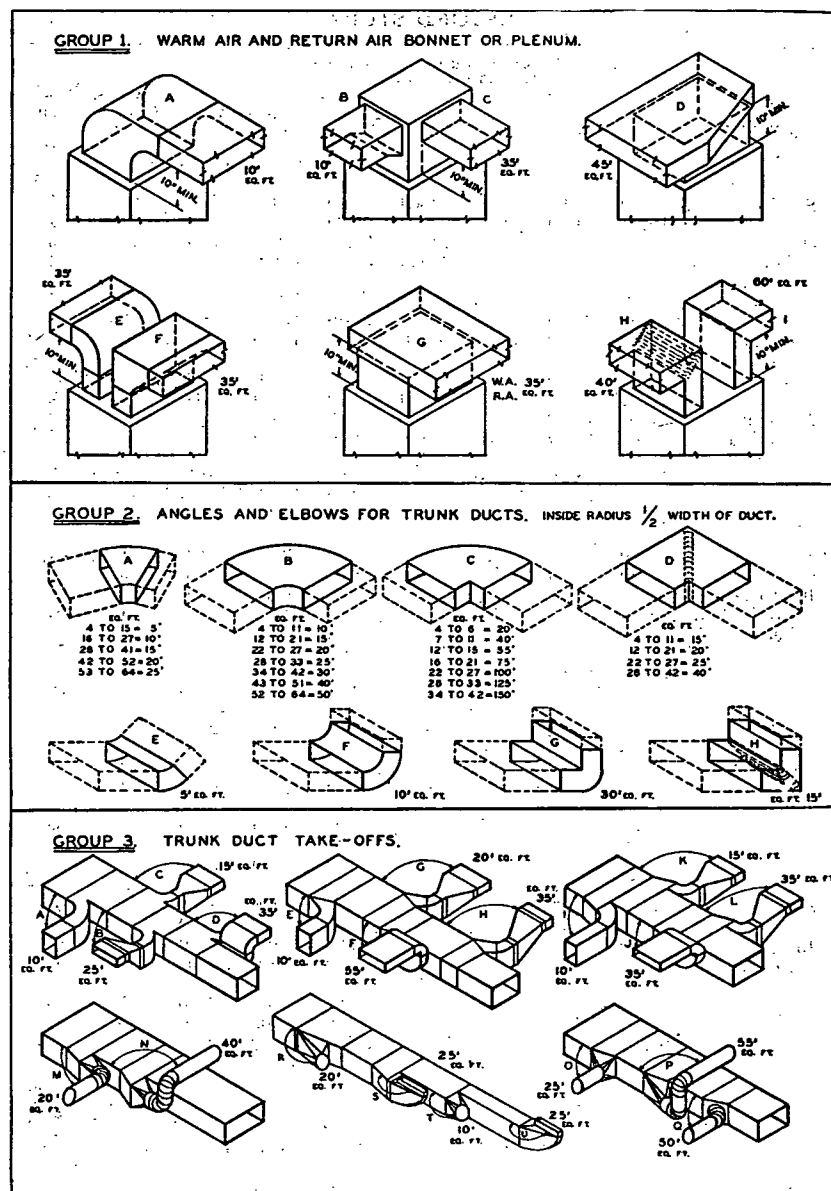

ture can be expected, in order to secure frequent operation of fans, drafts, and burners. The thermostat location should not be on an outside wall, in a bedroom, bathroom, or sun room, or in a location where it will be affected by direct radiant heat from

FIG. 4. EQUIVALENT LENGTH OF FITTINGS (Continued).

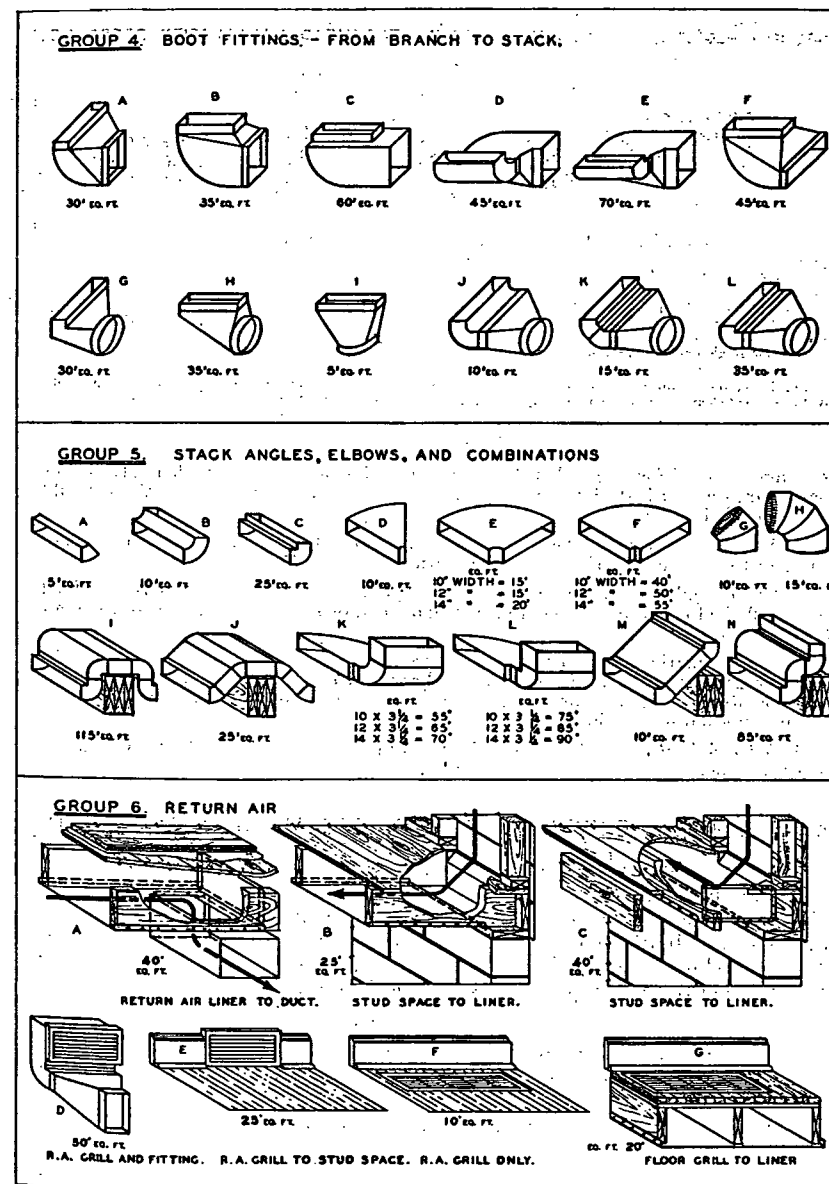

the sun or from a fireplace, or by direct heat from any warm air duct, register or chimney.

2. A fan switch control to start blower operations at air temperatures between 110 and 130 F, and to stop the blower at about 15 deg below the cut-in point. The lower